

 


Russell Hobbs

Bladeless Fan

Operating Manual

RHBLDLC25 (B)

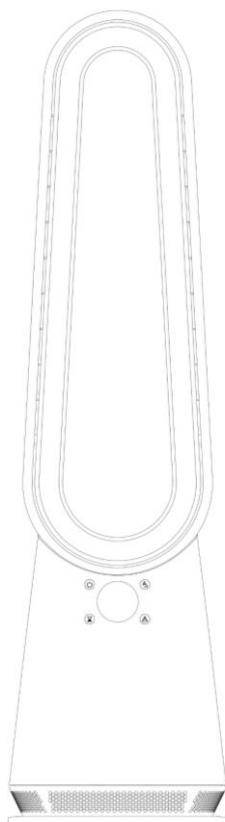

**REGISTER TODAY FOR
YOUR FREE
ADDITIONAL YEAR
GUARANTEE**

GUARANTEE

At Russell Hobbs, we take all our customer feedback seriously.

Feel free to contact our Customer Services Team who will be more than happy to assist you.

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.
- This does not affect your statutory rights.

Region	Contact	Website
UK & Northern Ireland	0345 209 7461	mda.russellhobbs.com
Ireland	1 800 938982	ie.mda.russellhobbs.com
Rest of Europe	europe@productcaregroup.com	de.mda.russellhobbs.com fr.mda.russellhobbs.com es.mda.russellhobbs.com it.mda.russellhobbs.com nl.mda.russellhobbs.com

Note your serial number below for future reference



Image for illustration purposes only



 
IMPORTANT SAFETY INSTRUCTIONS

- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.
- Do not use with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This product is intended for household use only.
- Do not use outdoors.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.
- Do not operate this appliance for anything other than its intended use.
- Do not immerse the whole unit in water or other liquids for cleaning.
- Unplug from outlet when not in use. Do not leave unattended while plugged in.
- Do not use if it has been dropped, damaged, left outdoors or submerged in water.


IMPORTANT SAFETY INSTRUCTIONS

- Keep the appliance away from water and do not allow it to get wet. If the unit is wet, do not plug the unit into wall socket or turn the unit on.
- Do not handle the appliance with wet hands.
- Do not pull or carry by the cord, use the cord as a handle, close doors on the cord, pull the cord around sharp corners or edges, or expose the cord to heated surfaces. Do not unplug by pulling on the cord.
- To protect against electrical shock do not immerse cord, plug, or appliance in water or other liquids.
- Unplug from the mains outlet when not in use, before putting on and taking off parts, and before cleaning.
- Only use the unit when fully assembled.
- Never place your fingers or other objects into any part of the appliance. Be aware that loose clothing or hair may become trapped in the appliance if improperly used.
- Before use, ensure that all the air vents of the appliance are clear and that there is no restriction of air flow.
- Caution: Appliance may disturb ashes in an open fire. Always avoid directing the appliance toward naked flames.
- Do not remove the rotor guard once assembled.
- **WARNING: Only the power adaptor supplied with the unit can be used with the appliance.**

PARTS

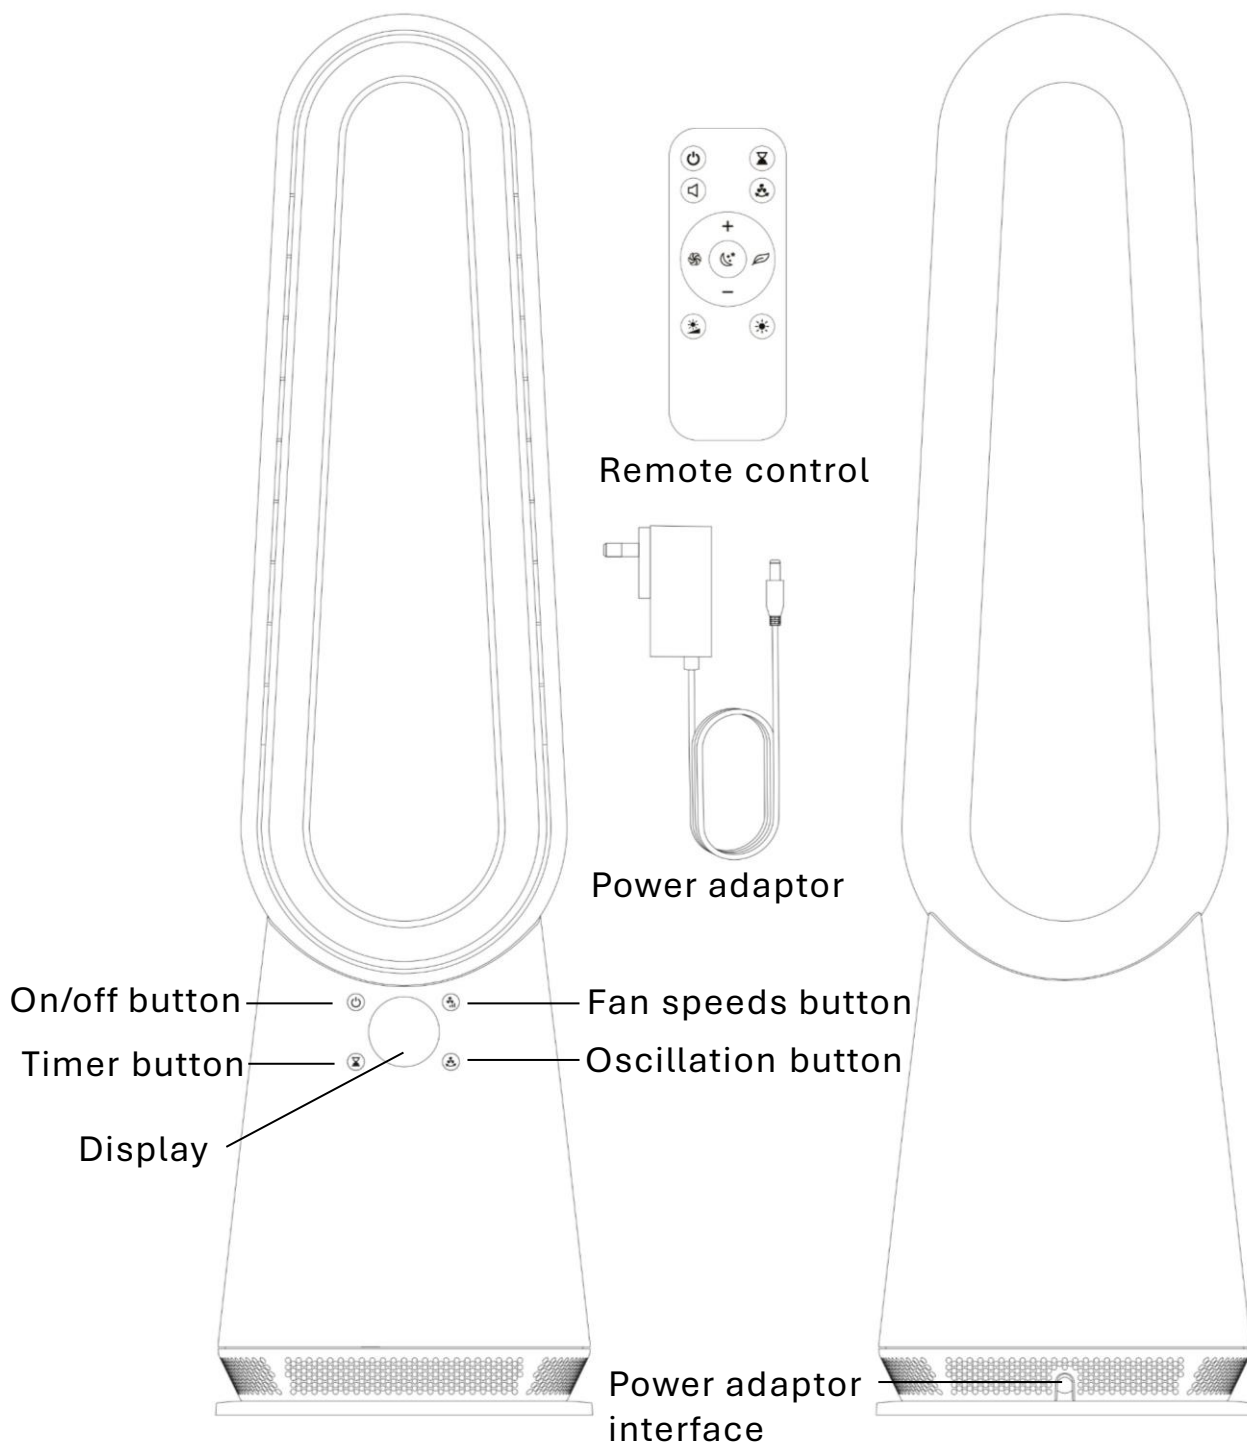

 The remote control is magnetic and can be stored in the location shown in the image next to this text.

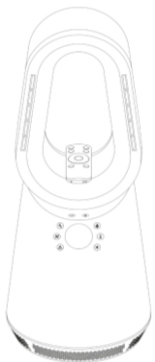


PRODUCT SETUP

Remove all packaging materials and all transport bracing from the device.

For safe and trouble-free running of the device, choose the installation location which meets the following requirements:

 - The floor should be firm, flat and horizontal.
- Keep the following minimum clearances from the device housing:
 - 30 cm from its lateral side
 - 30 cm above
 - 30 cm from its rear side
 - 1 m from its front side.
- Do not place the device in a hot and wet or very humid environment or near combustible material.
- The socket should be easily accessible so that the mains connection cable can be easily disconnected, if necessary.
- Temperature range: from 0 to + 40 °C .
- Humidity (no condensation): 5 - 75%.

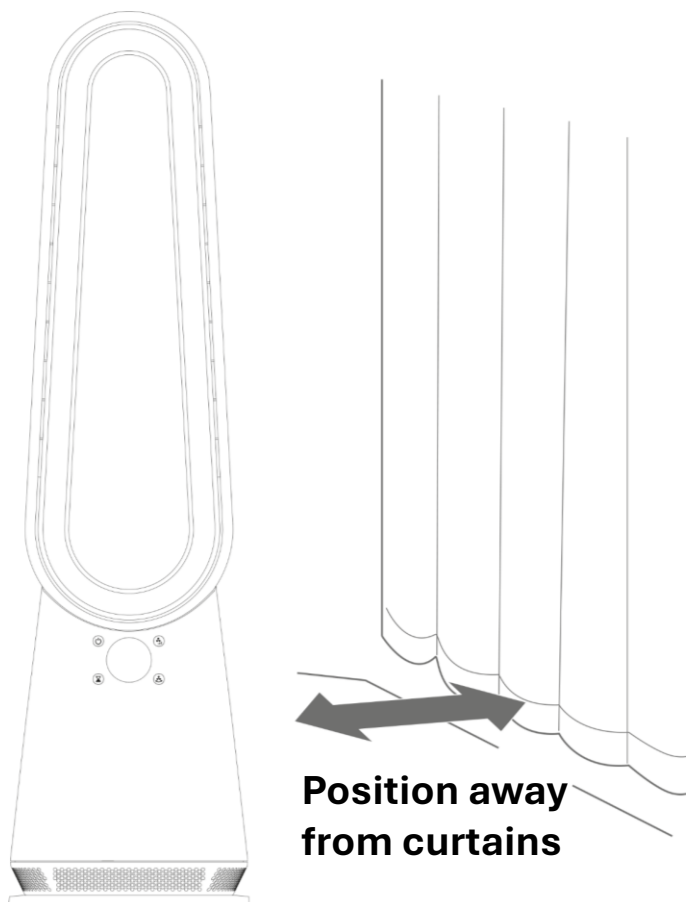

CONTROL AND DISPLAY



Power

Press to turn the appliance on, it will show speed 3. Press again to turn off the appliance.



Fan Speed

To change the fan speed, press the button repeatedly until the desired speed (1-9) is shown on the display.



Timer

To set the timer, press the timer button and the display will show 1h, this indicates that the unit is set to turn on in 1hr press it again and it will show 2h. Continue to press the timer button until the required time is displayed. The time range is 1 to 8 hours. Oh indicates that no timer is set. A small dot will flash at the bottom right of the display indicating that the timer is set. After the timer function is set, other functions can be used normally. When the device is turned off, the timer will be cancelled.

When the appliance is in standby mode you can schedule to switch on the fan in 1 to 8 hours. A small dot will flash at the bottom right of the display indicating that the timer is set.



Oscillation

Press once to turn on the Oscillation function, the oscillation angle is 80°. Press again to turn off Oscillation function.

Note:

 
- **The fan switches off automatically if it has been in continuous operation for 12 hours.**
- **The buttons have a signal tone feedback, this can be muted by using the remote control.**



REMOTE CONTROL

NOTE:

- The remote should be used within 5m of the front face of the fan.
- Remove the insulation sheet before use.

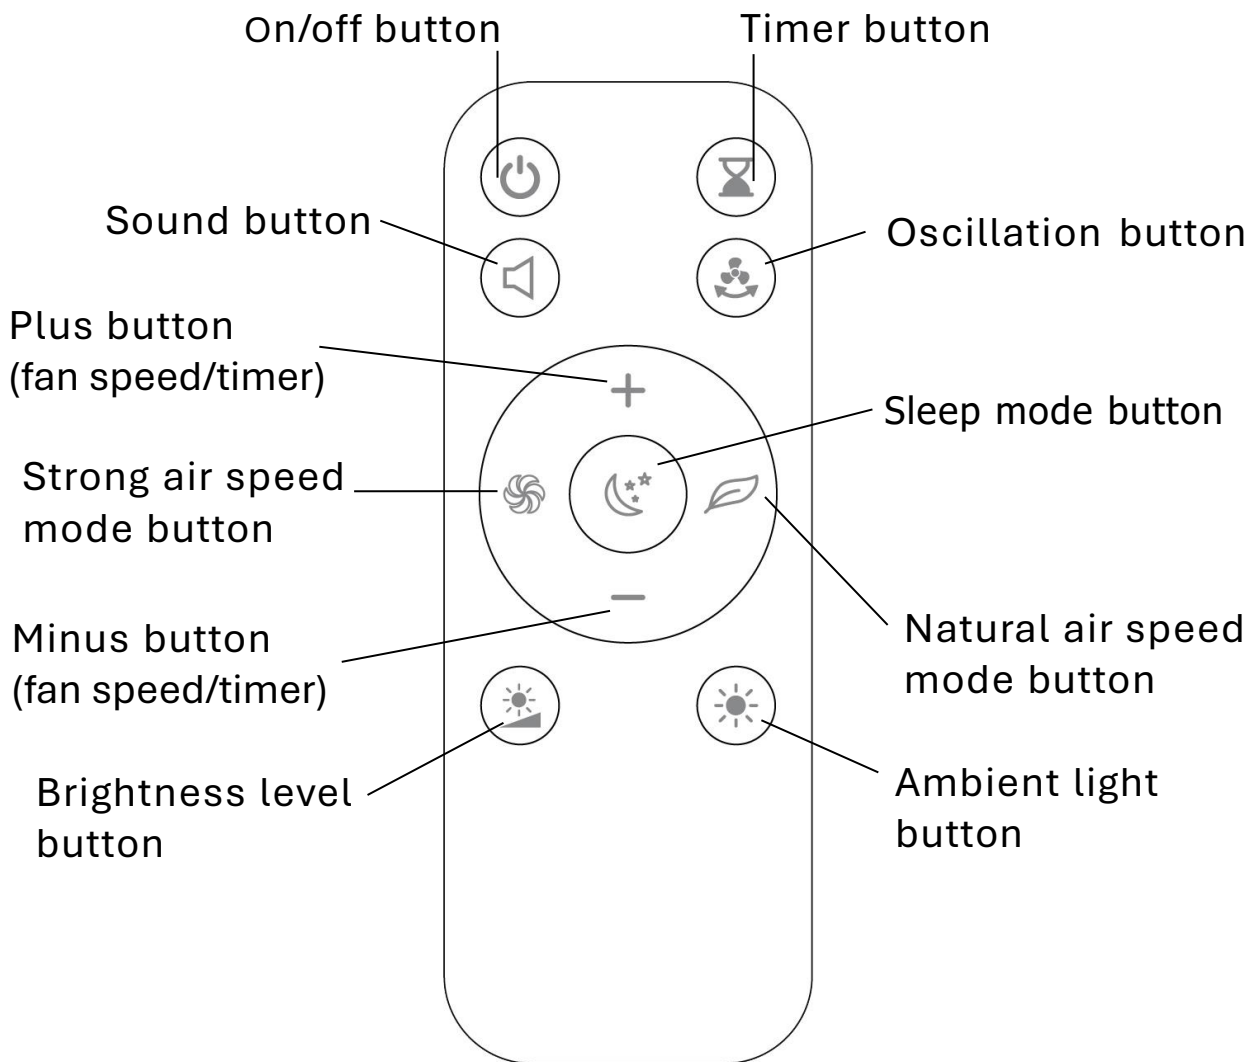

Press this to turn on the fan, it will start in Speed 3.



Press this button to turn on and off the button signal tones.



To set the timer, press the timer button and the display will show 1h, this indicates that the unit is set to turn on in 1hr press it again and it will show 2h. Continue to press the timer button until the required time is displayed. The time range is 1 to 8 hours. Oh indicates that no timer is set. A small dot will flash at the bottom right of the display indicating that the timer is set. After the timer function is set, other functions can be used normally. When the device is turned off, the timer will be cancelled.

REMOTE CONTROL

When the appliance is in standby mode you can schedule to switch on the fan in 1 to 8 hours. A small dot will flash at the bottom right of the display indicating that the timer is set.



Press once to turn on Oscillation function, the oscillation angle is 80°. Press again to turn off Oscillation function.



Press this button to increase the fan speed or the time when setting the timer.



Press this button to set the strong air speed mode, "HH " will be shown on the display and the air speed will be set to highest speed. Press the button again to exit.



Press this button to set the sleep mode, " LL" the lowest air speed and noise level. Press the button again to exit



 
Press this button to set the natural air speed mode, "- - " the air speed will alternate between 3-5-7. Press the button again to exit.




Press this button to decrease the fan speed or the time when setting the timer.



Press this button to change the brightness of the ambient light.



 Press the ambient light button to start the atmospheric lighting. Keep pressing the button to run through the colours (white, blue, green, red, purple, gradient colour). To end the atmospheric light function, press the ambience button again after the colour changes to gradient colour.

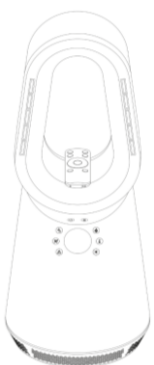


The remote control is magnetic and can be stored in the location shown in the image next to this text.

REMOTE CONTROL

To replace the battery, follow the below instructions:

 1. Hold down the buckle to open the slot
2. Load the battery, pay attention to the direction of the battery
3. Insert the slot back into the remote control

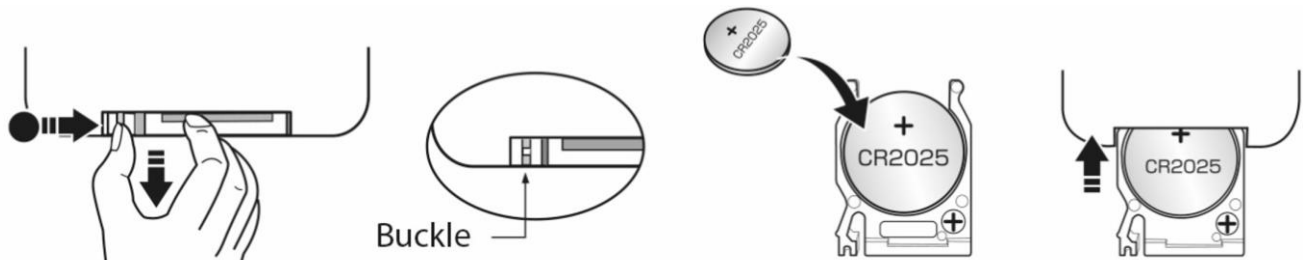


NOTE:

Do not charge this battery, if it is not used for a long time, please take out the battery. Keep out of reach of children and if swallowed, seek medical attention.

Possible remote-control interference:

- This fan may respond to the remote control of other devices.
- If you use the remote control of this fan, other devices may respond.

 This is due to the overlapping frequencies of the remote control. There is no quality problem in the product itself. To avoid misuse, keep the remote control away from other electrical devices during operation.

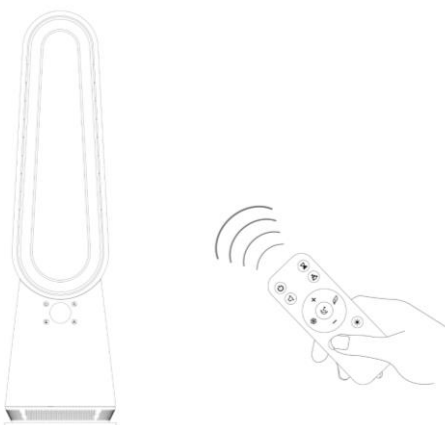

The remote control should be directed towards the display to maximize the remote-control signal.

CLEANING AND MAINTENANCE

The fan requires little maintenance. Do not try to fix it by yourself. Refer to qualified service personnel if a service is needed.

- Ensure the unit is unplugged before assembly, and before cleaning.
- During maintenance, please do not soak or splash water on the fan, it may cause the machine to get wet and damage it.
- Please do not use gasoline, alcohol, bleach or metal objects to wipe the fan surface, which may cause the fan surface to discolour and deteriorate.
- To ensure adequate air circulation to the motor, keep vents at the rear free of dust. Do not disassemble the fan to remove dust.
- Do not use any abrasive detergent or solvents to avoid scratching the surface.
- Do not allow water or any other liquid into the motor housing or interior parts.

Object surface

- Please gently wipe the fan surface with a soft dry cloth.
- If the surface of the fan is dirty, it can be diluted with neutral detergent and then wiped with a soft cloth.
- On the fan surface, wipe it clean and then wipe it with a soft dry cloth.

Air Inlet & Outlet

- Please use a soft brush or a vacuum cleaner to clean the dust at the air inlet and outlet.
- Too much dust may affect the use of the fan. Please clean it in time when there is less dust.

Storage

- Avoid places with vibration and electrical appliances with cooling/heating function.
- Avoid placing it in direct sunlight, high temperature and humidity.
- Keep it out of the reach of children.

PROBLEM SOLVING

The fan doesn't switch on	• Check the fan is plugged in. • Check the socket is switched on. • Check another appliance in the socket. • Unplug and check for any obvious signs of damage to cord or plug. • If recently used, allow to cool for 1 hour then try again.
The fan is rattling	• Check there is nothing in contact with the fan. • Check the fan is on a level surface.
The remote will not work	• The batteries may need replacing. • The remote is being used more than 5m away from the product.
Fan is making a grinding sound	• Immediately switch off and contact Customer Services.
The air is dusty	• Ensure fan is unplugged and set to OFF. • Using a vacuum and crevice brush, gently vacuum the front grille.

IMPORTANT!

KEEP GRILLE CLEAN

Vacuum the grille at least once every 3 months.

The fan may require more frequent vacuuming if in a dusty environment.

Ensure that the fan is unplugged before cleaning.

3

MONTHS

PROBLEM SOLVING

Error Codes


CODE	PROBLEM	POSSIBLE REASON
E1	Low Voltage Protection	• Induced by voltage too low • 220V fan connected to 110V voltage
E2	High Voltage Protection	• Induced by voltage too high
E3	Blocked Rotor	• Poor connection between rotor terminal block and electronic board • Circuit driver, power component (MOSFET) or other components damaged by outer forces, Electronic board parameter error
E4	Hardware Overcurrent	• Short circuit of fan rotor or inner rotor • Driver error or power component (MOSFET) error
E5	Software Overcurrent	Current sampling circuit error
E6	Motor Malfunction	• Rotor disconnection • Poor connection between rotor and terminal block • Driving error of driver
E7	Communication Error	• Poor communication between display board and mother board, poor cable connection, PCB malfunction



Russell Hobbs

Made by Product Care Trading Limited under license from Spectrum Brands (UK) Limited. Product Care Trading Ltd, Unit 1, Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom

 Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland. Russell Hobbs is the registered trademark of Spectrum Brands (UK) Ltd.

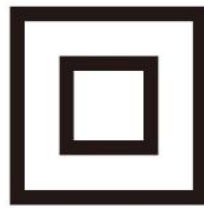

The 'wheellie bin' symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.