 


LYRA SIDEBOARD

Assembly Instructions

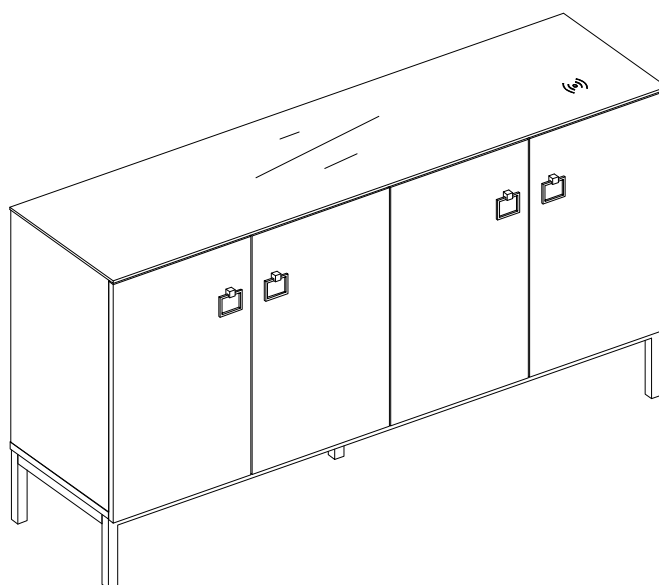

NOTE

We highly recommend watching the quick help & set up guide video first before assembling. Simply place a smart phone camera over the QR code for a quick link to the video.

 





 
 
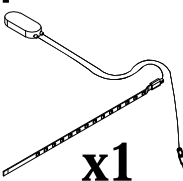 
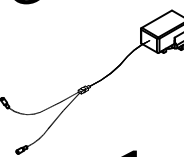 
 

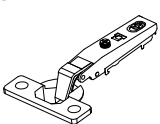 
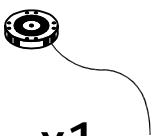 








To watch assembly video :
www.frankolsenfurniture.co.uk

 Download the Frank Olsen Smart app from :
Google Play store or Apple store



HARDWARE

 


A M3*12  x2	B M3.5*14  x32	C M6*15  x18	D M4*25  x4	E  x4	F 1.3m  x1	G  x1
H  x2	I  x2	J  x4	K  x1	L  x8	M  x2	N  x4
O M4  x1	P  x4	Q  x8	R M3.5*18  x2	S 12*5  x4		


Tools Required-Not Supplied



 Pre-fitted

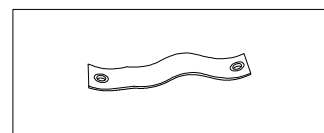

PARTS

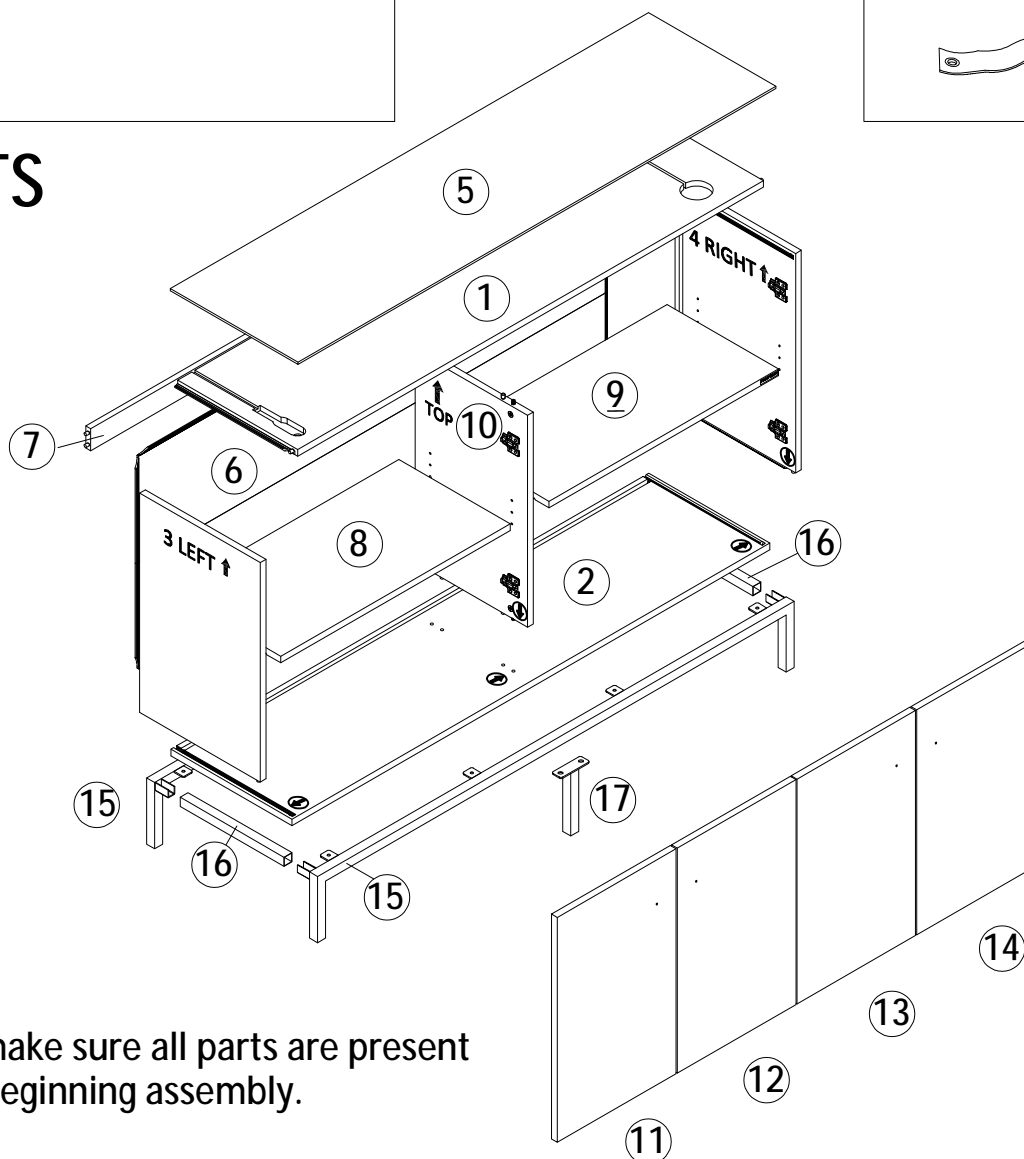 


Please make sure all parts are present before beginning assembly.

GUIDE

Assembly Instructions

 Ensure dowel is aligned with hole before pushing panel into groove


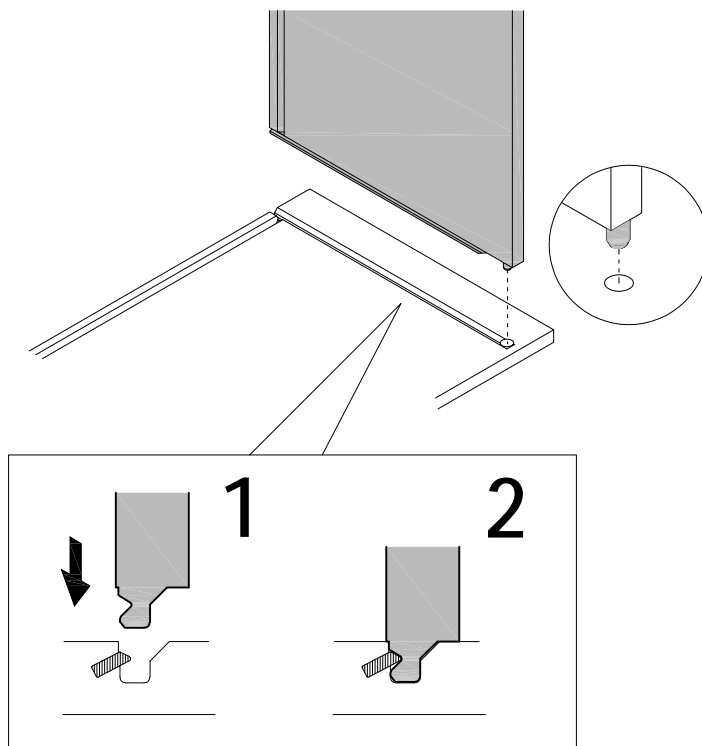


Disassembly Instructions

Unlock the cam fixing (top and bottom) of panel 10

Use Disassemble rod 'M' and gently slide in to the small triangle as shown below marked 'KEY'

  We highly recommend watching the quick help video before disassembling. Simply place a phone camera over the QR code below for a quick link to the video

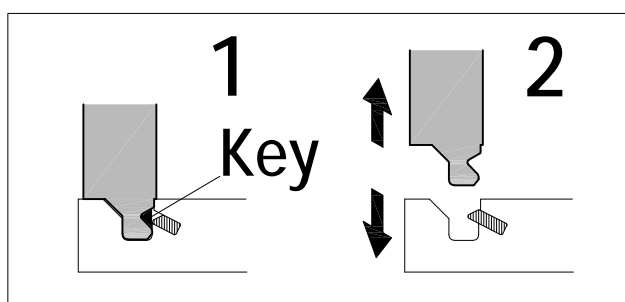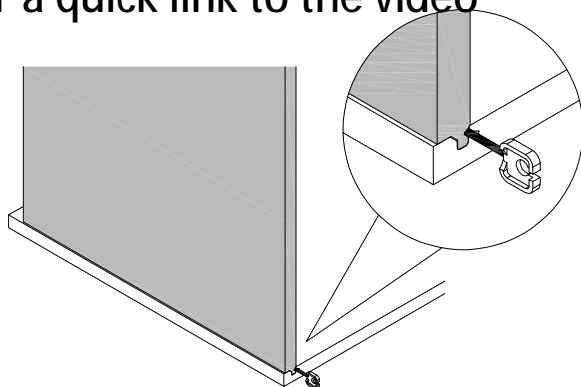

1

NOTE : Panels should sit comfortably in position, do not force them, if they do not fit comfortably, they are likely to be UPSIDE down

Fitting Cam & Dowel Panel 10

 
ENSURE Panel 10 has the pre-fitted hinge brackets both sides to the panel to allow the door to fit correctly.

IMPORTANT

Please make sure panel 10 is positioned the correct way up. Panels to sit arrow to arrow.




Please use QR code to view a short video on how to fix cam & dowel.

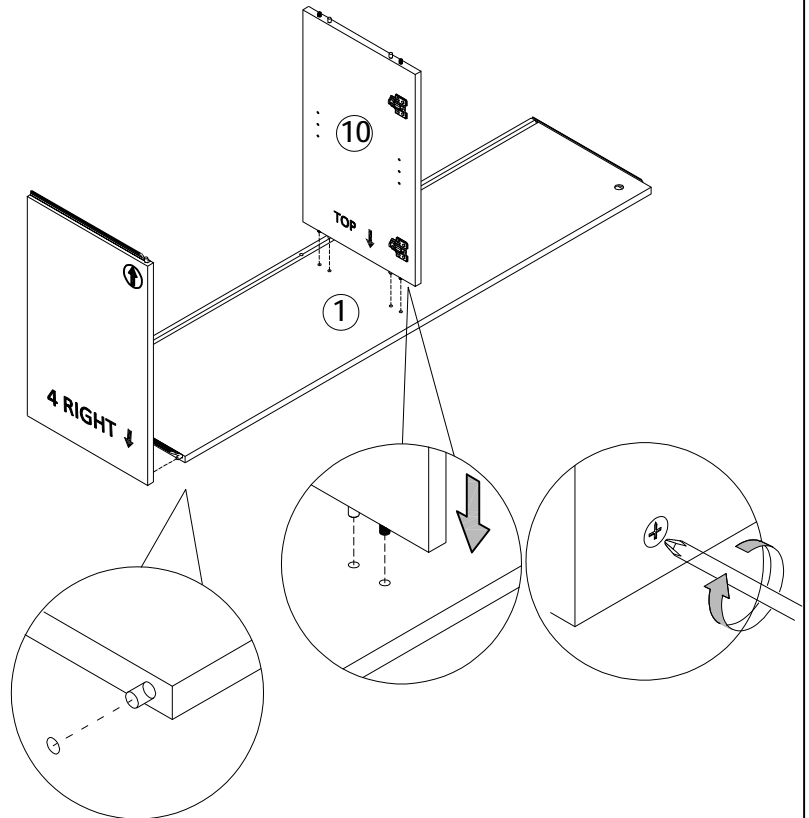

* Locate Dowel position first as a guide


2

 *Groove on back panel must be on inside face.

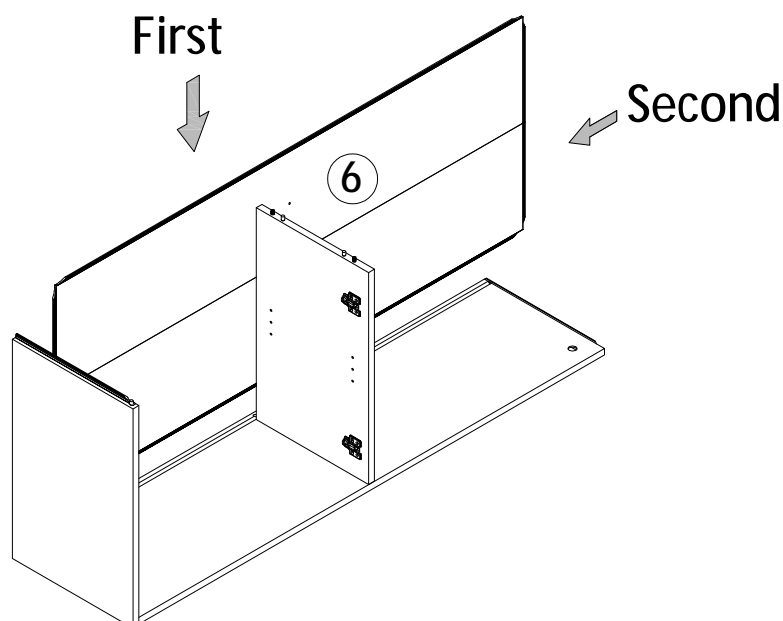


Ensure the panel sits in place with no gaps

 3

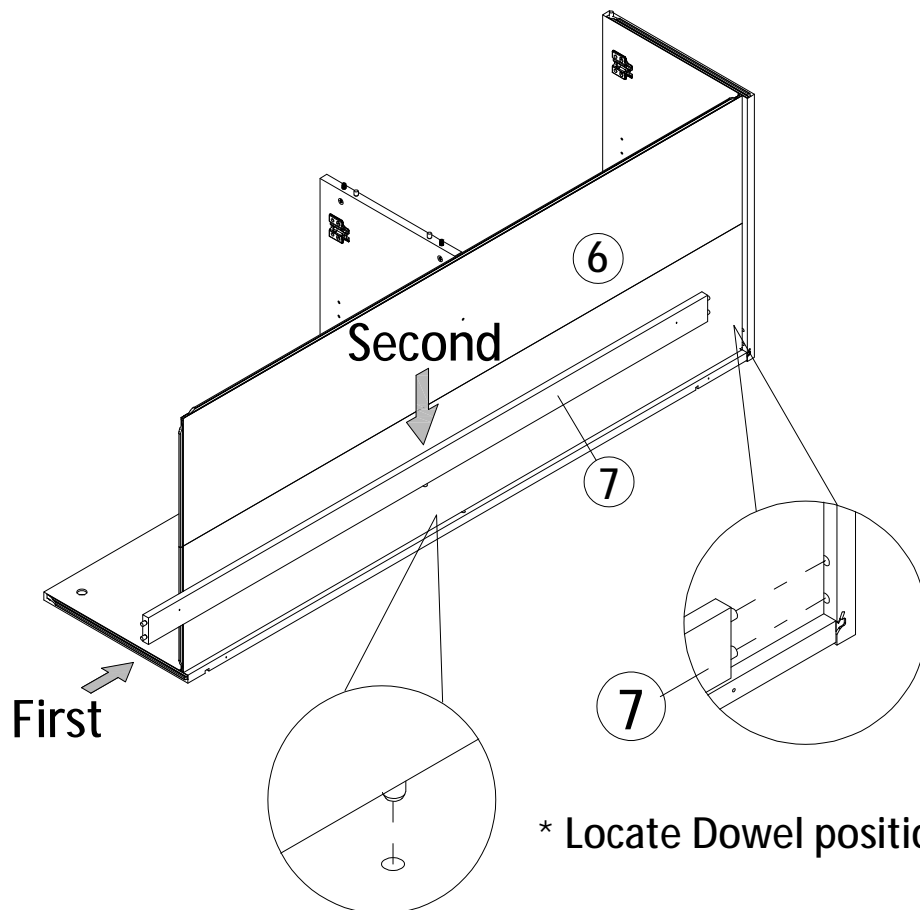

4

 
* Locate Dowel position first as a guide

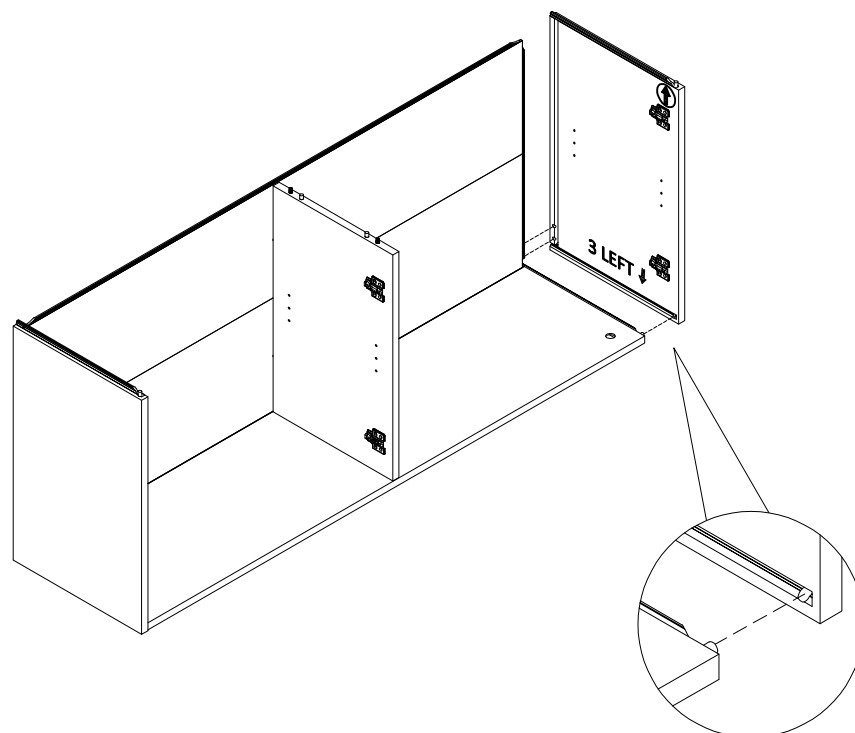

5




Locate dowel first as a guide, and press panel 2 down into place.

 After bottom panel is fitted, tighten the cam.

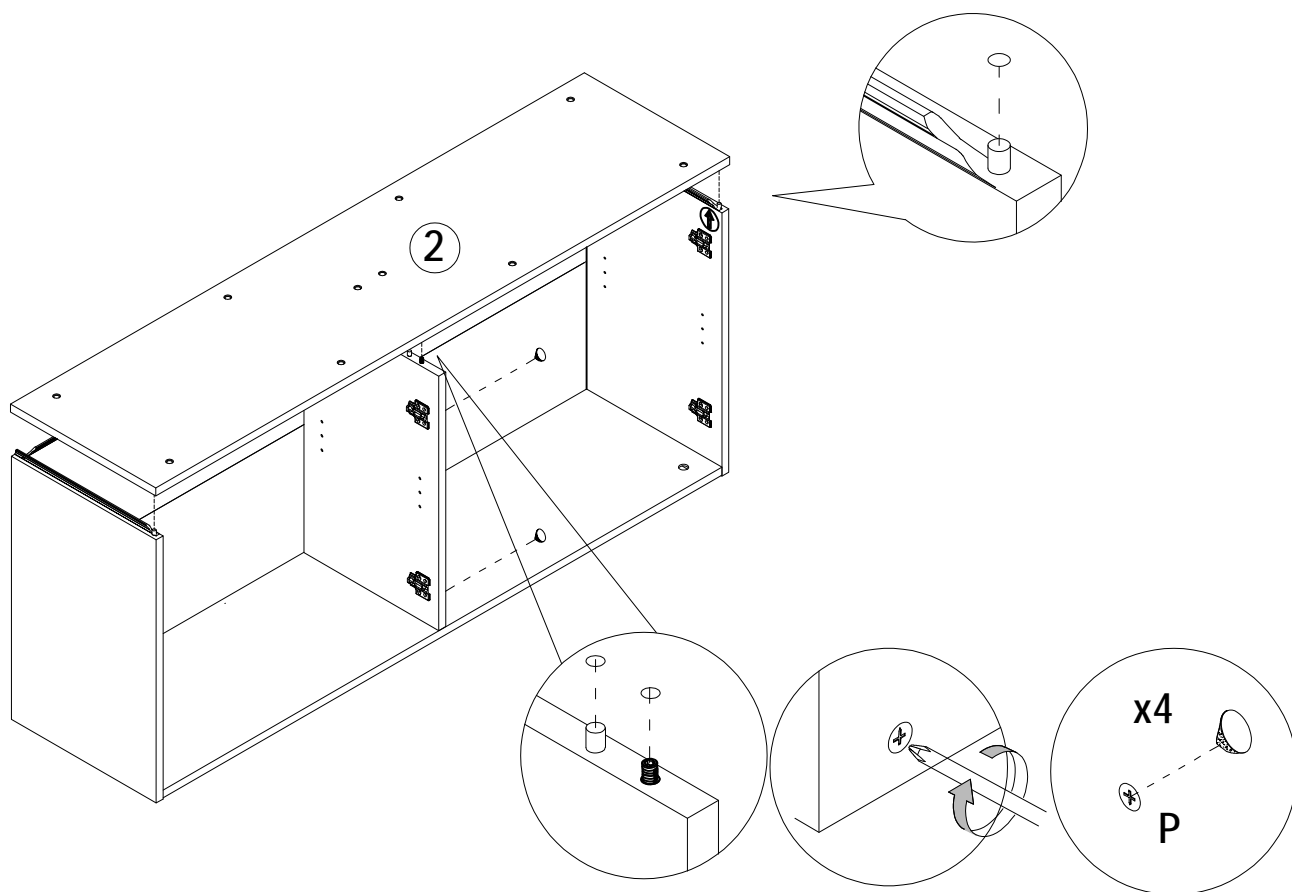




6

   Do not fully tighten to allow for final adjustments.

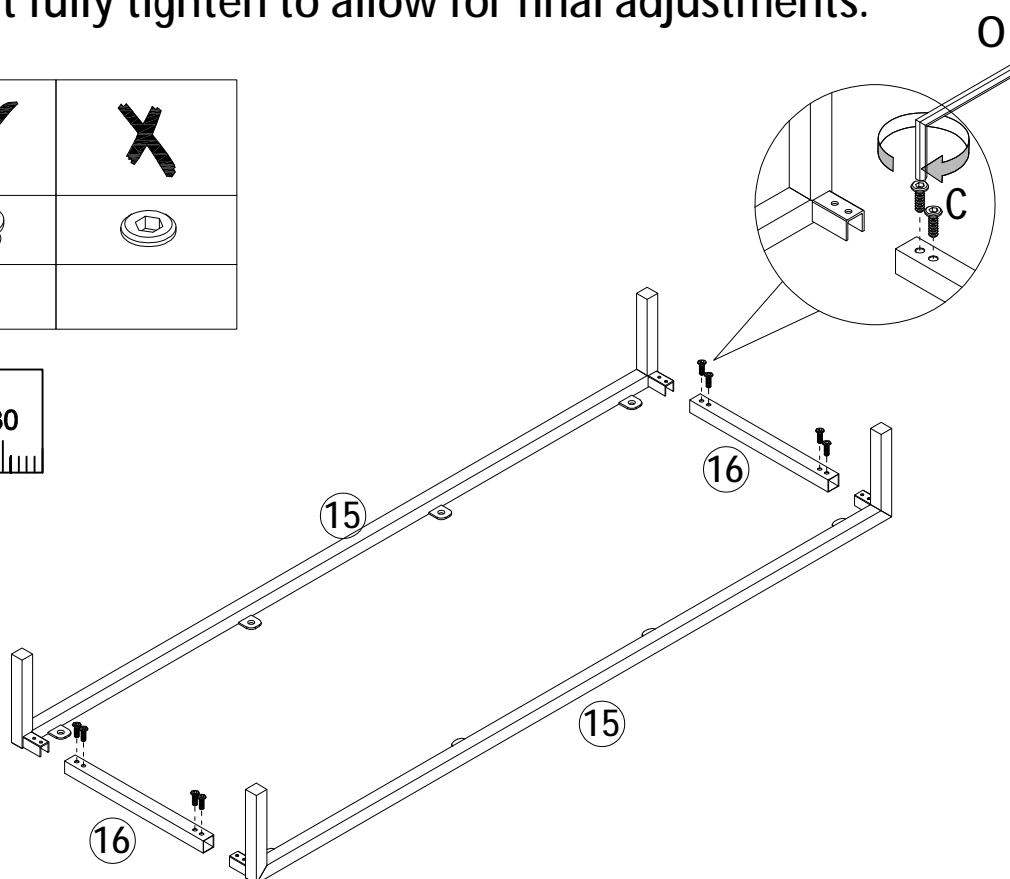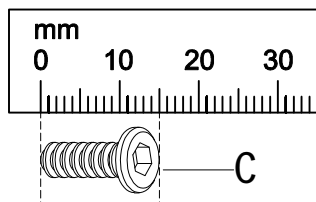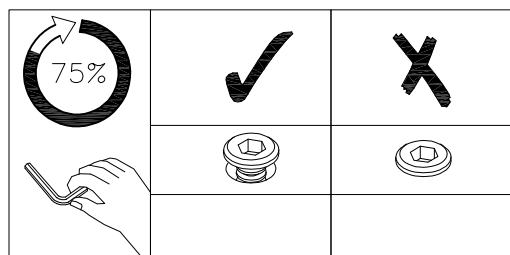


7

   To fix the legs to panel 2 evenly, install leg bolts in diagonally opposite corners.

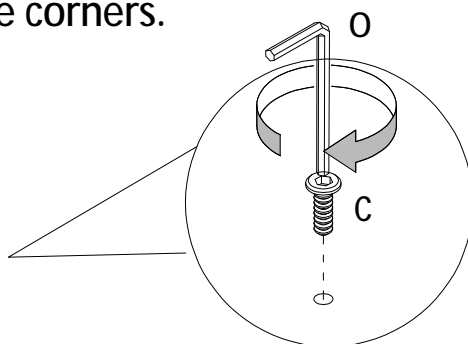
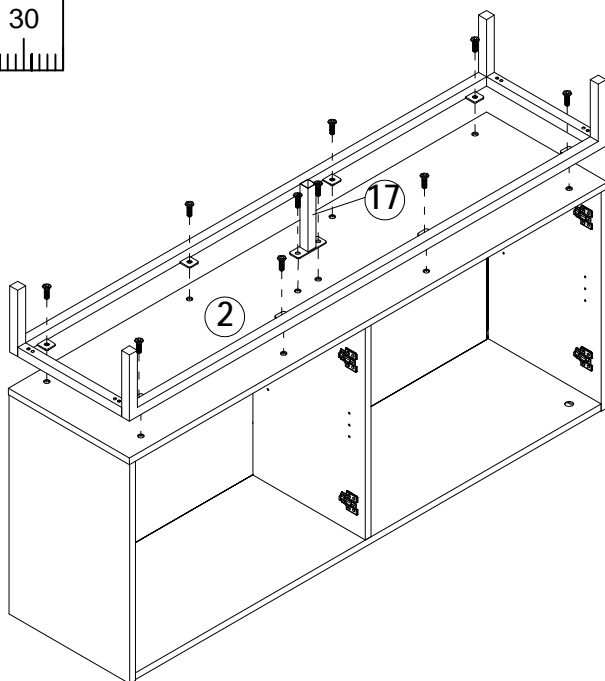



 Do not fully tighten to allow for final adjustments.

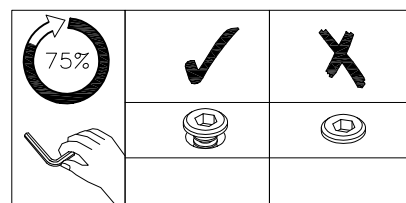


8

  
 
Ensure the bar of the legs is lined up with the edges of panel 2 before completely tightening.

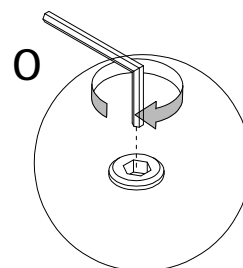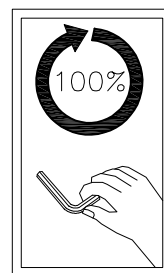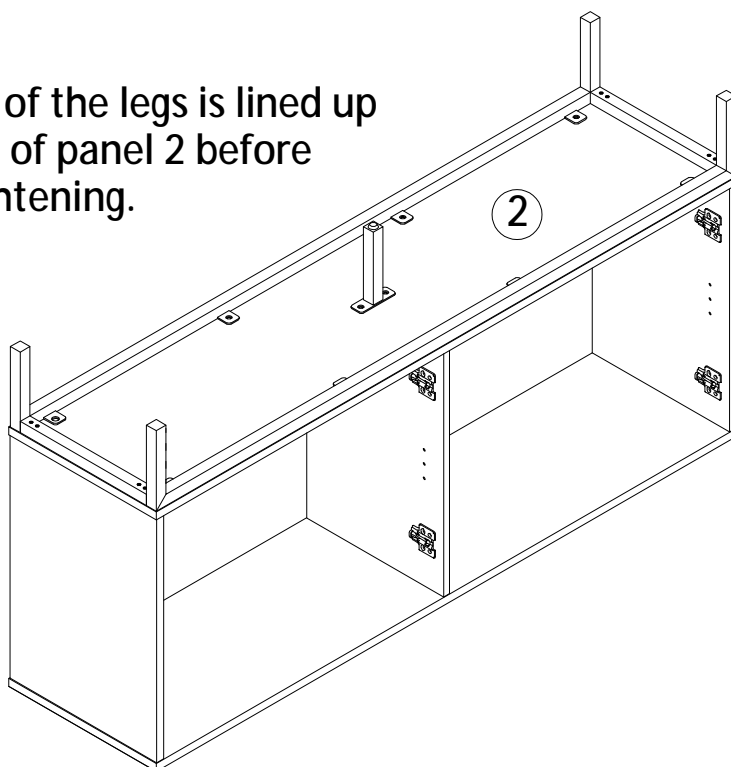

9

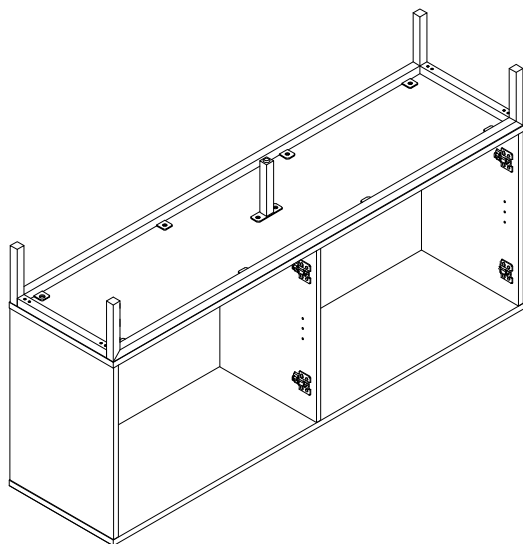 

180°

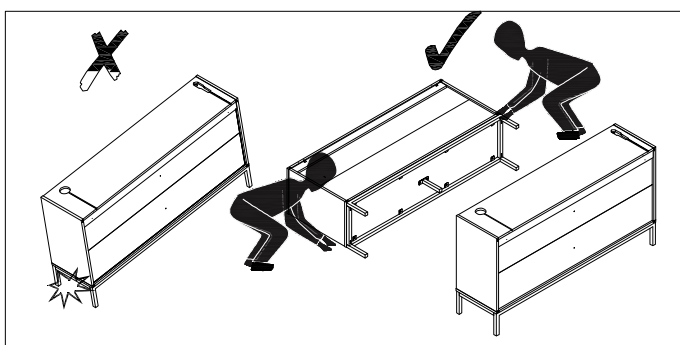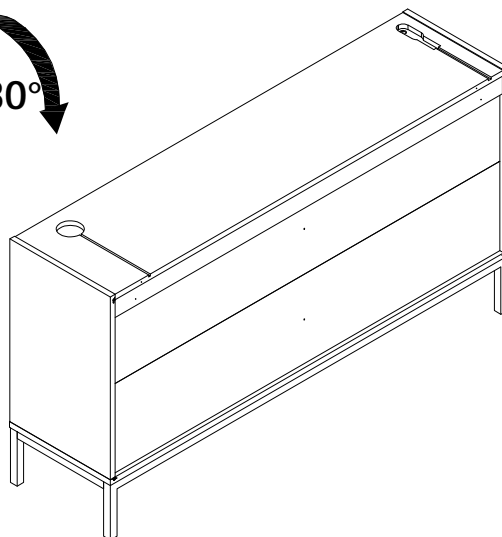  






When the legs have been attached, turn the unit over to the upright position.

IMPORTANT

We recommend that two people do this.


10

     PLEASE FOLLOW THE STEPS TO ENSURE NO DAMAGE.
Screw in clip 'I' - ensure surface is DUST FREE

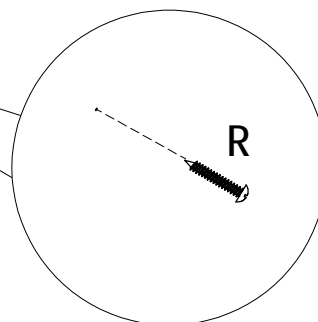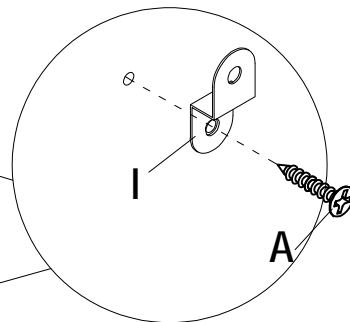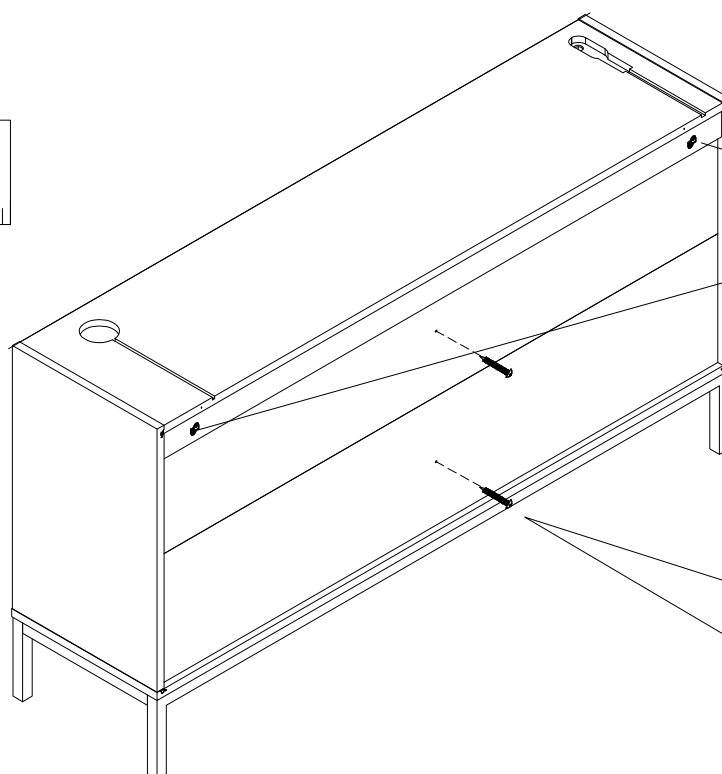

11

 
CAUTION, When peeling off LED adhesive strip, take extra care to peel **ONLY** the protective strip, not the adhesive strip.

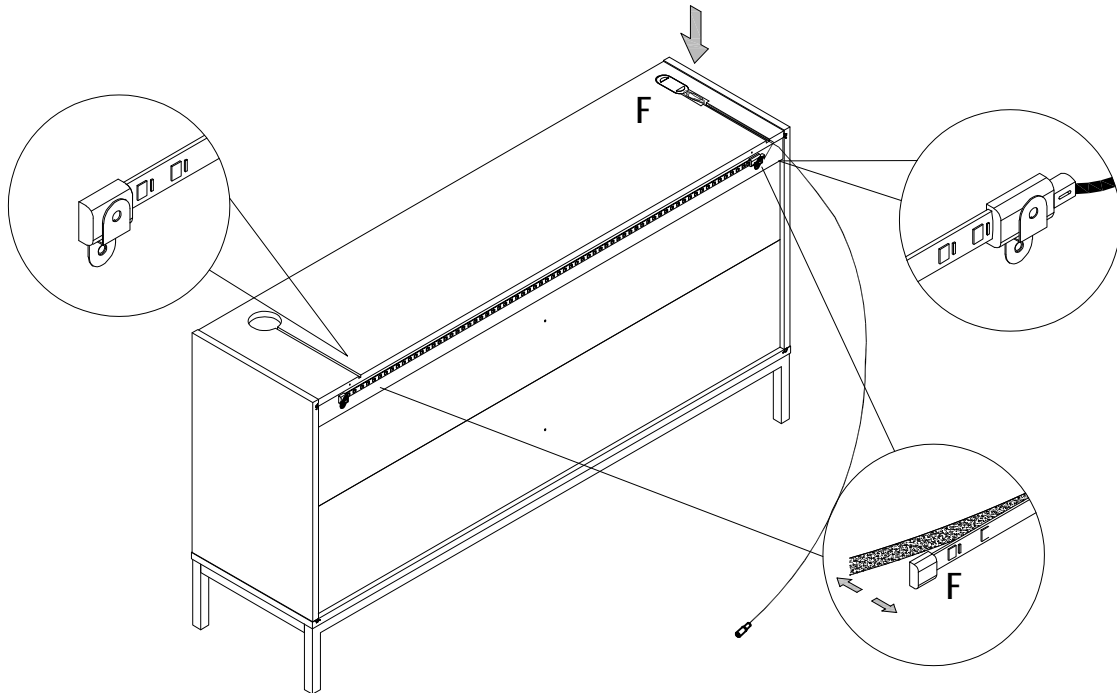


1. Do not remove LED strip backing yet, unravel LED strip from reel.
2. Place LED strip in position in the clip and lay the LED strip in place.
3. Start from the clip end, remove the LED backing strip with care and place in position on the edge of the back panel, pressing firmly.
4. Gently pull the wires so that the end of the LED strip is straight and sticking in position.

12

 NOTE : See separate instructions provided on setting up the app / LED strip and Alexa voice control.

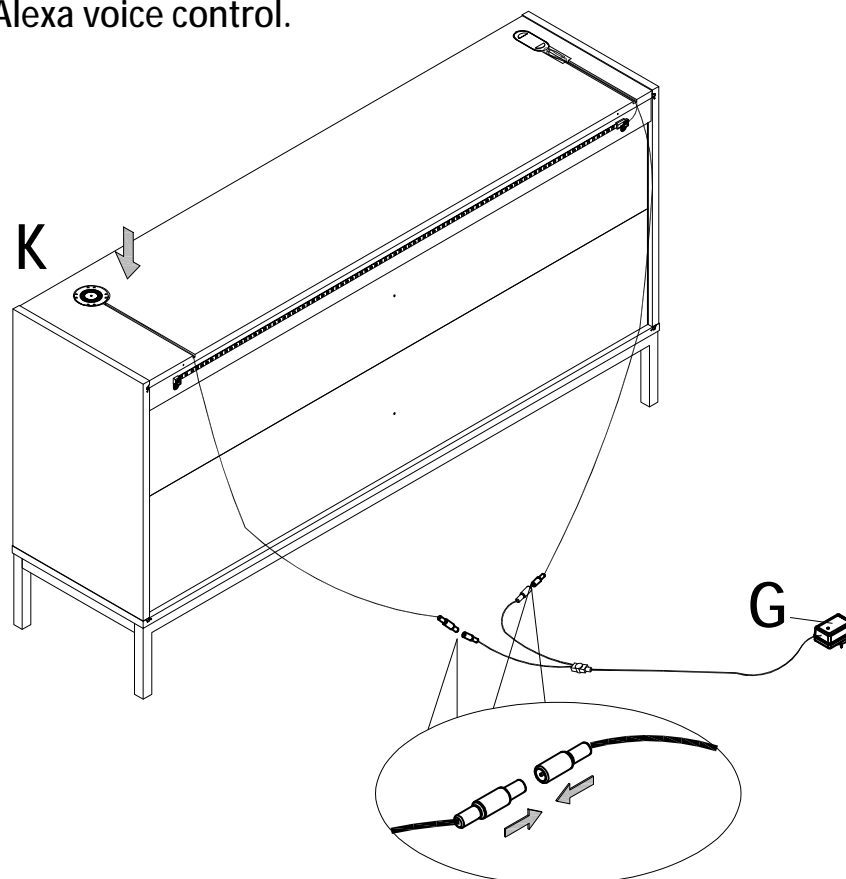


13

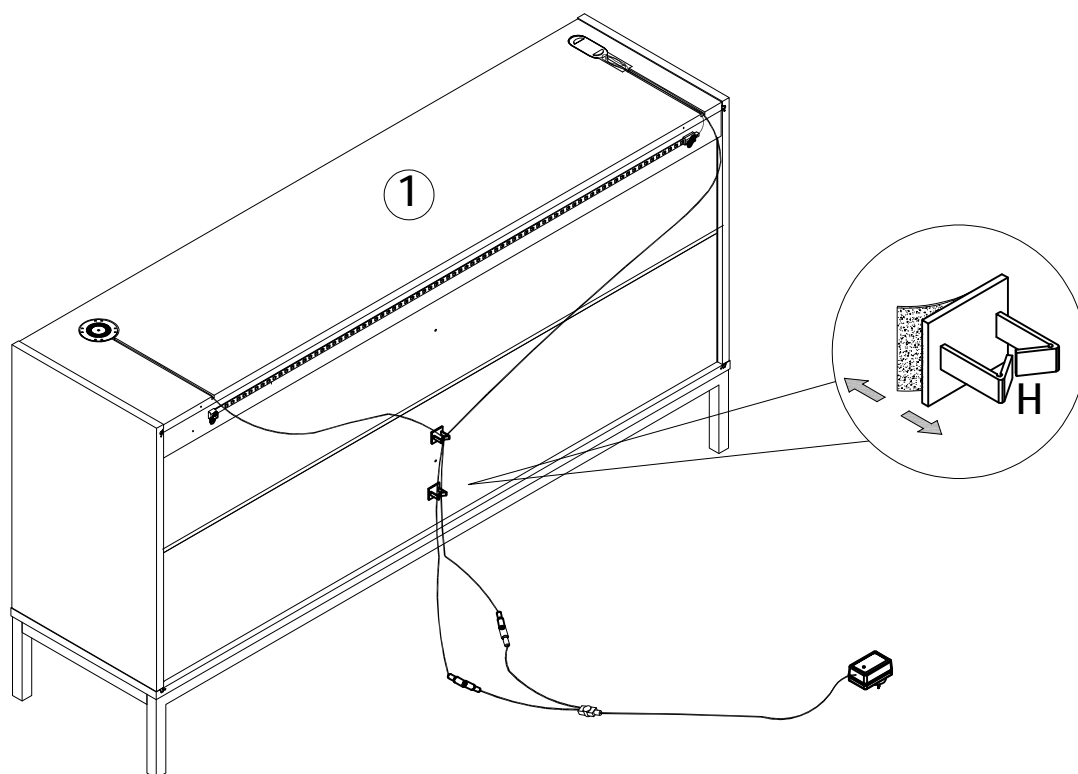 


14

 
Please choose shelf height position before attaching the door.

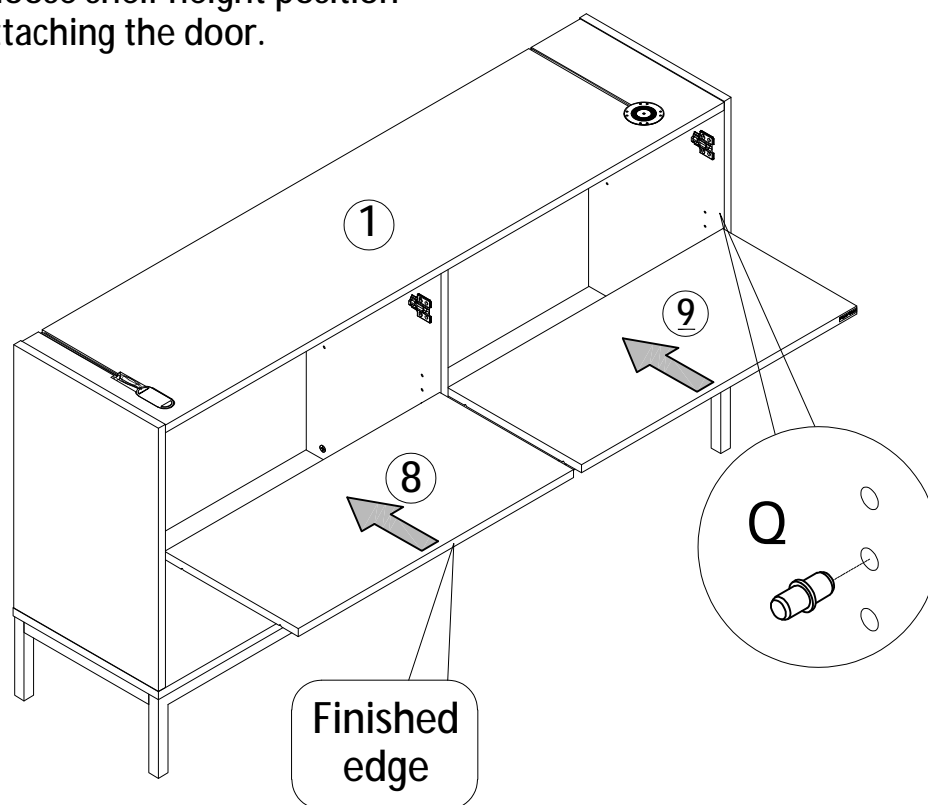

15

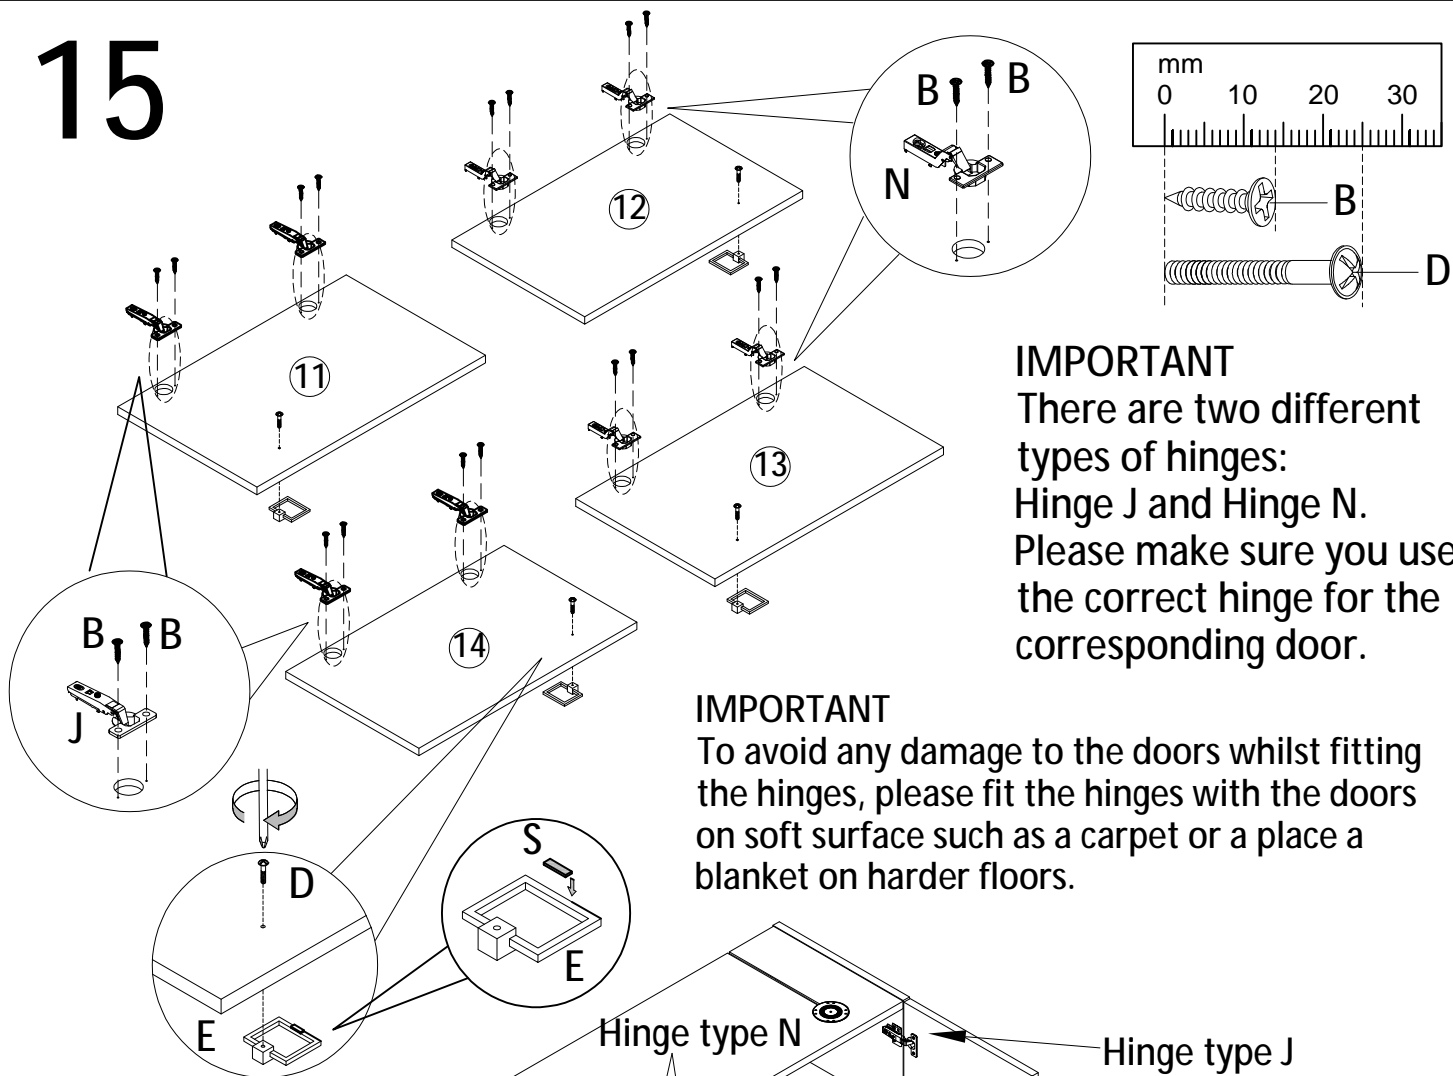 

16

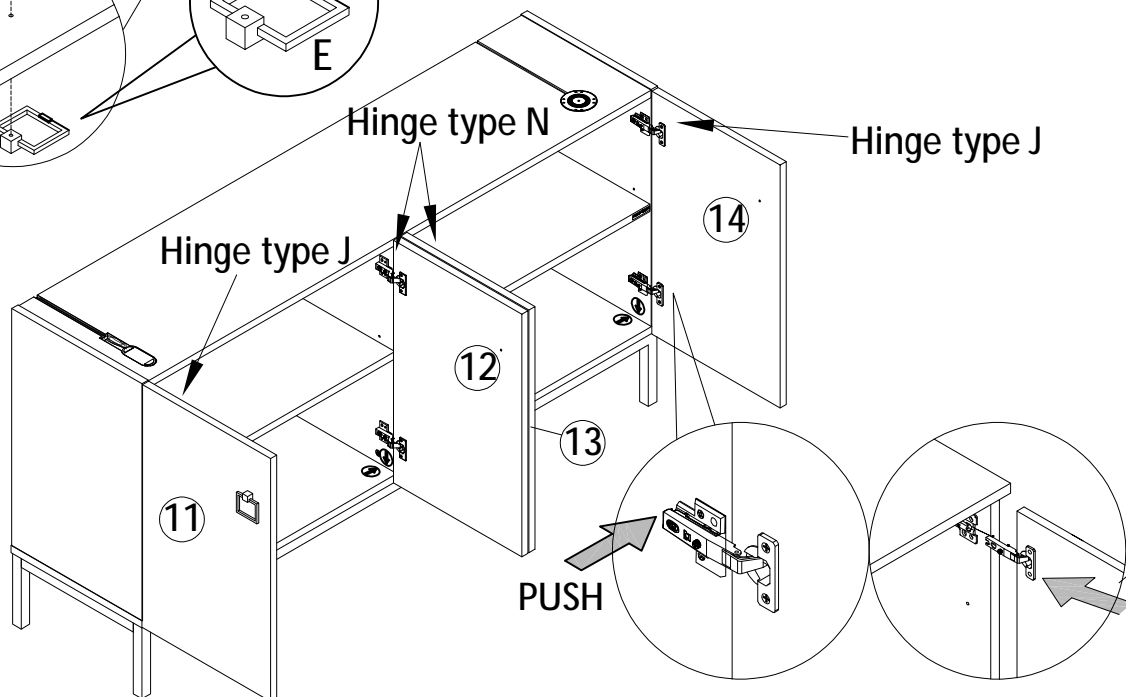 


When attaching doors, please do so with care to ensure no damage to paintwork.

Please use QR code to view a short video on how to attach the hinges.

17

 To get the doors aligned perfectly, the hinges can be adjusted in three places.

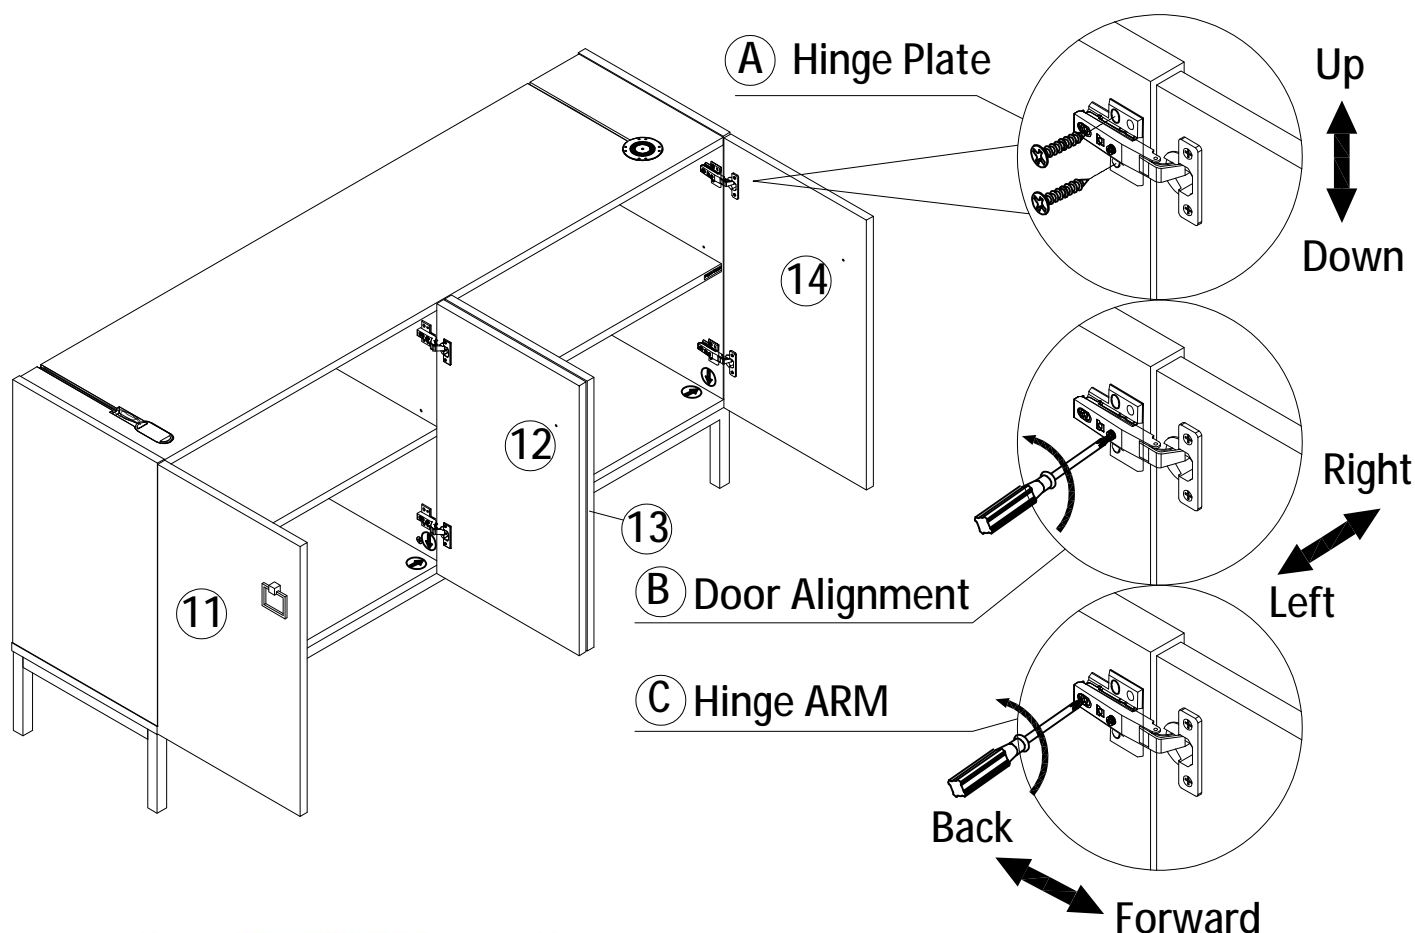


Please use QR code to view a short video on how to adjust the hinges and align the door.

Top tips for door alignment

1. Align and adjust the unit doors in the room and position the unit will be placed in in your home.
2. Ensure the floor is even.
3. Put on all four doors before starting to align them.
4. Make sure the pre-fitted door plates on the panels are tight but not overtightened.

 
18

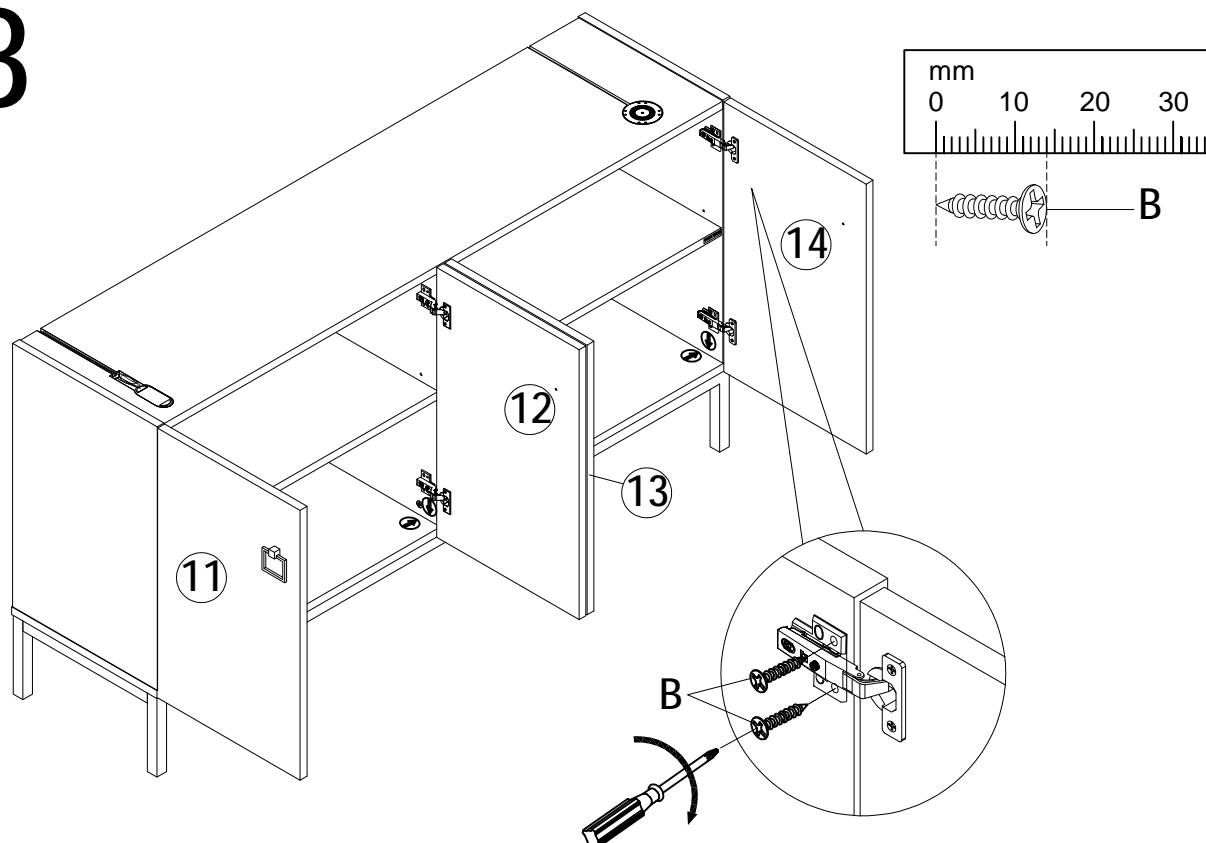

Please note, you may have difficulty aligning the doors if the floor is uneven. Please ensure the cabinet is as level as possible.

Once doors are aligned, use extra screws to strengthen the hinge, these holes are not pre-drilled

 19

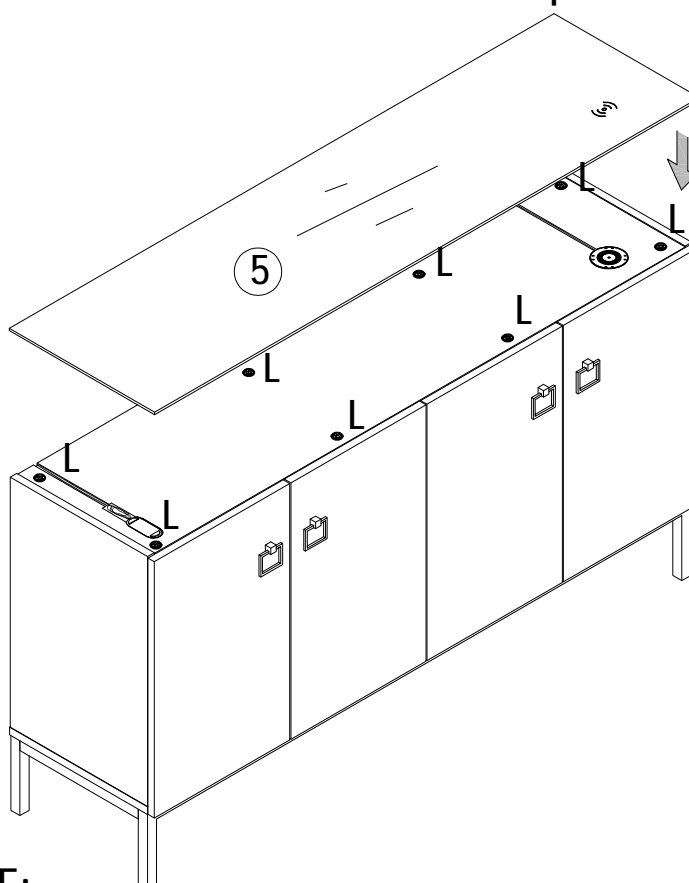

CLEANING ADVICE:

To avoid scratching the painted and glass surfaces, clean only with a non abrasive cleaner.

Wall Fixing Installation Instructions: Textile strap

Step 1

Place your product in the final position. Mark the wall with a pencil where corresponding hole will be drilled into wall. Check for hidden gas and water pipes and / or electrical wiring. Drill holes and fit an appropriate wall plug (not supplied) for your wall type. Screw the strap to the wall. Choose an appropriate screw to secure. If in any doubt please consult a professional.

Note 1

The wall plug and the screw / washer are not supplied as the wall types may vary

Note 2

The required gap between product and the wall is at least 25 mm.

Note 3

 
The end of the textile straps which are fixed to the wall should be about 25mm lower than the end fixed to the furniture.

CAUTION:

Where wall fixings are supplied it is essential that these are used to provide additional stability in order to avoid the furniture toppling over with risk of injury.


CAUTION:

Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.

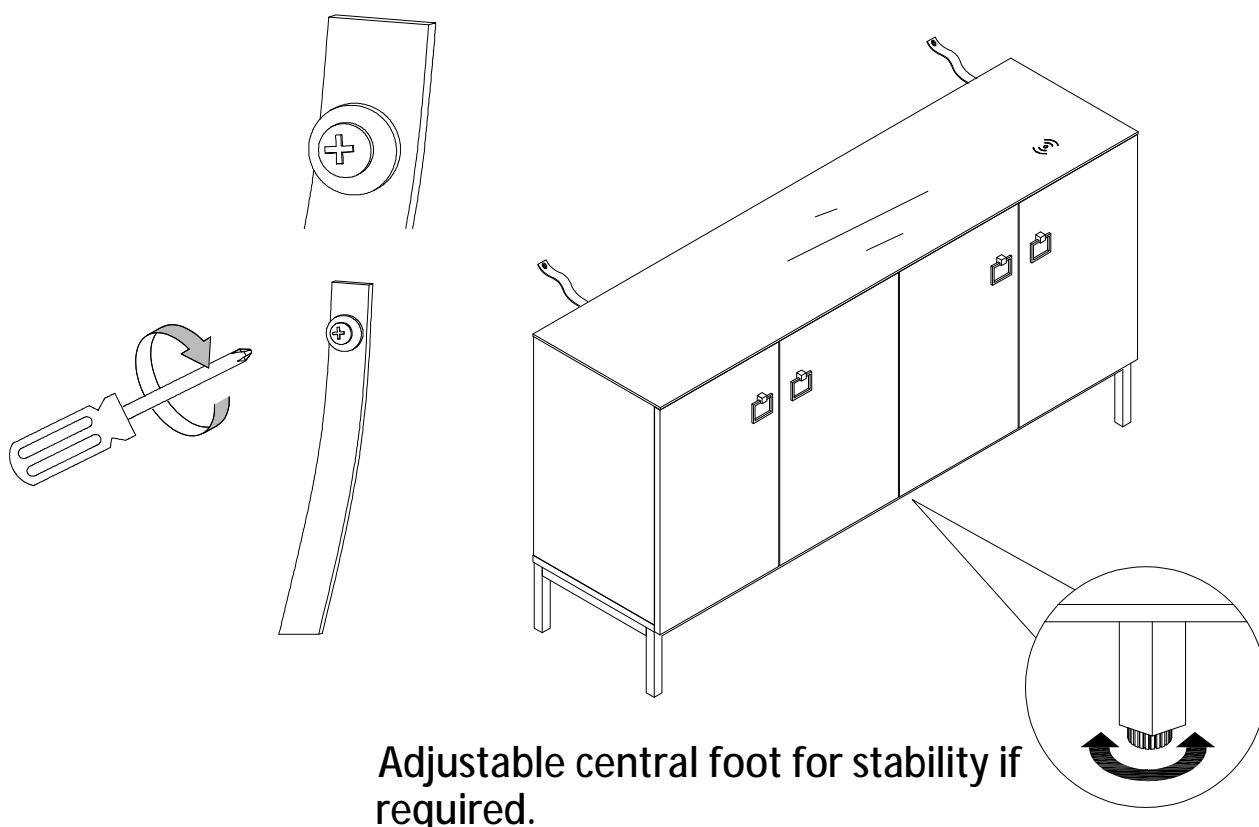


21 Disassembly Instructions

 Unlock the cam fixing (top and bottom) of panel 12
Gently insert Disassembly rod 'M' in to the triangle shown in the diagram as 'KEY'
. Once all the way in, the panels will come apart. Due to the click system, the panels may need a gently 'nudge or tap ' to release them.

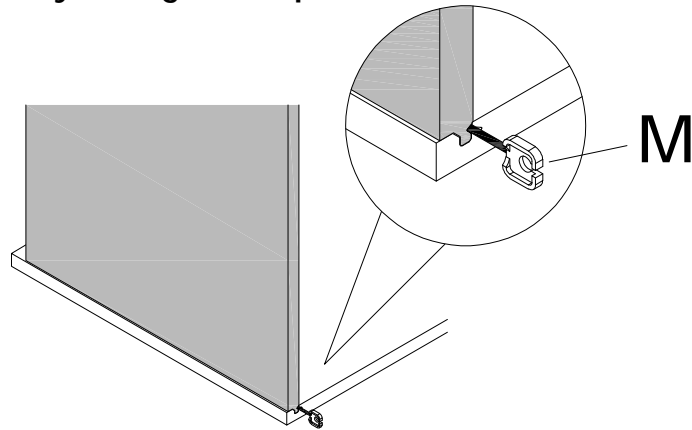

 Insert rod 'M' into each section panel to disassemble panel at a time

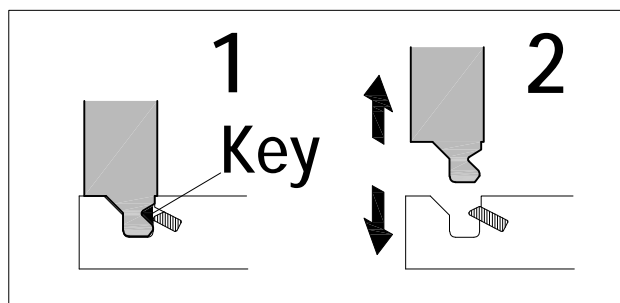


We highly recommend watching the quick help video before disassembling. Simply place a phone camera over the QR code below for a quick link to the video



22

 Finish - Remove all visible stickers when assembly is fully completed.

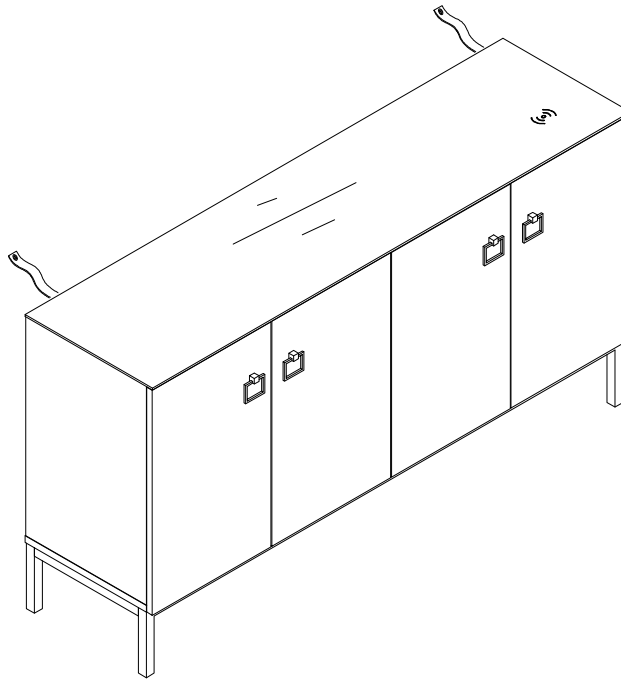

CLEANING ADVICE:

To avoid scratching the surfaces, clean only with a non abrasive cleaner.

NOTES ON SETTING UP WIFI

The LEDS lights only work on 2.4 GHz, they will not work on 5.0 GHz

Most homes are 2.4 GHz or operate a dual function. If for any reason the LED lights are not connecting to the app or Alexa, please check the router setting. Most routers will operate both 2.4 and 5.00 GHz so there should be no problem.

In commercial premises, there maybe software to block access connection to unknown apps or services. If this happens, please check with IT Department.

The system will work from a mobile WiFi hotspot from one phone to another. We recommend this approach if there are access issues.

Ensure Bluetooth setting is on.

Using the wireless charging

The wireless charging will only work with Qi enabled wireless charging phones. Please check the phone is wireless charging compatible.

Note: We recommend removing the phone case during the charging process

- Using the plug provided, connect the wireless charger cable to the plug and connect to the power source.
- To charge your phone, simply place the phone on the charging position indicator and the phone will start to charge.
- To check if the charger is working, simply move the phone and if the red light is on, this indicates that the charger is working. You may need to reposition the phone slightly if the red light is not showing.
- For the charger to work properly, the charging position within the back of the phone needs to sit aligned with the central red light.
- An element of heat is created during the wireless charging process, this is perfectly normal and safe. The charger has a built in temperature control and will not over heat.
- If a phone has a thick case, it may affect the wireless charging, to resolve this remove the phone case during charging.
- If a phone case is used and charging process seems to stop and start, remove the phone case and try again, this should work better.

NOTE : there may be a few seconds delay for the phone to register as charging which is normal.

For a guidance and help and contact details, please visit our website :
www.frankolsenfurniture.co.uk

QUICK HELP GUIDE & TIP VIDEOS

LED LIGHT SET UP GUIDES



Pairing mode



Re-setting pairing mode



AP mode



Re-setting AP mode



Help with wireless phone charging



Setting up Frank Olsen app &
SMART speaker control

Simply hold the camera on a smartphone over the QR code above to go to a quick link to the help video