

 


Russell Hobbs

Bladeless USB Desk Fan

Operating Manual

RHBLDLUSB25 (B)

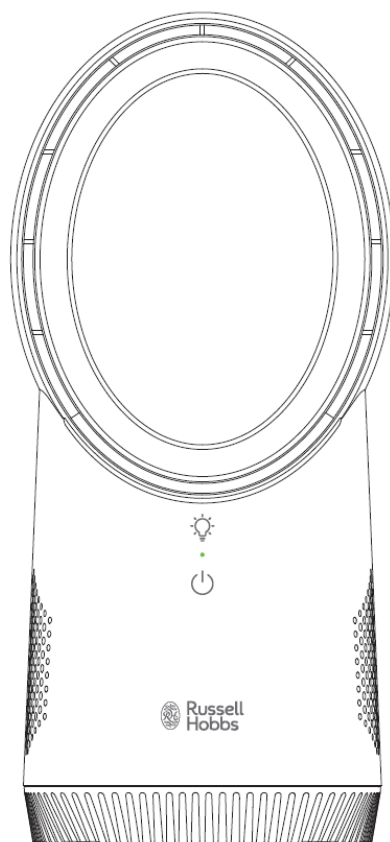

**REGISTER TODAY FOR
YOUR FREE
ADDITIONAL YEAR
GUARANTEE**

GUARANTEE

At Russell Hobbs, we take all our customer feedback seriously.

Feel free to contact our Customer Services Team who will be more than happy to assist you.

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.
- This does not affect your statutory rights.

Region	Contact	Website
UK & Northern Ireland	0345 209 7461	mda.russellhobbs.com
Ireland	1 800 938982	ie.mda.russellhobbs.com
Rest of Europe	europe@productcaregroup.com	de.mda.russellhobbs.com fr.mda.russellhobbs.com es.mda.russellhobbs.com it.mda.russellhobbs.com nl.mda.russellhobbs.com

Note your serial number below for future reference



Image for illustration purposes only



IMPORTANT SAFETY INSTRUCTIONS

 
 
- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.
- Do not use with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This product is intended for household use only.
- Do not use outdoors.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.
- Do not operate this appliance for anything other than its intended use.
- Do not immerse whole unit in water or other liquids for cleaning.
- Unplug from outlet when not in use. Do not leave unattended while plugged in.
- Do not use if it has been dropped, damaged, left outdoors or submerged in water.

IMPORTANT SAFETY INSTRUCTIONS

- Keep the appliance away from water. Do not allow it to get wet. If the unit gets wet, do not plug the unit into a wall socket or turn the unit on.
- Do not handle the appliance with wet hands.
- Do not pull or carry by the cord, use the cord as a handle, close doors on the cord, pull the cord around sharp corners or edges, or expose the cord to heated surfaces. Do not unplug by pulling on the cord.
- To protect against electrical shock, do not immerse the cord, plug, or appliance in water or other liquids.
- Unplug from the mains outlet when not in use, before putting on and taking off parts, and before cleaning.
- Only use the unit when fully assembled.
- Never place your fingers or other objects into any part of the appliance. Be aware that loose clothing or hair may become trapped in the appliance if improperly used.
- Before use, ensure that all the air vents of the appliance are clear and there is no restriction of air flow.
- Caution: Appliance may disturb ashes in an open fire. Always avoid directing the appliance toward naked flames.


PARTS

Lighting Control
Indicator Light
Power Button &
Speed Control

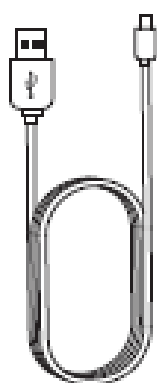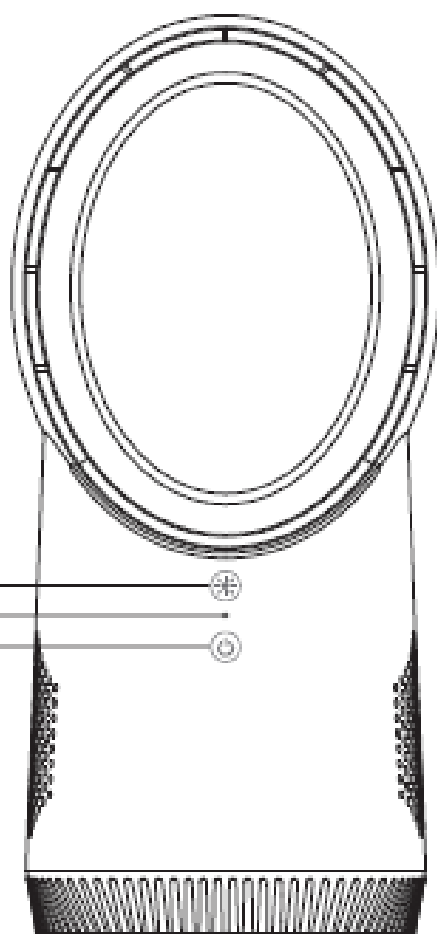

Power Cord

 Power Cord Interface

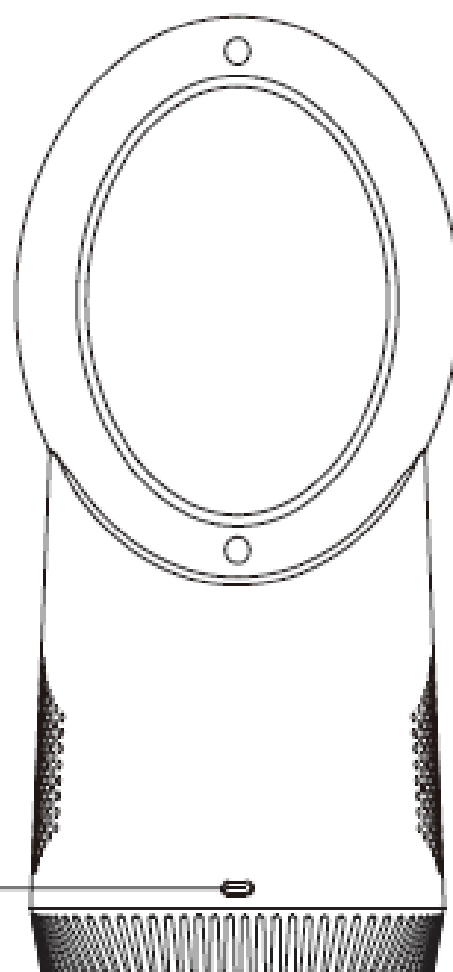


PRODUCT SETUP

Remove packaging material and all transport bracing from the device.

For safe and trouble-free running of the device, choose the installation location which meets the following requirements:

 - The surface should be firm, flat and horizontal.
- Do not place the device in a hot, wet or very humid environment.
- The socket should be easily accessible so that the mains connection cable can be easily disconnected, if necessary.
- Temperature range: from 0 to + 40 °C .
- Humidity (no condensation): 5 - 75%.


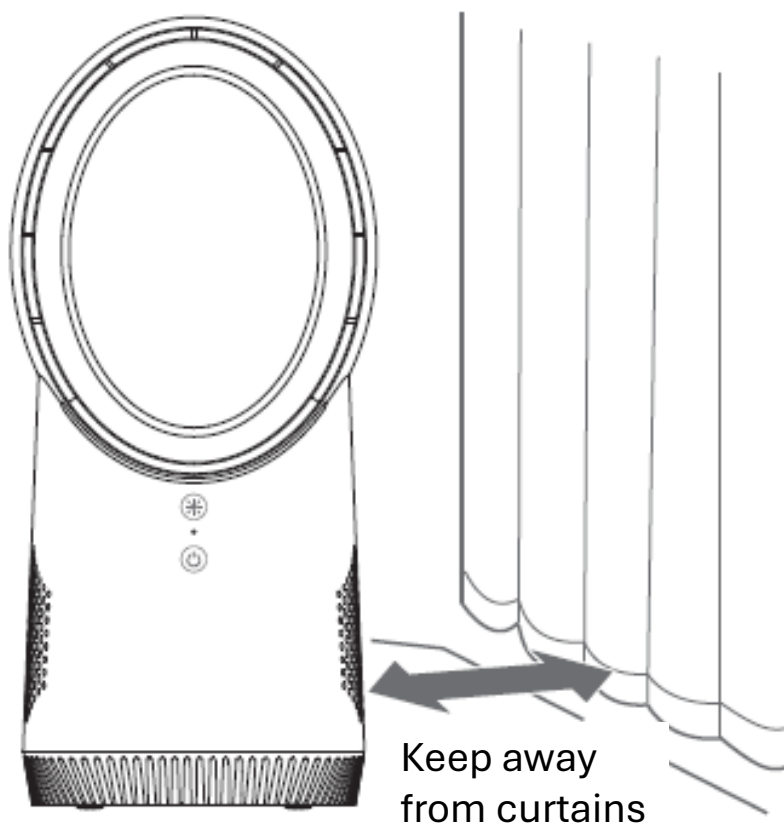


PRODUCT SETUP

Use the cable to charge the fan and use wirelessly or connect to an external power source to use the fan whilst plugged in.


Approximate charge time is 3 hours.

  Approximate discharge time is 2 hours.

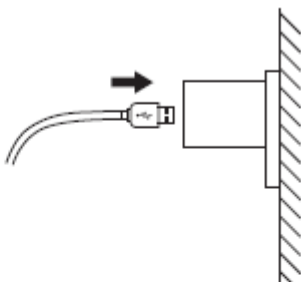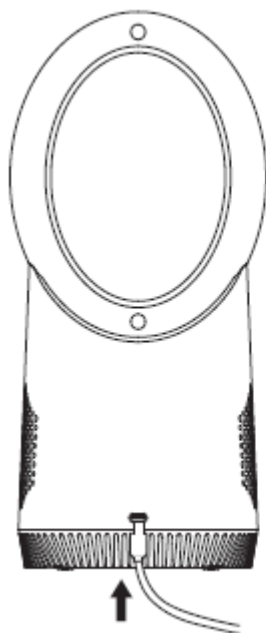

Insert the output end of the USB charging cable into the fan interface first, and then insert the USB charging cable into the national standard output 5V 2A. Ensure the maximum output power does not exceed the 15W adapter to supply power to the fan.

 When the built-in battery is empty, the indicator will light red and blink 3 times then automatically shut down when the power is insufficient. When the battery is charged through the USB charging cable, the green indicator blinks and turns off when the battery is fully charged.

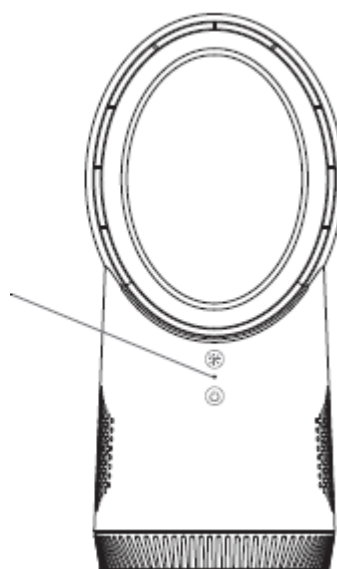

Product Set Up

Power Button & Speed Control

Press the power button on the fan and the power indicator will light up white, this is speed 1.

Wait 3 seconds before pressing again to change the fan's speed.

Press it a 2nd time for speed 2 and the power indicator will light up blue.

Press it for a 3rd time for speed 3 and the power indicator will light up green.

Press it a 4th time to turn the fan off.

Press 1 = Speed 1

Press 2 = Speed 2

Press 3 = Speed 3

Press 4 = Switch off

Lighting Control button

 
Press the lighting control button to start the atmospheric lighting.

Keep pressing the button to run through the colours (white, blue, green, red, purple, gradient colour).

To end the atmospheric light function, press the ambience button again after the colour changes to gradient colour. The indicator light will then turn off. You can also press and hold the button to turn the light off.

White – Blue – Green – Red – Purple – Gradient – Switch Off

Note: The buttons have a beep feedback when pressed and work best with a light swipe over them.

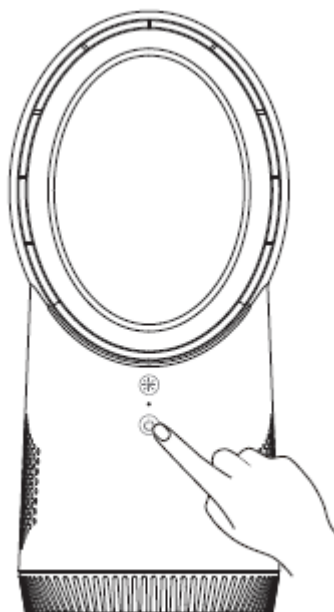

Battery Removal

The battery inside the fan may contain substances that pollute the environment, and the battery cannot be disposed of as domestic waste.

If you want to throw away the fan, dispose of the battery according to local regulations.

 
Before removing the battery, power off to ensure that the battery is free. If there is surplus power, let the fan run until the power is exhausted.

Do not short circuit the battery contact strip.


Remove the battery:

1. Take out the 6 silicone and screws at the bottom and back of the product (Figure 1).
2. Take out the plastic shell of the chassis and remove 2 screws (Figure 2).
3. Take out the rear shell, remove the battery terminal, and remove the battery (Figure 3).


Do not reconnect the fan to the power supply after removing the battery.

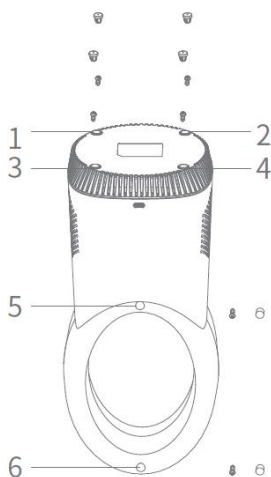

(Figure 1)

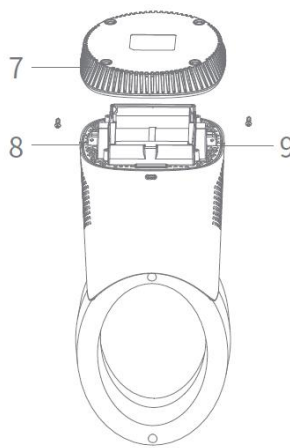 

(Figure 2)

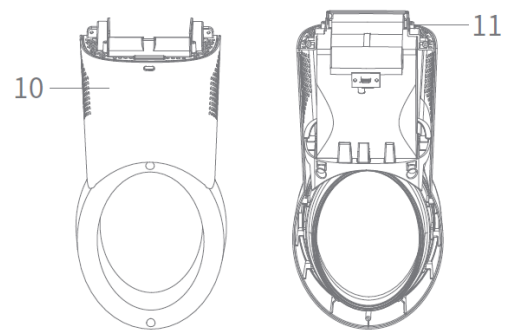 

(Figure 3)

CLEANING AND MAINTENANCE

The fan requires little maintenance.

Do not try to fix it by yourself.

Refer to qualified service personnel if a service is needed.

- Ensure the unit is unplugged before assembly, and before cleaning.
- During maintenance, do not soak or splash water on the fan, it may cause the machine to get wet and damage it.
- Do not use gasoline, alcohol, bleach or metal objects to wipe the fan surface, as it may cause the fan surface to discolour and deteriorate.
- To ensure adequate air circulation to the motor, keep vents at the rear free of dust. Do not disassemble the fan to remove dust.
- Do not use any abrasive detergent or solvents to avoid scratching the surface.
- Do not allow water or any other liquid into the motor housing or interior parts.

Object surface

- Gently wipe the fan surface with a dry soft cloth.
- If the surface of the fan is dirty, it can be diluted with neutral detergent and then wiped with a soft cloth.
- Wipe the fan clean and then wipe it with a dry soft cloth.

Air Inlet & Outlet

- Use a soft brush or a vacuum cleaner to remove the dust at the air inlet and outlet.
- Too much dust may affect the use of the fan. Clean it before too much dust collects.

Storage

- Avoid places with vibration and electrical appliances with cooling/heating function.
- Avoid placing it in direct sunlight, high temperature and humidity.
- Keep it out of the reach of children.

PROBLEM SOLVING

The fan doesn't switch on	• Check the fan charged or is plugged in. • Check the socket is switched on. • Check another appliance in the socket. • Unplug and check for any obvious signs of damage to the cord or plug. • If recently used, allow to cool for 1 hour then try again.
The fan is rattling	• Check there is nothing in contact with the fan. • Check the fan is on a level surface.
Fan is making a grinding sound	• Immediately switch off and contact Customer Services.
The air is dusty	• Ensure the fan is unplugged and set to OFF. • Using a vacuum and crevice brush, gently vacuum the front grille.

IMPORTANT!

KEEP GRILLE CLEAN

Vacuum the grille at least once every 3 months.

The fan may require more frequent vacuuming if in a dusty environment.

Ensure that the fan is unplugged before cleaning.

3

MONTHS



Russell Hobbs

Made by Product Care Trading Limited under license from Spectrum Brands (UK) Limited. Product Care Trading Ltd, Unit 1, Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom

Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland. Russell Hobbs is the registered trademark of Spectrum Brands (UK) Ltd.

UK
CA



The 'wheellie bin' symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit www.sedex.org.uk for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.