

Birlea®

Assembly Instructions

**Thank you for
purchasing a
Birlea product**

For a chance to win a Love2Shop voucher simply post a picture of your new product on your preferred social channels tagging Birlea Furniture. One winner will be selected at random each month.

*Terms & conditions may apply.

Are you happy with your purchase?

Yes: That's great, we would love to hear more from you. Please leave us a review on our Trustpilot link on the QR code here. Your feedback will be greatly appreciated.



No: If for any reason there is something missing, indifferent or incorrect with your order, please contact the retailer that you purchased your item from.

Please note that this items build time is around 1 Hour for 2 man build.



www.birlea.com

ASSEMBLY INSTRUCTIONS HIGHGATE CORNER TV UNIT

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING OR USING YOUR HIGHGATE CORNER TV UNIT .

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

HEALTH & SAFETY:

DO NOT use this item if any parts are missing, damaged or worn.

DO NOT use this item unless all fixings are secured.

Please keep small parts out of reach of children.

Always use on a level, even surface.

It is recommended that two people handle and assemble the item.

Birlea advise you use the wall straps provided to further enhance the safety of this product.

CARE & MAINTENANCE:

Assemble in the room of use.

To avoid damages assemble the item on a soft, clean surface

Periodically check all screws & fixings to ensure they are secure.

DO NOT push the item as this will damage the base.

Always lift the item with two people to reposition.

Keep any sharp objects away from the item.

This product is manufactured in pine which is a wood with natural characteristics including knots, grains, clusters or indentations.

 
 
On unpacking the item you may notice an odour due to production processes but this will disappear after a period of time.

 
DO NOT place the item next to a radiator or direct sunlight - this item is susceptible to temperature change. It is recommended an even room temperature be maintained with no sudden fluctuations.

DO NOT place hot or cold items directly onto the surface of the item as marking will occur

For general cleaning use a duster or damp cloth (almost dry) not wet - do not use soap and water, detergents, aerosol sprays or any polish as use of these materials would invalidate any claims.

DO NOT place the item onto wet or damp flooring as staining may occur to the floor.

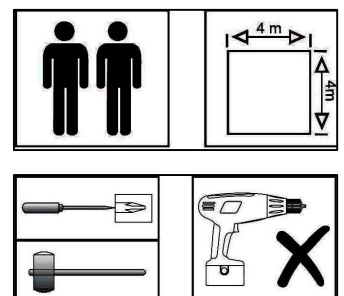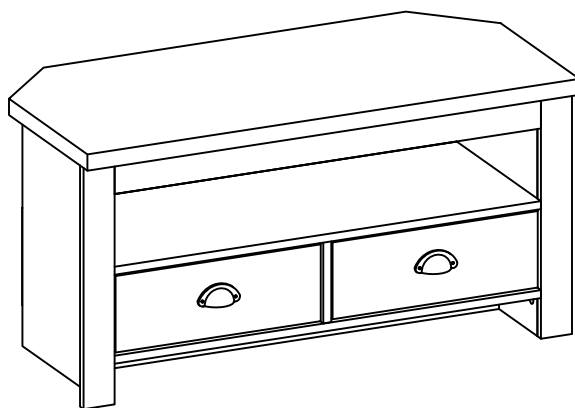

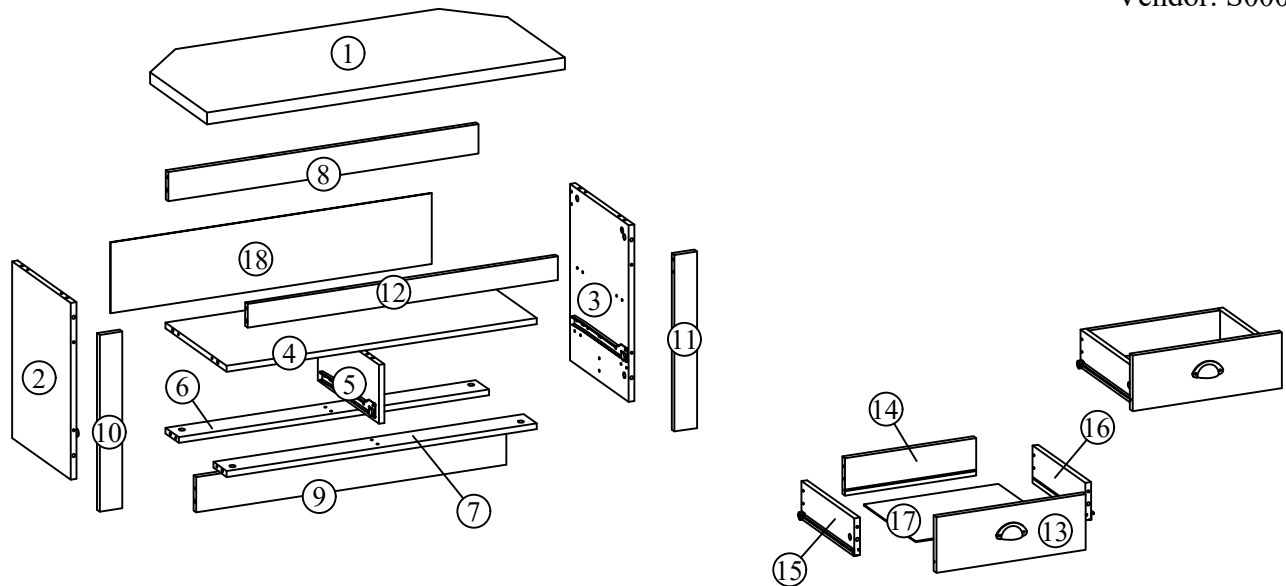


 
 

 
 
 
 
 
 
 




PARTS LIST

Carton 1 of 1:


Part	Description	Qty
1	Top Panel	1
2	Left Panel	1
3	Right Panel	1
4	Center Panel	1
5	Center Divider Panel	1
6	Back Support Panel	1
7	Front Support Panel	1
8	Back Support Panel	1
9	Plinth Panel	1
10	Left Post Panel	1
11	Right Post Panel	1
12	Top Post Panel	1
13	Drawer Front Panel	2
14	Drawer Back Panel	2
15	Drawer Left Panel	2
16	Drawer Right Panel	2
17	Drawer Bottom Panel	2
18	Back Panel	1

 HARDWARE LIST: Carton 1 of 1


 



Part	Description	Qty
A	CAM NUT 15mm 	32
B	CAM BOLT 	32
C	WOOD DOWEL M6 x 25mm 	30
D	COUNTERSUNK SCREW M4 x 38mm 	8
E	COUNTERSUNK SCREW M3.5 x 12mm 	26
F	PAN HEAD SCREW M3.5 x 12mm 	4
G	MOON HANDLE 	2
H	METAL RUNNER 12" (DR) 	2
	METAL RUNNER 12" (DL) 	2
I	METAL RUNNER 12" (CR) 	2
	METAL RUNNER 12" (CL) 	2
J	PVC NAIL 	4
K	NAIL 	15
L	COUNTERSUNK SCREW M4 x 45mm 	2
M	METAL L-BACKET 	1

** You will need a screwdriver and a small mallet
(NOT provided)

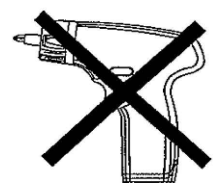
Measure Tape



** WARNING: THE USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.


1	B		18
	C		8
	E		12
	H		2
	J		4

  Insert hardware part B using a screwdriver (not provided). Insert hardware part C using a small mallet (not provided). Insert hardware part J using a small mallet (not provided). Fix hardware H with screw E using screwdriver (not provided). **DO NOT** use any power tools as this may damage the frame and will invalidate any claim.

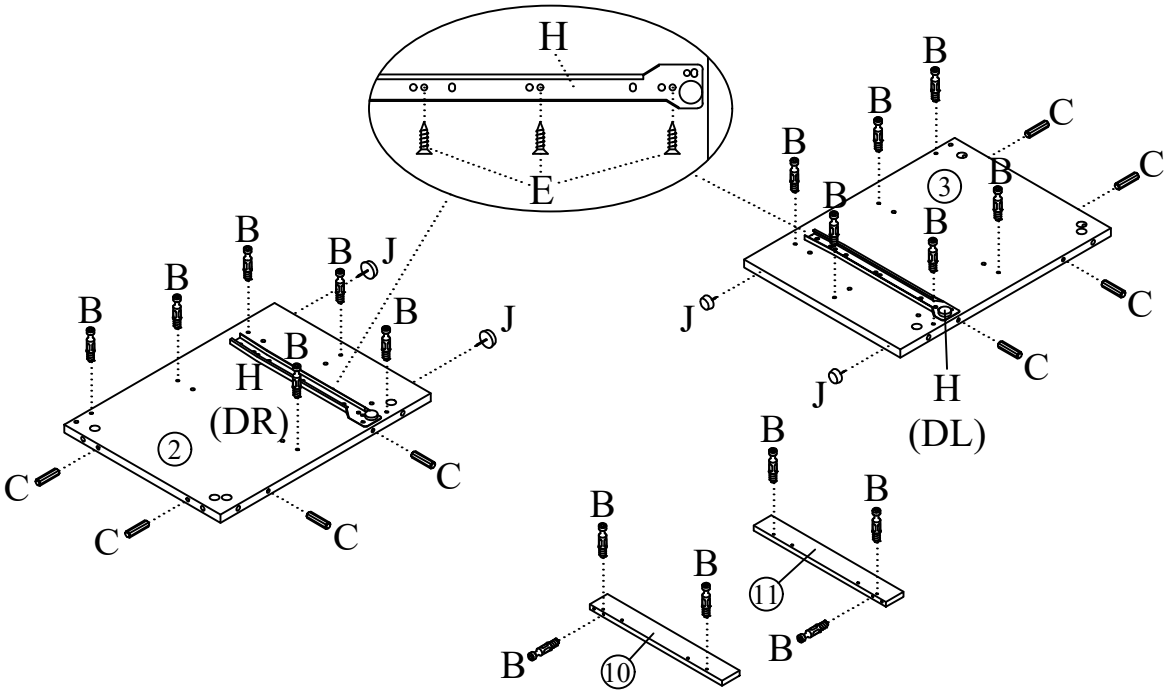



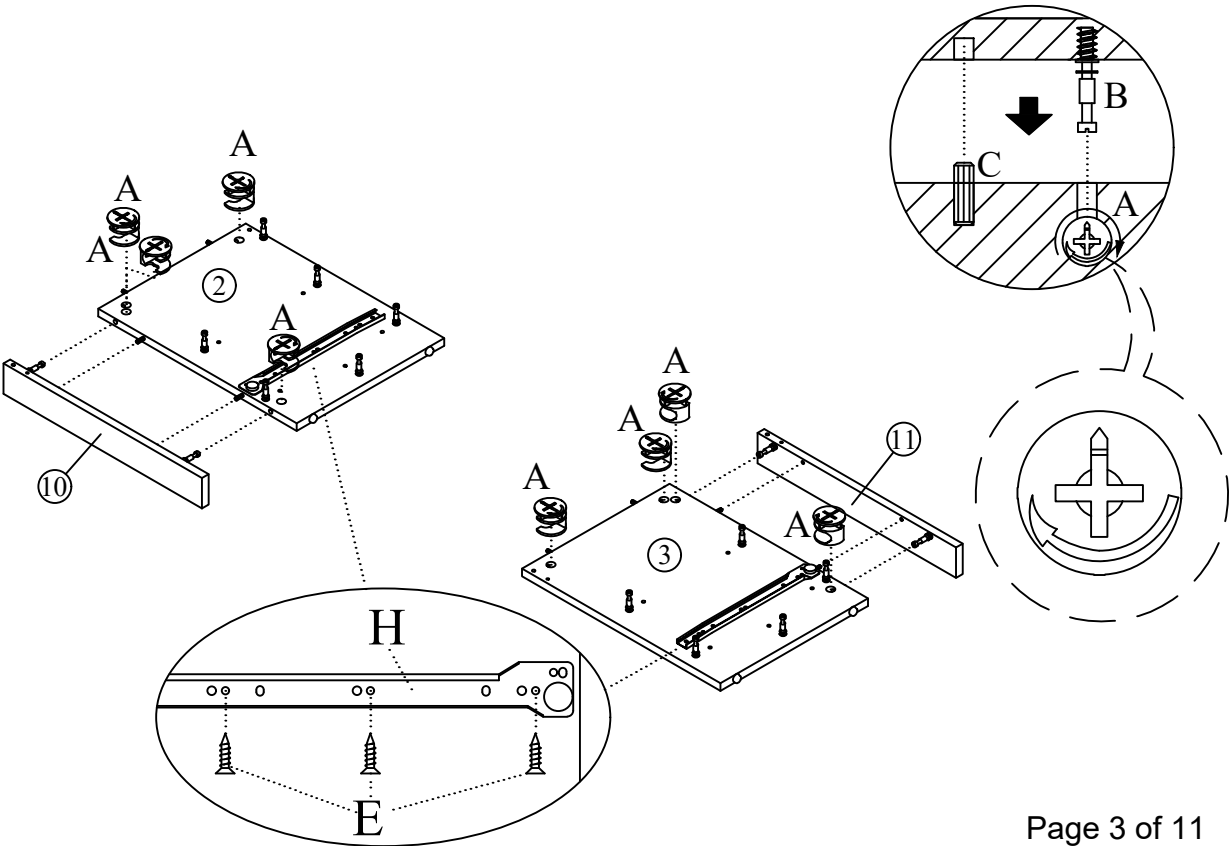


2	A		8
---	---	---	---


Insert hardware part A as Shown. Attach the Left Post Panel (10) and Right Post Panel (11) To Left Panel (2) and Right Panel (3) by screwdriver (not provided). **DO NOT** use any power tools as this may damage the frame and will invalidate any claim.



3

A		10
B		2
C		12
E		6
H		2

 
Insert hardware part A & part B using a screwdriver (not provided). Insert hardware part C using a small mallet (not provided).
Fix hardware H with screw E using screwdriver (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

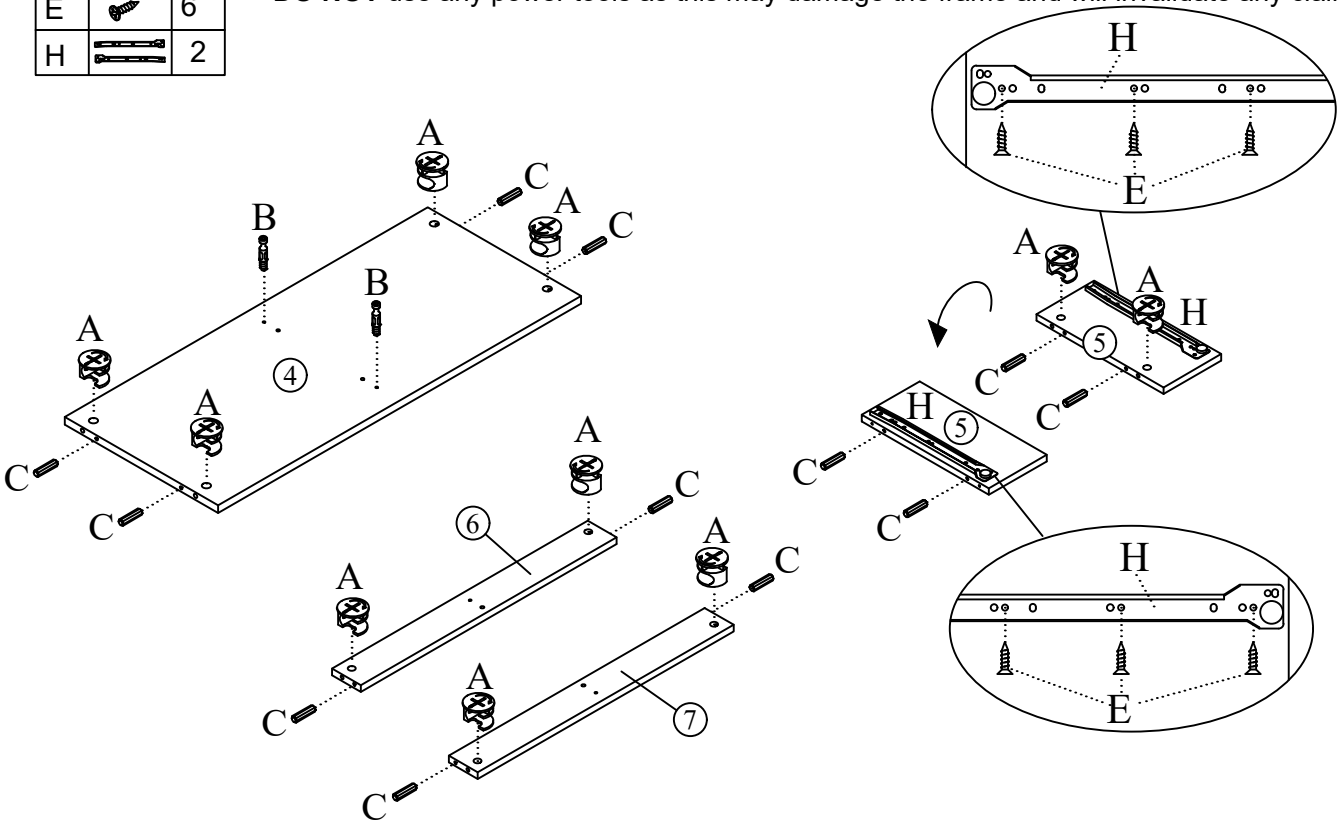

4

L		2
---	---	---

 Attach the Center Divider Panel (5) to Center Panel (4) by screwdriver (not provided). Attach the Front and Back Support Panel (6) & (7) To Center Divider Panel (5) using Screw (L) by screwdriver (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

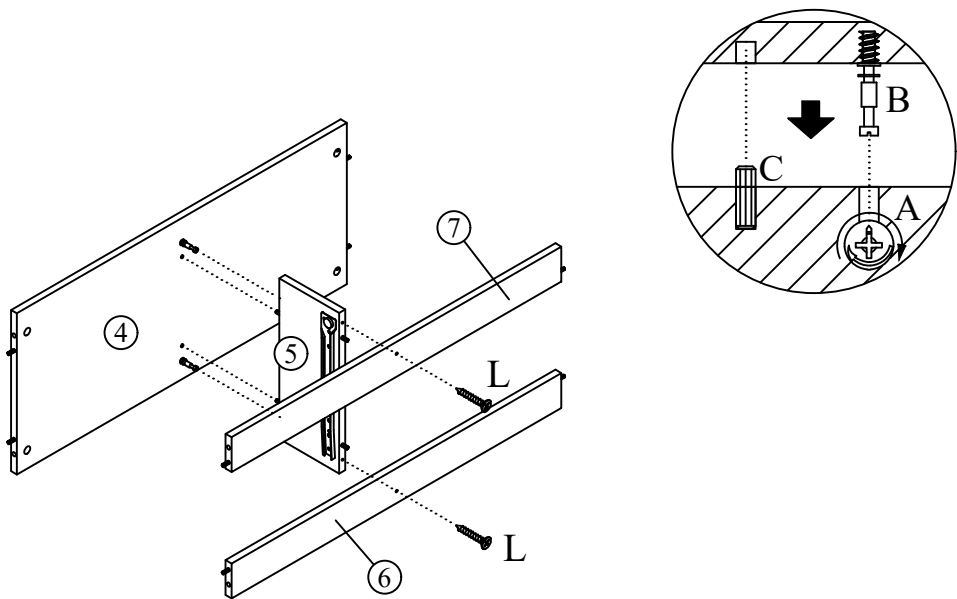


5



Attach the Center Panel (4), Front and Back Support Panel (6) & (7) to Right Panel (3) by screwdriver (not provided).

 Vendor: S000398

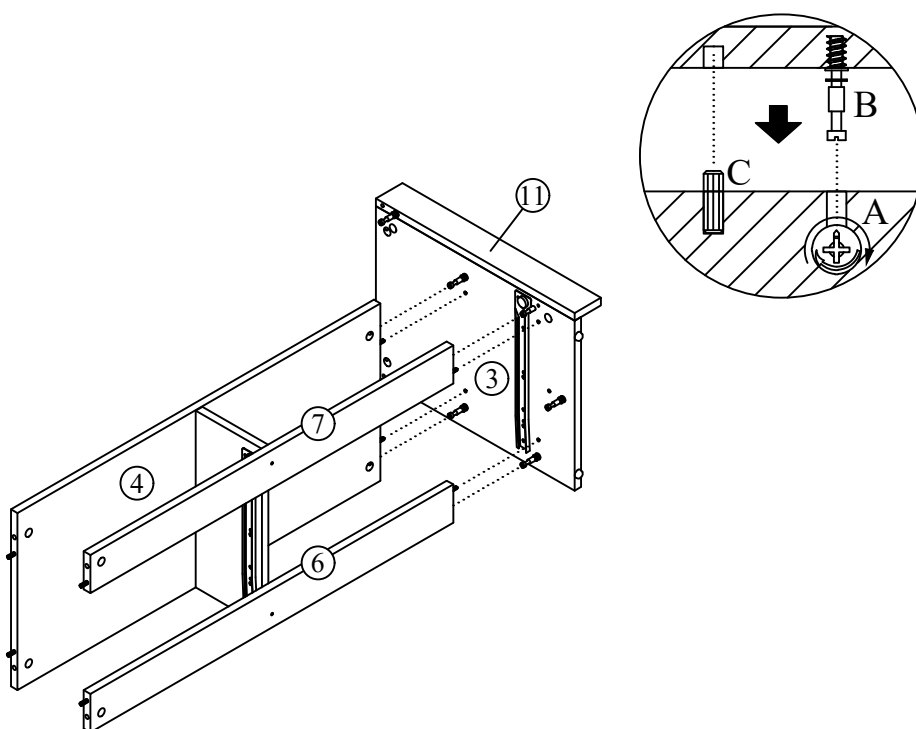DO NOT use any power tools as this may damage the frame and will invalidate any claim.




6

A		10
C		6



Insert hardware part A to panel 8 & 12.

Insert hardware part C using a small mallet (not provided).

 DO NOT use any power tools as this may damage the frame and will invalidate any claim.



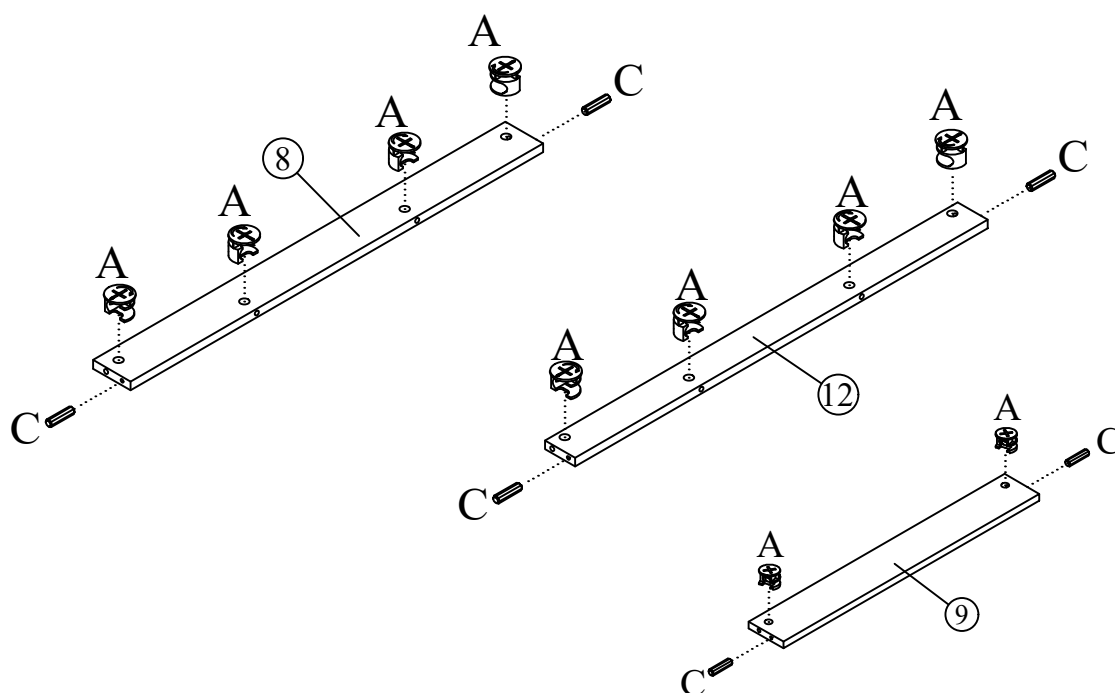


  - 7** Attach the Top Post Panel (12) to Left and Right Panel (4) & (3) by screwdriver (not provided). Meanwhile attach Back Support Panel and Plinth Panel (9) & (8) to Left and Right Panel (2) & (3) as shown by screwdriver (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

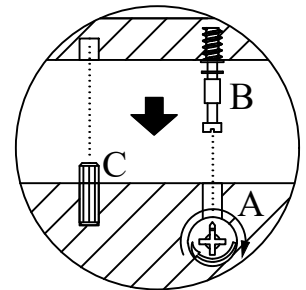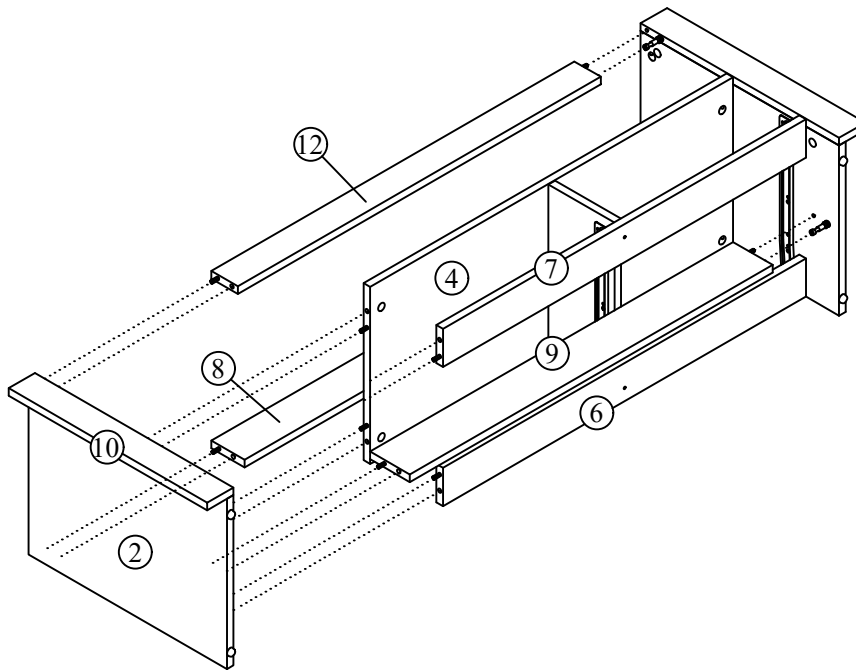**8**

E		2
K		15
M		1

   - Attach the Back Panel (18) with Nail (K) by small mallet (not provided).
 Fix the Hardware (M) with using screw (E) as shown by screwdriver (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

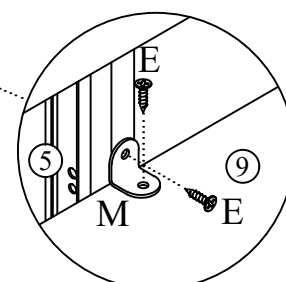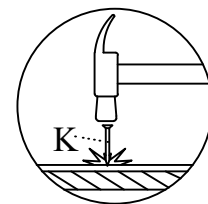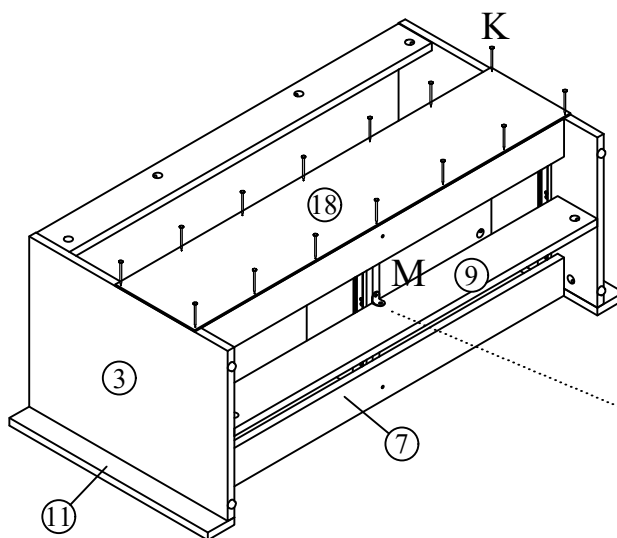


9



Insert hardware part B using a screwdriver (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.


 
Vendor: S000398

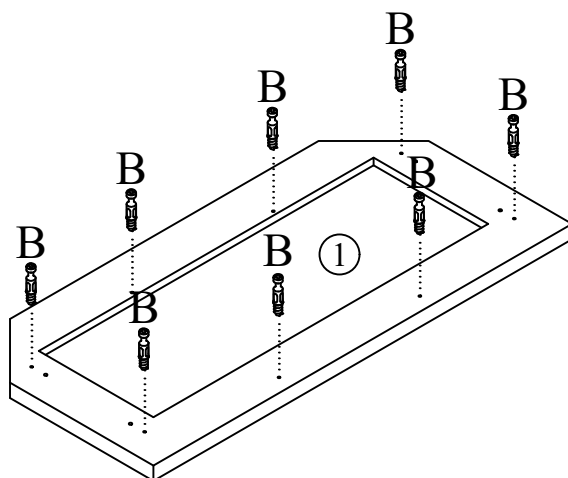

10

Attach the Top Panel (1) to Left ,Right , Back Support & Front Post Panel (2),(3),(7) & (12) by screwdriver (not provided).

  DO NOT use any power tools as this may damage the frame and will invalidate any claim.

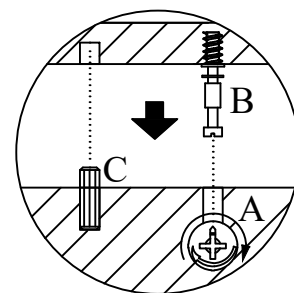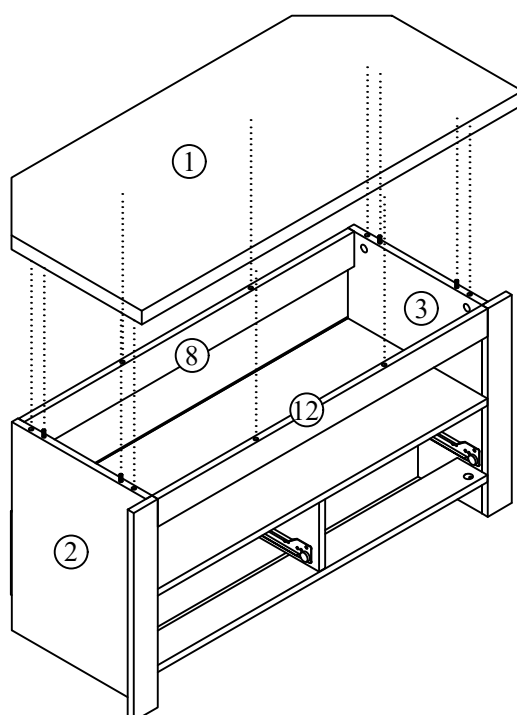

11


A		4
C		4

Insert hardware part A to panel 15 & 16.

Insert hardware part C using a small mallet (not provided).

DO NOT use any power tools as this may damage the frame and will invalidate any claim.

 Vendor: S000398

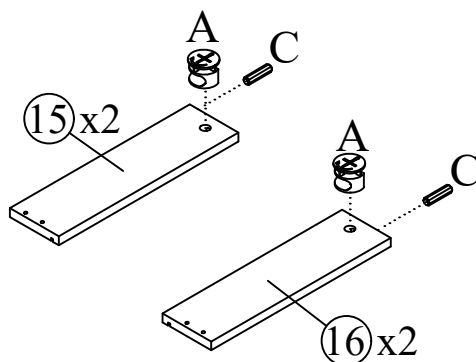


12

D		8
---	---	---


Attach the Drawer Left Panel (15) and Drawer Right Panel (16)

to Drawer Back Panel (14) with screw (D) by screwdriver (not provided).

 
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

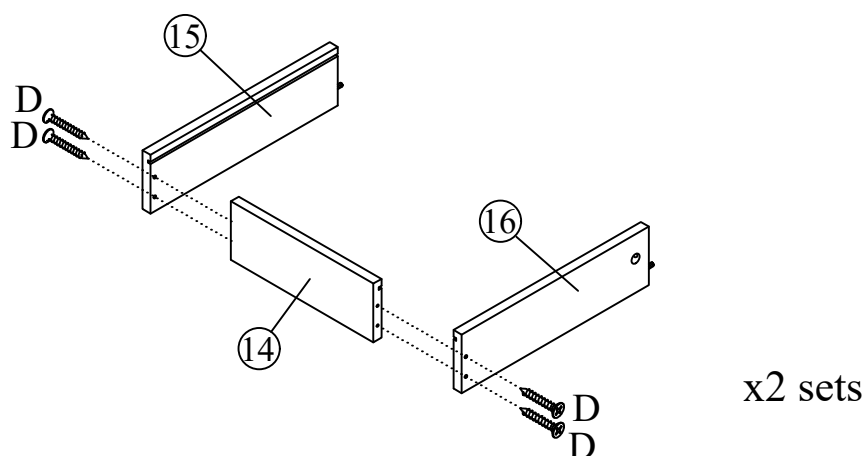



13

B		4
---	---	---

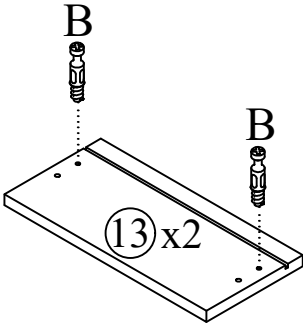 Insert hardware part B using a screwdriver (not provided).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.




14



E		12
I		2

 Insert Drawer Bottom Panel (17) as shown and fix Drawer Front Panel (13) by screwdriver (not provided).
Fix hardware (I) onto the Drawer Left Panel (15) and Drawer Right Panel (16) using screw (E) by screwdriver (not provided).

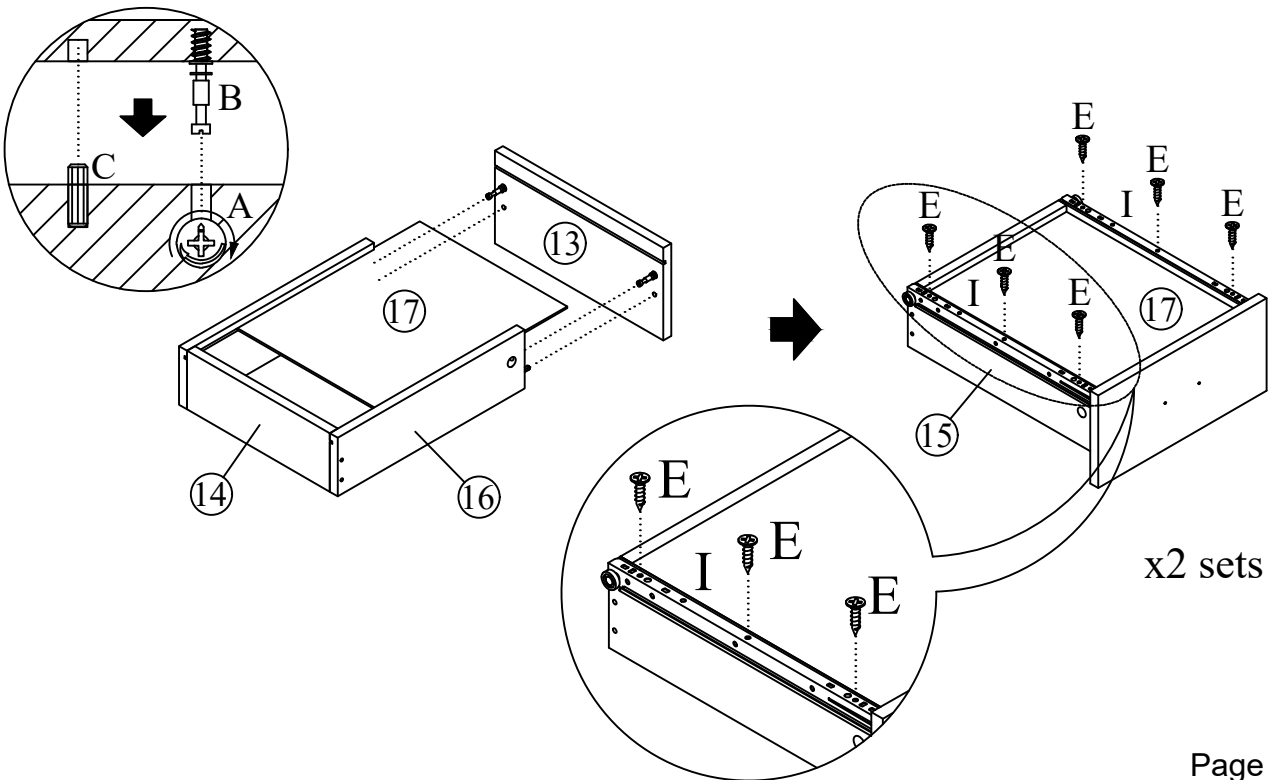DO NOT use any power tools as this may damage the frame and will invalidate any claim.





10


F		4
G		2

Fix Handle (G) using screw (F) onto Head of drawer (13)
by screwdriver (not provided).

Vendor: S000398

   DO NOT use any power tools as this may damage the frame and will invalidate any claim.

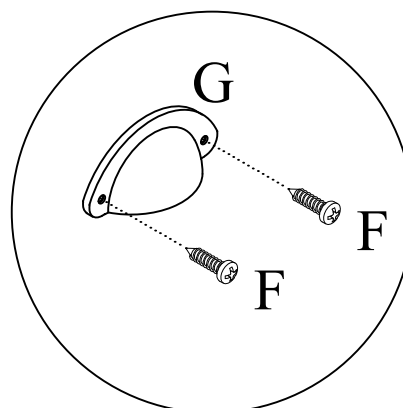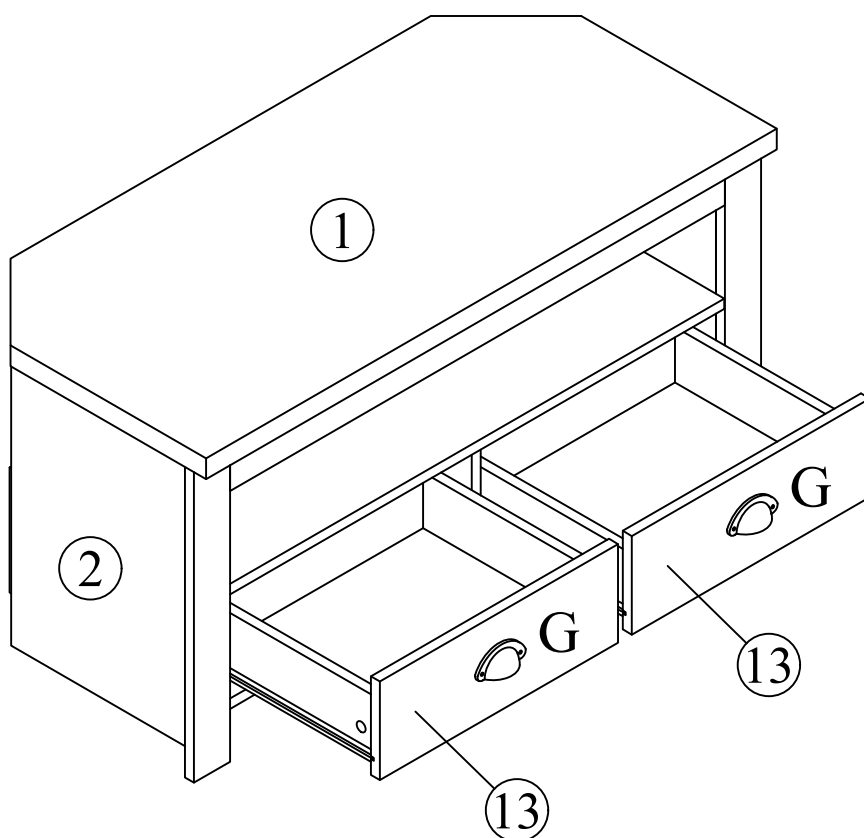

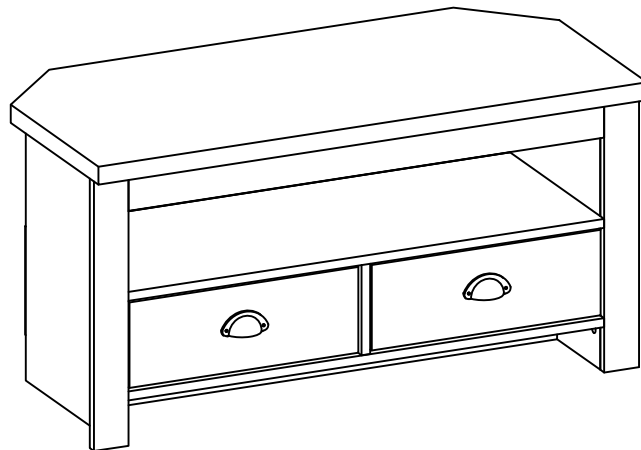

WARNING!

In order to prevent overturning this product must be used the wall attachment device provided. Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent topple over:-

- Use the wall attachment devices provided
- Never allow children to climb or hang on drawers or doors
- Do not overload the drawer beyond maximum recommended loading
- Place heaviest items in the lower drawers or shelves
- Unless specifically designed to accomodate, do not set TV's or other heavy objects on top of this product
- Never open more than one drawer at a time
- Do not hang things from the doors

An attachment device is provided with your product, however you will need to source suitable fixings for your wall type.

If in doubt consult a qualified trades person.

Always ensure that the wall to be drilled into is free from hidden electrical wire, water and gas pipe.

Birlea.

.Additional Information:

.For complete product information, images and dimension diagrams please visit the website www.birlea.com

.If you have any issues with your item please contact the retailer directly you purchased it from who will be able to resolve any issues with Birlea.

.Why don't you send us photos of your assembled furniture to info@birlea.com to be shared in our #birleahome feature on Instagram.