


red kite

IMPORTANT READ CAREFULLY
AND KEEP FOR FUTURE REFERENCE

Instruction leaflet

Feed Me Fold

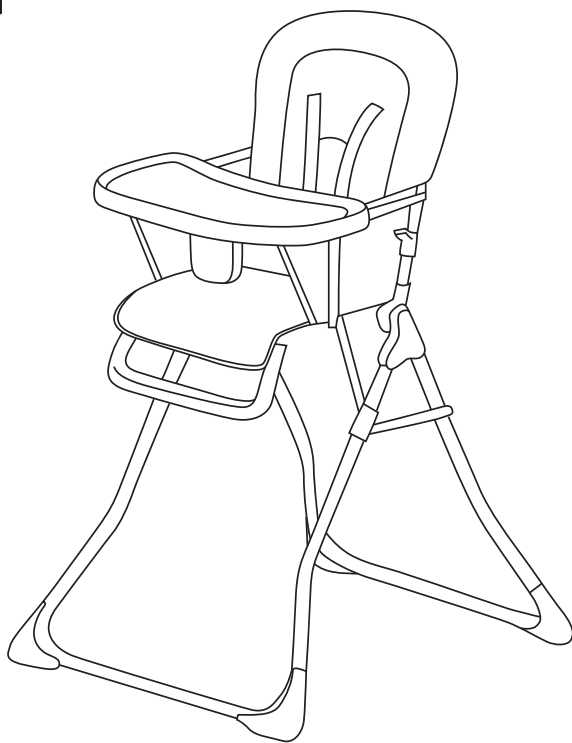

BS EN 14988: 2017 + A2: 2024.


Intended for children who are able to sit up unaided and up to 3 years or a maximum weight of 15 kg.

Customer Care: www.redkitebaby.co.uk

Parts List

Check that you have all the parts for this model before assembling your product.


No tools required.

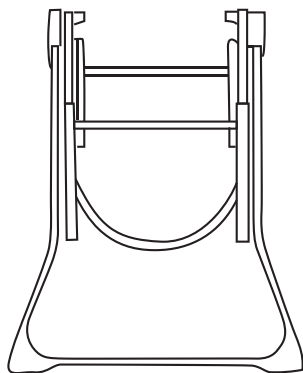


A: Main frame with
seat cover



B: Tray

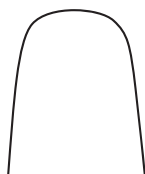


C: Pommel

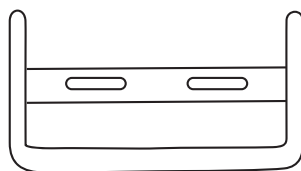

D: Footrest

How to assemble your high chair

Fig 1.

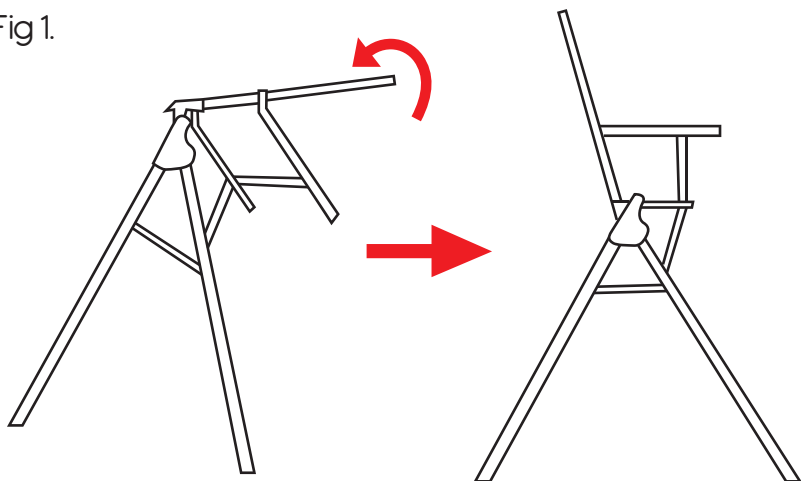

To open the highchair frame.

Pull the top of the backrest of the highchair up and over until it locks in place. You will hear an audible "click" when opened correctly. Fig 1.

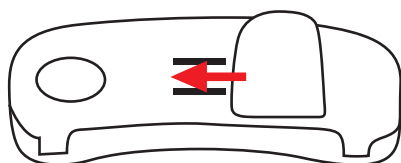


Fig 2.

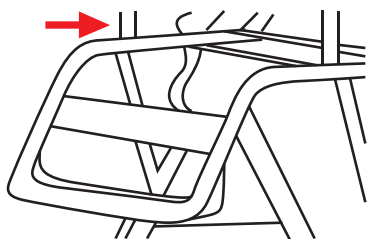


Fig 3.


To assemble the tray.

Slide the pommel into the recess on the bottom of the tray until it locks in place. You will hear an audible "click" when it's assembled correctly. Press the buttons on the bottom of the tray and slide the tray onto the arms of the highchair. Fig 2.

To assemble the footrest. Press in the spring-loaded push pins on the ends of the footrest tube and connect to the bottom of the seat frame. Ensure the push pins are visible through the holes. Fig 3.

Function

Fig 4.

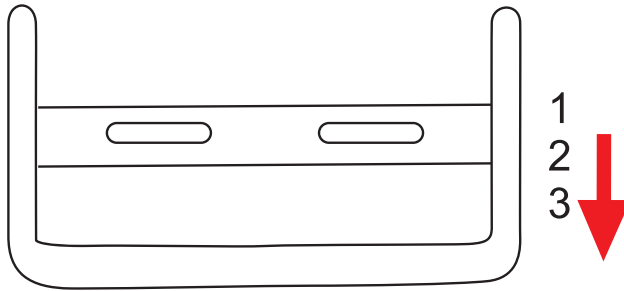


The footrest has three adjustable positions.

To adjust the footrest.

Press in the spring-loaded push pins on the bottom of the footrest to move the footrest up or down. Ensure the pins are located in the same holes on both sides. Fig 4.

Fig 5.

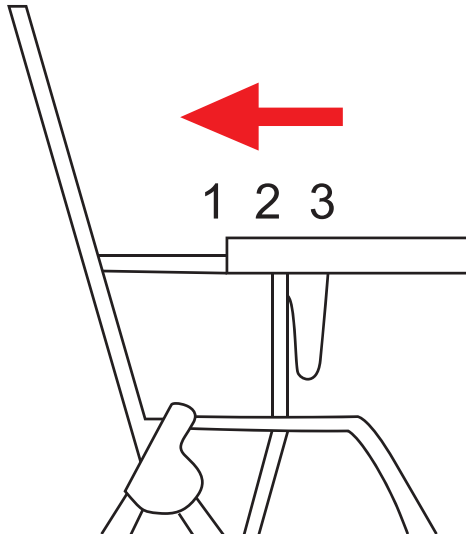

The tray has three adjustable positions.

To adjust or remove the tray.

Press the buttons on the bottom of the tray to select a different position or remove the tray. Ensure each side of the tray is in the same position. Fig 5.

How to fold

Fig 6.


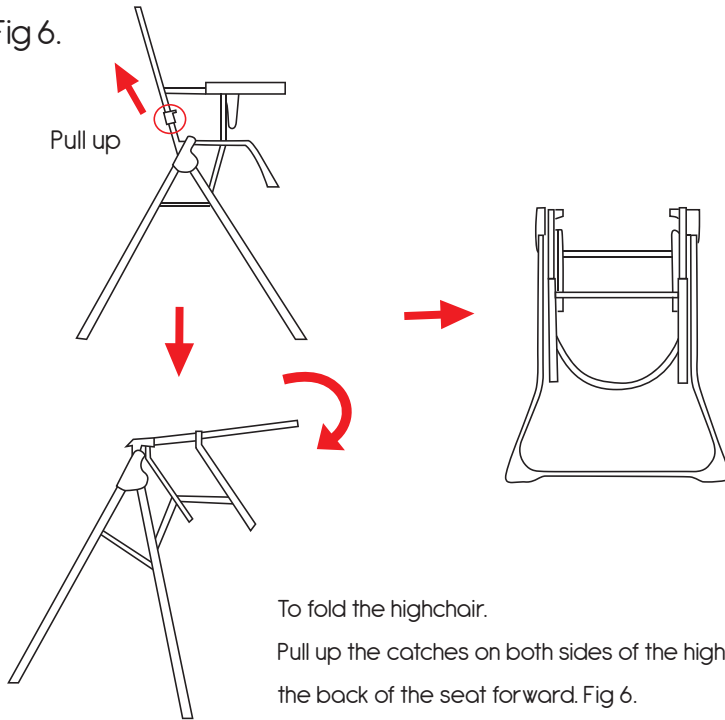


Fig 7.

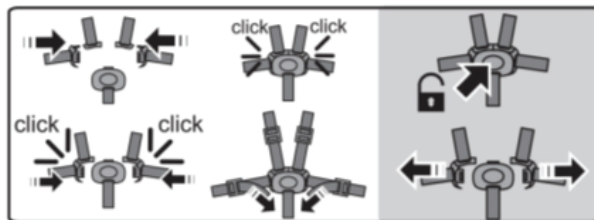

To secure and adjust the harness.

Slide the waist straps on to the shoulder straps and push into the crotch strap to attach the harness. Press the button in the centre of the crotch strap to release the harness.

Adjust the waist and shoulder straps by means of the sliders to achieve a snug comfortable fit. Fig 7.
WARNING! Always use the restraint system.

General care:

The correct use and maintenance of this high chair is essential.
Always ensure the high chair is stored in a dry place to prevent mould or mildew developing.
Avoid leaving your high chair in direct sunlight for prolonged periods of time as this may cause premature fading of colours.

Cleaning:

Metal parts may be cleaned with a damp cloth and wiped dry with a soft cloth.
Clean the harness with a mild soap and water solution. Rinse and wipe dry.
Clean plastic parts with a mild soap and water solution. Rinse and wipe dry.
Do not use abrasive cleaners or bleach.
The tray is not removable or dishwasher safe.

Maintenance:

Check that nothing is broken, torn or missing and that no sharp edges have been exposed. Stop using the highchair immediately if any are found.
Inspect all studs, nuts and screws for tightness.
Check that all straps and harness attachment points are in good working order.
Do not use replacement parts other than those approved by the manufacturer or distributor.
Failure to do this may invalidate your warranty.

Manufactured By:

The Red Kite Baby Co Ltd
35 Lavenham Road
Beeches Industrial Estate
Yate
Bristol
BS37 5QX
UK

Authorised Representative:

Mum n Me
Triq is-Suq
Zejtun
ZTN1420
Malta

Safety Warnings:

WARNING Your child's safety is your responsibility.
WARNING Never leave the child unattended.
WARNING Do not use the high chair unless all components are correctly fitted and adjusted.
WARNING Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product.
WARNING Falling hazard: Prevent your child from climbing on the product.
WARNING Be aware of the risk of tilting when your child can push its feet against a table or any other structure.
Keep children away when unfolding and folding the product to avoid injury.
Do not use for a child weighing more than 15 kgs.
Only suitable for children who can sit unaided.
Always use the 5 point harness provided. Ensure that it is correctly fitted and adjusted before each use.

Adult assembly required. Always ensure that the high chair has been correctly assembled and that all locking devices have engaged before placing your child in the high chair.
Ensure that all parts of your child's body are clear of the high chair when assembling, folding or making adjustments.
Do not allow other children to play with this high chair. It is not a toy. Store safely out of reach when not in use.
Never carry the high chair when the child is in it.
Please lift your child in and out of the highchair. Do not allow children to stand on the footrest (where provided) and seat or to climb in and out of the high chair.
Only use the high chair on a level floor surface.
Never add accessories or fittings that have not been approved by the manufacturer.

Tested to: BS EN 14988 : 2017+A2 : 2024

Customer Care: www.redkitebaby.co.uk

