

YOUR RANGEmaster GUARANTEE

At Rangemaster, we take all our customer feedback seriously. Feel free to contact our Customer Service Team, on **0330 1230 596**, who will be more than happy to assist you.

This product is guaranteed for 24 months from the date of the original purchase. Register your appliance within 28 days of purchase to qualify for an additional year free of charge. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This warranty does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.
Imported by G2S LIMITED, WIGAN, WN2 4AY.

RANGEmaster

CLASSIC COLLECTION



KETTLE

RANGEmaster

For Customer Services
please call **0330 123 0596**
Or visit us at
www.rangemaster.co.uk

Show off your kitchen with...

This is
#MyRangemaster



WHY RANGEMASTER?

Rangemaster's original range cooker, made in 1830, was a revelation to the cooking fraternity. They are still manufactured in Royal Leamington Spa, Warwickshire, benefiting from over 200 years of manufacturing excellence. Built from experience Rangemaster is famous for its distinctive design, style and functionality. The Classic kettle and toaster collection share this original dedication for quality and innovation.

Our products are made from the highest quality materials to ensure longevity, and are built to stand the test of time with everyday use in mind. They're a perfect addition to any kitchen. The Classic kettle and toaster collection has a two year guarantee plus you can register your appliance within 28 days of purchase to qualify for an additional year free of charge. Behind the guarantee sits a host of internationally recognised standards and strict quality controls that are in place at every stage during design, development and manufacture.


*Terms and conditions apply. For more information visit www.rangemaster.co.uk

YOUR RANGEmaster CLASSIC COLLECTION KETTLE





RMKTJK101
ALSO AVAILABLE IN BLACK




BEFORE YOU START

- Remove all stickers & labels, and clean the outside of the kettle with a damp cloth.
- Adjust the length of the cord by wrapping around the base as desired, then plug in to a wall socket.
-  Ensure the kettle is not too close to power socket as steam from the kettle may cause an electrical hazard
- Place the Kettle on the base and ensure that it is stable on the surface.
- Fill the kettle to the maximum fill line (1.7L) & switch on to boil the water. Dispose of the water in the kettle – do not drink.

CLEANING & MAINTENANCE

- Unplug the kettle before cleaning
- Let the kettle cool before cleaning
-  Do not use abrasive detergents or cleaning materials
-  Do not use any chemicals containing bleach, chlorine or ammonia
- To clean the filter, open the lid and remove from the spout. Place under running water and using a soft brush, wipe clean. Replace back in kettle correctly.
- It is safe to use descalers in the kettle. Use the product as described by the manufacturer, then boil 2 kettles of water to remove any residue.

USING YOUR KETTLE

- Remove the kettle from the base, and lift the lid to fill from the top.
-  We recommend you always fill from the lid; however the spout can also be used but care must be taken to ensure water does not spill down the outside of the kettle.
- Fill the kettle with the desired amount of water by using the gauge on the rear, or the 1 & 2 cup indicators inside the kettle.
- Close the lid & replace on the base
- Press the On/Off switch to start the kettle boiling
- When the kettle has boiled, the switch will click off automatically
- Pick up the kettle & pour into the desired receptacle taking care not to spill the water
-  Boiling water poses a scalding hazard. Take care to ensure the water does not spill or come into contact with your skin.
-  The walls of the kettle will become hot after boiling. Take care to ensure the kettle does not come into contact with your skin.

IMPORTANT SAFETY INSTRUCTIONS

- Take care opening the lid after boiling as steam may escape which can cause scalding.
- Wait a few seconds after boiling before pouring to prevent spitting and spillages caused by the bubbling water
- Do not fill above the Max Fill line (1.7L)
- Do not under-fill the kettle below the internal 1 Cup marker
- Take care when pouring not to over tilt as water may then escape from the lid, or splash out of the spout.
- This kettle shall only be used with the power base provided.



This symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.