



**DMD**  
COLLECTIVE

DMD128

---

# 7kg Spin Dryer

---

## Information for use

Thank you for purchasing this 7kg Spin Dryer from DMD Collective. This product is designed to provide an efficient drying facility for those with limited home space.

Before using this 7kg Spin Dryer please read through all the information in this document and keep it for future reference.

## Health and Safety Guidelines

- Always unplug the unit when not in use, before cleaning, or when adding or removing parts. Please read the instructions carefully before using any appliance.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and use can damage the appliance and cause injury to the user.
- The appliance is intended for household use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Do not let children use this appliance unsupervised.
- Check the power cord and plug regularly for any damage. To prevent an electrical hazard, the manufacturer will need to replace the cord or plug if it is damaged.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit is damaged, take it in for examination and/or repair by an authorized service agent.
- To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug, or power cord to water or any other liquid.
- Never immerse the unit in water or any other liquid for cleaning purposes. Do not reach for an appliance that has fallen into the water. Unplug immediately.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains.
- Injury, fire, or electric shock could result from the use of accessory attachments that the manufacturer has not approved or supplied.
- A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- Do not let the cord hang over the edge of a table or counter.
- Ensure that the cord is not in a position where it can be pulled inadvertently.
- Do not allow the cord to touch hot surfaces, and do not place it on or near a hot gas or electric burner or in a heated oven. Do not place the unit on a hot surface.
- This product should not be installed in bathrooms or areas prone to rain or humidity.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended purpose.
- Do not carry the unit by the power cord.
- Do not leave this appliance unattended during use. An appliance should never be left unattended when plugged in.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use or for repairs carried out by unauthorised personnel.
- In the event of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment, or repair.
- Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions will affect the safe operation of this machine.
- We do not recommend using extension cords with this product.
- Do not put your hand into the spin dryer before it stops completely.
- If the spin bucket does not stop rotating within 15 seconds after opening the spin cover, stop using it and request repair.
- When spinning, use the cover correctly to prevent the laundry from flying out of the spin bucket.
- Do not block the vents or place on carpeted areas that may block the vents.
- Do not place hot or heavy items on the dryer to avoid deformation of plastic parts or damage to parts.
- To prevent water damage, please only refill the spin barrel after it has stopped spinning. Never refill while the spin barrel is in motion, as water could splash onto electrical components and cause damage.
- When cleaning the housing of the machine, wipe it thoroughly and wipe out dirt. When unit is very dirty, please use a neutral liquid soap to clean.
- Store in a cool, dry place.

## Installation & Operation:

When using the spin dryer, the clothes must be placed flat and pressed flat with the clothes gasket. There must be no unevenness (Fig. 1).

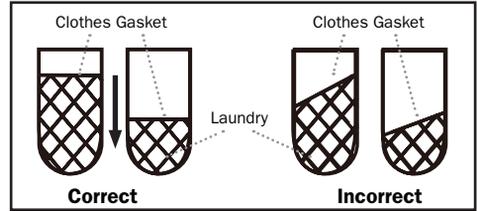


Fig.1

## Loading Your Clothes for Optimal Performance:

### Step 1 - Sort and separate clothes:

- By Size: Group similar-sized items together to keep larger ones from trapping or damaging smaller ones.
- By Weight: Distribute heavy and light items evenly throughout the dryer to maintain balance during the spin cycle.

### Step 2 - Untangle clothes before loading:

- Check for tangled items, and gently separate them to avoid uneven loading and potential damage.

### Step 3 - Load the dryer for balanced spinning:

- Load clothes one at a time, positioning them around the outer edge of the drum for even distribution, avoiding piles or all heavy items on one side.
- Avoid overloading the dryer with heavy items like towels or jeans.
- Once fully loaded, gently press down on the clothes to create a smooth surface.
- Use your hand to manually spin the drum. If it feels uneven, redistribute the clothes until it spins smoothly.

### Step 4 - Monitor during the spin cycle:

- Start the spin cycle and observe the dryer. Excessive vibration or unusual noises may indicate an unbalanced load.
- If necessary, stop the cycle, open the dryer redistribute the clothes, and resume the spin cycle, monitoring again for balanced operation.

## Control Panel & Parts:

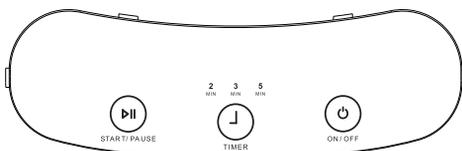


Fig.2

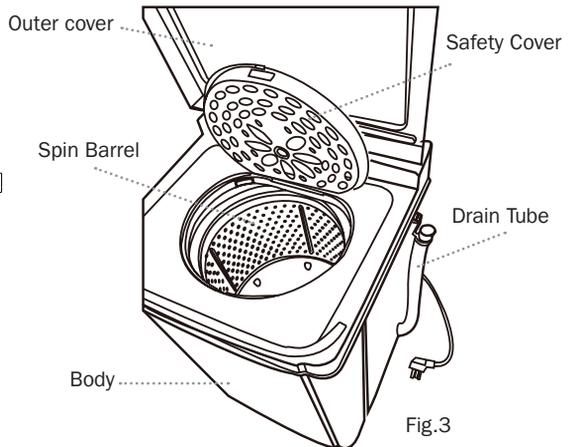


Fig.3

## Operation:

1. Plug the dryer into the mains supply, place the clothes flat in the tub, insert the clothes gasket, and close safety cover.
2. Close the pressure cover correctly and press it tightly; otherwise, the laundry will move.
3. Close and secure the outer cover, then lower the drain tube so that it empties into a drain or suitable container during operation.
4. Press the on/standby button on the control panel (Fig. 2). Determine the spin time based on the amount of laundry, and then press the start button to start the cycle.

NOTE: During the spin cycle, the drum will stop rotating when you open the dryer's outer cover and resume rotating again after you close the outer cover.

# Technical Support

If you require any technical support for your product within the warranty period, please contact us on **support@dmdcollective.co.uk** and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

## WEEE





The WEEE symbol  on this product means that this unit should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

## IMPORTANT: ADDITIONAL SAFETY INFORMATION

This device is **NOT** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the device by a person responsible for their safety.

## Schematics

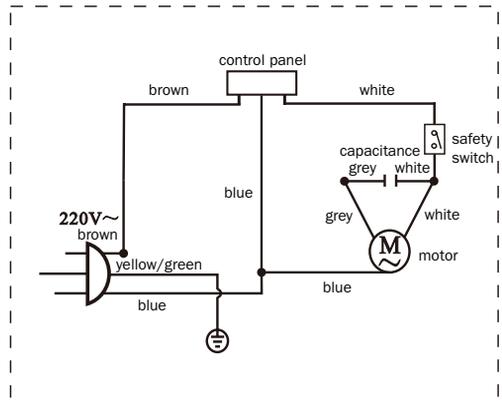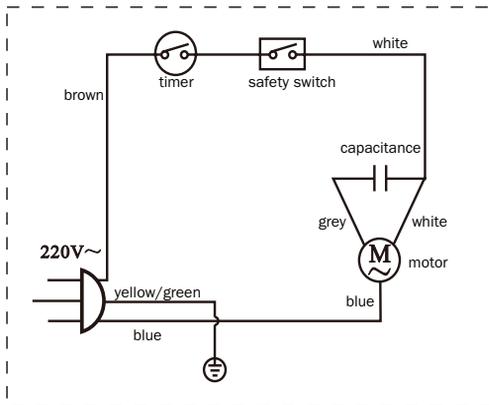

## Technical Specifications

<b>Product name</b>	DMD 7kg Spin Dryer
<b>Supplier code</b>	DMD128
<b>Voltage</b>	220-240V 50/60Hz
<b>Power Spin</b>	320W
<b>Spin Capacity</b>	7kg



**Ace Supply Co Ltd.**,  
Suite GA, Marsland House,  
Marsland Road, Sale M33 3AQ

**For Product Support:**  
E: support@dmdcollective.co.uk  
T: +44 (0)161 543 6400

**EU Regd. Address:**  
Ace Supply Co (Europe) Ltd.,  
Dublin 2, D02 A098, ROI

[www.dmdcollective.co.uk](http://www.dmdcollective.co.uk)