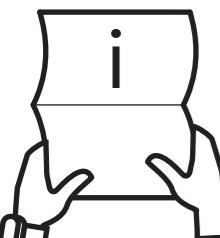
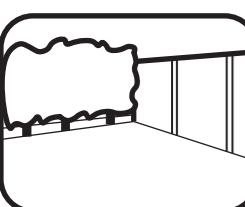


SI-100-001-0005

10X6 APEX / REVERSE APEX SHIPLAP SHED.


**BEFORE YOU START PLEASE READ THE INSTRUCTIONS CAREFULLY**

- Check the pack and make sure you have all the items listed in the parts list provided.
- When you are ready to start, make sure you have the right tools at hand (not supplied - see the equipment list on next page).
- Ensure there is plenty of space and a clean dry area for assembly.
- Ensure you have enough time to build the product to ensure the building is water tight.

**LOCATION FOR YOUR GARDEN BUILDING**

A minimum of 600mm should be left around the perimeter of your garden building to allow access for maintenance, annual treatment and to allow air flow around the building.

Where possible you should avoid placing your garden building underneath large trees to prevent the tree causing damage to the building.

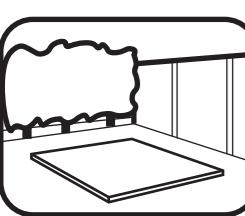**BUILDING A BASE**


When thinking about where the building and where the base is going to be constructed:
Ensure that there will be access to all sides for maintenance work and annual treatment.

Ensure the base is level and is built on firm ground, to prevent movement. Refer to the contents page for the base dimensions. The base should be slightly smaller than the external measurement of the building, i.e. The cladding should overlap the base, creating a run off for water. It is also recommended that the floor be at least 25mm above the surrounding ground level to avoid flooding.

**TREATMENT**

Once your garden building has been installed it will need to be treated within 14 days (weather permitting) and annually to prevent the timber from deteriorating and to waterproof it. This is required to maintain the anti-rot guarantee.

Dip Treated buildings - Require a preservative treatment to protect against rot and decay and a waterproof treatment to prevent water ingress
Pressure Treated buildings - Require a waterproof treatment to prevent water ingress

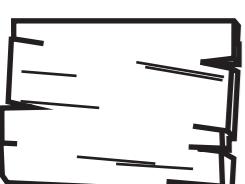**TIMBER**

As with all natural materials, timber can be affected during various weather conditions. For the duration of heavy or extended periods of rain, swelling of the wood panels may occur. Warping of the wood may also occur during excessive dry spells due to an interior moisture loss. Unfortunately, these processes cannot be avoided but can be helped. It is suggested that the outdoor building is sprayed with water during extended periods of warm sunshine and sheltered as much as possible during rain or snow.

Whilst all products manufactured are made to the highest standards of safety and in the case of children's products independently tested to EN71 level, we cannot accept responsibility for your safety whilst erecting or using this product.

**x2**

All buildings should be erected by two adults.

**2mm Drill bit**

For ease of assembly, you **MUST** pilot drill all screw holes and ensure all screw heads are countersunk.



For ease of assembly, you will need a tape measure to check dimensions of components and fixings.



Winter = High Moisture = Expansion
Summer = Low Moisture = Contraction

**CAUTION**

Every effort has been made during the manufacturing process to eliminate the prospect of splinters on rough surfaces of the timber. You are strongly advised to wear gloves when working with or handling rough sawn timber.

****Protim Aquatan T5 (621)****

Your building has been dip treated with Aquatan.

Aquatan is a water-based concentrate which is diluted with water, the building has been treated by the correct application of Aquatan solution and then allowed to dry.

Aquatan is a decorative finish to colour the wood, which is applied industrially to timber fence panels and garden buildings.

Aquatan undiluted contains: boric acid, sodium hydroxide 32% solution, aqueous mixture of sodium diethyl sulfoxosuccinate and alcohols: 2, 4, 6-trichlorophenol.

REGISTER FOR YOUR 15 YEAR ANTI-ROT GUARANTEE TODAY

In all instances for assistance with your product or to register your anti rot guarantee, please contact us via our customer portal


www.mglogistics.co.uk

Mercia Garden Products Limited, Sutton On Trent, Newark, Nottinghamshire, NG23 6QN

Screws & Nails

Measure overall length

Bolts

Measure under the head



TO DO LIST

- Find a suitable location to build (see *front cover for further information*).
- Build a base (see *front cover for further information*).
- Check the base is flat, level, clear of debris and has 60cm clearance on all sides.
- Check you have the required equipment / tools.
- Check you have all the product items listed (*if you have missing or damaged parts please scan the QR code below to visit our online customer portal*).
- Install the product as per the step by step instructions within this pack.
- Prepare the product ready for treatment (this may include sanding).
- Apply a preserving and a waterproofing treatment within 14 days (*weather permitting*) of installation (*pressure treated products do not require a preserver*).
- Register for your anti rot guarantee (*scan the QR below*).
- Tidy the build area and dispose of any remaining parts responsibly.
- Maintain your building (*see the manufacturers recommendations at the back of this pack*).

EQUIPMENT LIST

- Hammer
- Flat Head Screwdriver
- Drill
- Drill Bit Set
- Phillips and Slotted Bit Sets
- Tape Measure
- Hand Saw
- Spirit Level
- Ladders/Steps
- Stanley Knife/Cutting Tool
- Sand Paper
- Gloves
- Silicone (For Windows Only)
- Sealant Application Gun
- Wood Filler (Optional)
- Timber Preservative Treatment (*not pressure treated products*)
- Timber Water Proofing Treatment
- Treatment Mixing Stick
- Paint Brush/Sprayer/Roller

NEED EXTRA SUPPORT

If you are unsure that your base preparation will be suitable, please contact us via our customer portal to discuss this further.

Alternatively, you can visit our website or MGP Logistics Online Portal for some further shducation.

Website:

<https://www.merciagardenproducts.co.uk/sheducation>

MGP Logistics Online Portal:

<https://www.mgplogistics.co.uk/>

Here you will find plenty of useful information that'll help with most pre-installation and maintenance queries.

**ANY QUESTIONS?**

Scan the QR code to contact us via our customer portal.

NOTES

ACCESSING VIDEO GUIDES...


Some steps within this set of instructions come with an added video guide for your convenience. These can be accessed via the QR code and used to aid you in constructing that step. See below for how to use.

You can also find all the videos on our youtube channel:
<https://www.youtube.com/@merciagardenproducts8716/videos>

1. Find the QR code within the instruction step...

Step.....


Parts Needed- No. QTY 1
No. QTY 1
No. QTY 1

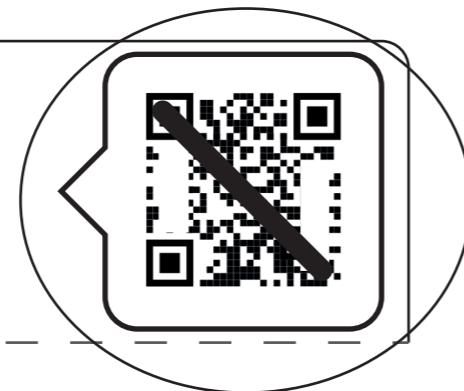

Within the instruction step, there will be an icon in the top right that has a QR code in. This is where the video can be accessed from.

Please note: not every step has a video guide.

2. Open camera app...

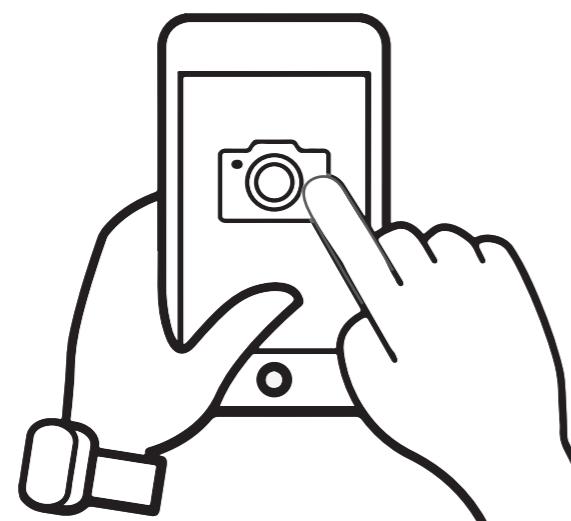

On your personal smart device (phone, tablet etc), open your camera app or QR code scanner app.

ACCESSING VIDEO GUIDES...

3. Scan QR code...



To scan the QR code, hold the camera over the QR code so that it can be seen on the screen. Once the QR code has been registered, follow the prompts on your device to open the video. (This will vary depending on your device.)

Please note: Ensure to use the back camera of your smart device as this will scan the QR code more accurately.

4. Watch the video...



The video guide will now be displayed on your smart device.

Disclaimer: The garden building constructed in the video guides may be constructed differently to your building. Please ensure to read your instructions carefully to avoid error.

What is a Modular Shed?

This Modular shed allows you to choose the layout of your shed, yourself.



The 4ft Door, Window and Plain Panels (No. 4a, 4b & 4c) are all interchangeable, and can be swapped and positioned however you choose.

Please note: The buildings shown may differ in size from your chosen building however the process of interchanging the Panels is the same.



Overall Dimensions: **Base Dimensions:**

Width = 1897mm Width = 1765mm
Depth = 3094mm Depth = 3023mm
Height = 2237mm

Door on the side.

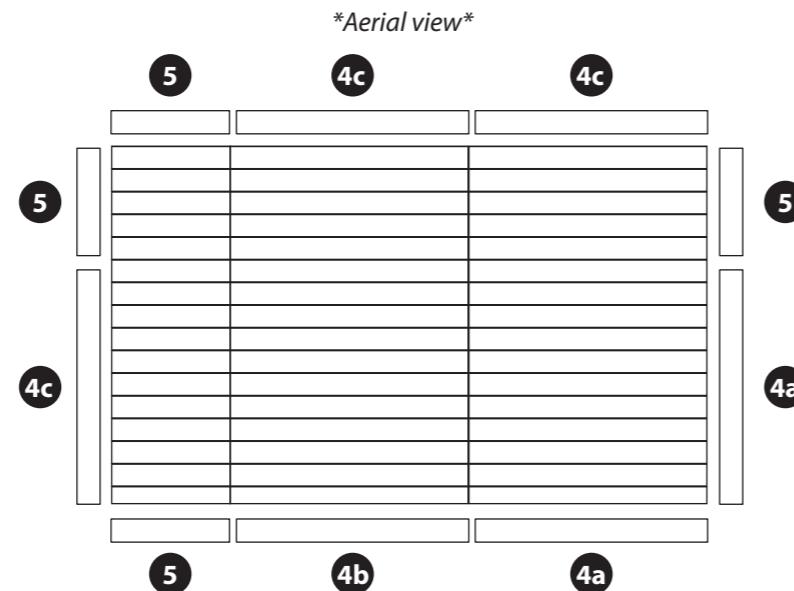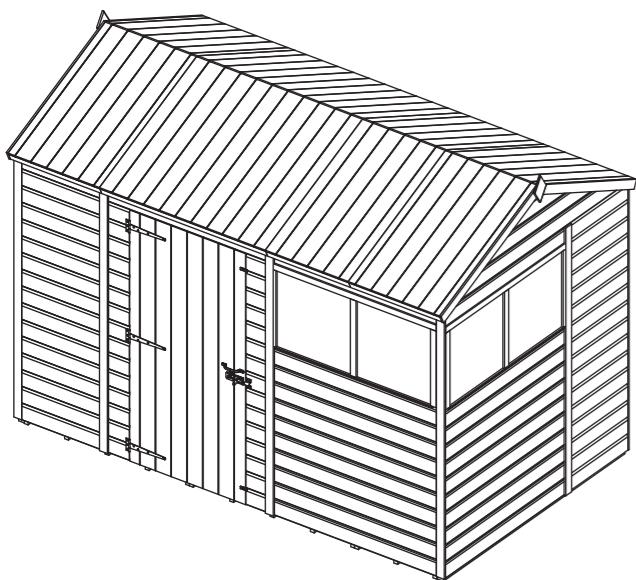


Door on the end.

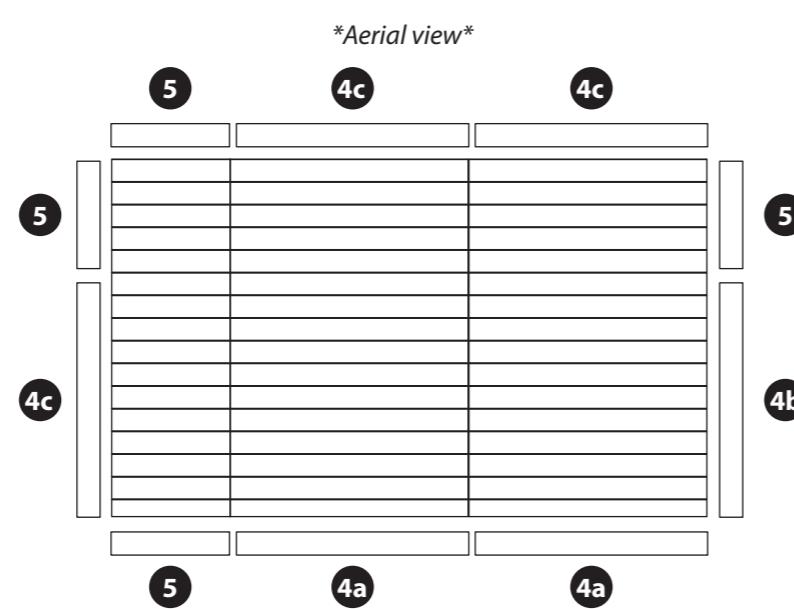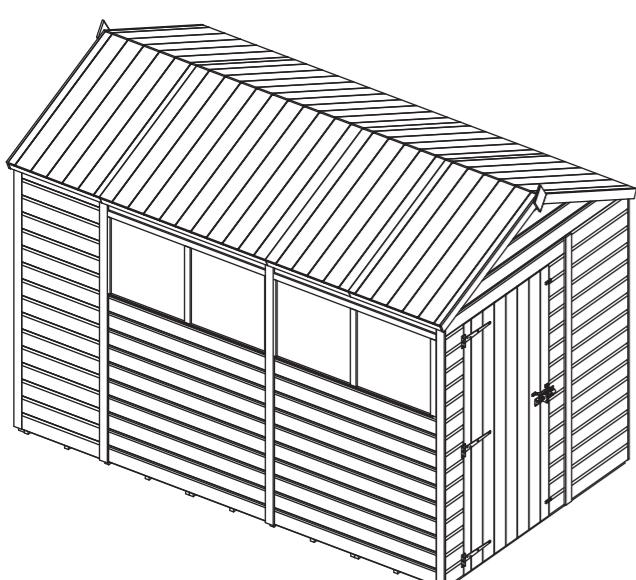


Building Contents:


Tip: Labelling your parts, using a pencil and masking tape, may help you to identify them easier when you need them.

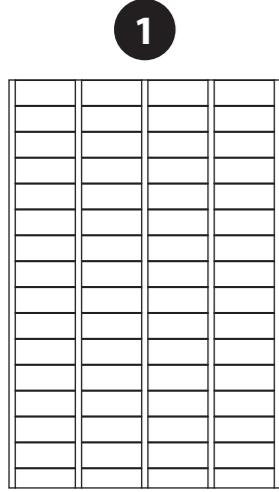

Floor QTY 2
SU-S21MBF1765X1175-V1

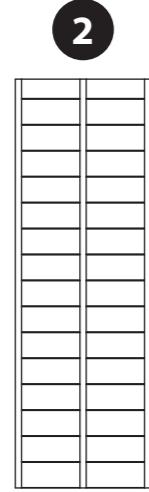

Floor QTY 1
SU-S21MBF1765X585-V1

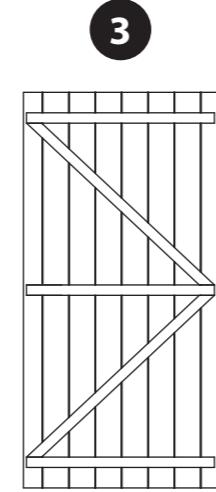

Door QTY 1
SU-S21FBMBZBD824X1680-V1

1

2

3


5

4a


4b

4c


Please note: The 4ft door, window and plain panels (No. 4a, 4b & 4c) are interchangeable, and can be swapped and positioned however you choose.

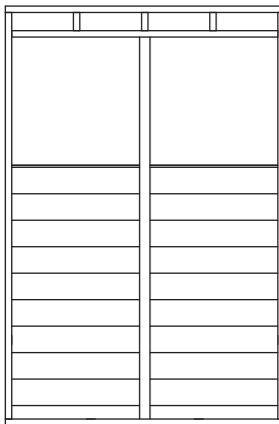


4ft Window Panel QTY 2
SU-01S21SH2CW1180X1802-V1

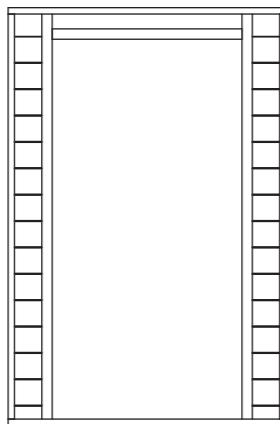

4ft Door Panel QTY 1
SU-01S21SHSD1180X1802-V1

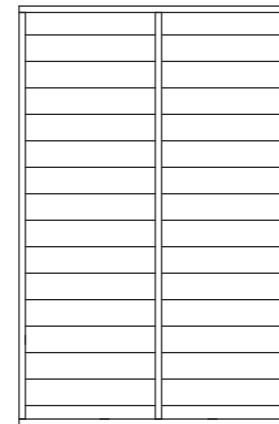

4ft Plain Panel QTY 3
SU-S21SHPPTF1180X1802-V1

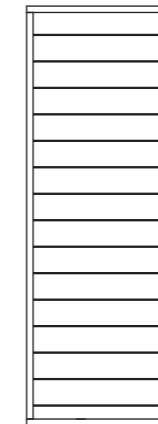


2ft Plain Panel QTY 4
SU-S21SHPPTF590X1802-V1

6


7

8


9




Gable Top QTY 2
SU-S21SHAGT1770X388-V1

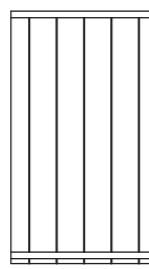

Small 2ft Roof QTY 2
SU-S21MBOHAR1032X590-V1

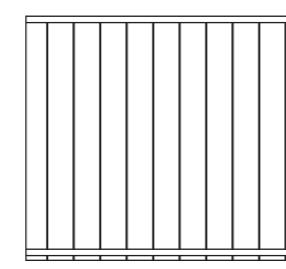

4ft Roof QTY 2
SU-S21MBOHAR1032X1180-V1

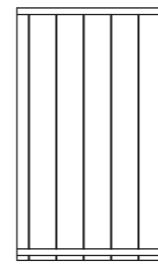

Large 2ft Roof QTY 4
SU-S21MBOHAR1032X650-V1

10

Floor Extension Joist - 44x56x1175mm QTY 2
F4456-1175mm-DT

End View



11

Floor Extension Joist - 44x56x585mm QTY 2
F4456-585mm-DT


End View



12

Ridge Bar - 27x70x1475mm QTY 2
F2770-1475mm-DT

End View



13

Truss Block - 27x44x140mm QTY 2
F2744-G-160mm (Finished length 140mm, 1x angled cut)

End View



14

Truss Frame - 27x44x885mm QTY 2
F2744-G-905mm (Finished length 885mm, 1x angled cut)

End View



15

Truss Support - 27x44x619mm QTY 1
F2744-G-659mm (Finished length 619mm, 2x angled cuts)


End View



16

Truss Support Block - 44x44x176mm QTY 2
F4444-176mm

*You may have more of this part than required.



17

Top Window Strip - 12x40x1180mm QTY 2
S1240-1180mm

End View



18

Window Strip - 12x40x513mm QTY 10
S1240-513mm


End View




19



Plastic Window Cill QTY 2
PI-08-0013

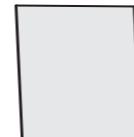

Styrene QTY 4
PI-05-0114




End View

21

Cover Trim - 12x56x2100mm QTY 12**
S1256-2100mm

*You may have more of this part than required.



22

Fascia - 12x60x1500mm QTY 4*
S1260-G-1500mm (1 x angled cut)



23
Finial QTY 2
Shed Diamond Finial



24
T-Hinge QTY 3
PI-07-0021



25
U-Channel QTY 1
PI-07-0013



26
Turn Button QTY 2
PI-07-0034



27
Pad Bolt QTY 1
PI-07-0035



28
Door Handle QTY 1
PI-07-0240




29
Corner Brace QTY 2
PI-07-0012



30
Felt QTY 1**



31
Capping Felt QTY 1**



32
Door Block - 27x44x150mm QTY 2
F2744-150mm

****This part will be longer than needed and requires cutting to size when used. This will be explained when required within the instruction step.**

Screw Pack:

There may be extra screws in the pack.



70mm Screw x 10




40mm Screw x 52



60mm Screw x 12



30mm Screw x 141



50mm Screw x 84




Felt Tacks x 150

Panel Brace Kit Contents:

SU-S214X540BRC-V1-FK

If you have purchased a 'Panel Brace' add-on kit, please see below for the pack contents.



33
Panel Brace QTY 16

F2744-G-540mm

*You may have more of this part than are required.


Missing parts?

Scan the QR code to visit our customer portal where you can quickly raise any missing or damaged parts and get a replacement sent out ASAP.



Screw Pack:

There may be extra screws in the pack.



40mm Screw x 32

Before assembly, please make sure you have a suitable base ready to install your building onto.

Pre-Assembly - Panel Brace add-on ONLY.

If you have not purchased a 'Panel Brace' add-on kit, please skip to step 1.

**Parts needed - No. 4a QTY 2
No. 4c QTY 3
No. 5 QTY 4
No. 33 QTY 14**

Please note: You have been supplied with 16 Panel Braces (No. 33) however you may only need to use 14.

Place the 4ft Window Panels (No. 4a), 4ft Plain Panels (No. 4c) and 2ft Plain Panels (No. 5) face down on a flat and level base.




At the bottom of each panel, locate the Panel Braces (No. 33) onto the internal cladding of the panels and up to the framing, ensuring the framing is flush and level, as shown.

****Tip:** To identify the bottom of the panel, look for where the cladding overhangs past the framing. This is the bottom of the panel.

The 4ft Panels (No. 4a & 4c) should have two braces per panel and the 2ft Panels (No. 5) should have one brace per panel, as shown.

Secure the Braces (No. 33) in place by screwing through the outside of the panel framing into the brace behind using 1x40mm screw per end, as shown.

28x40mm Screws

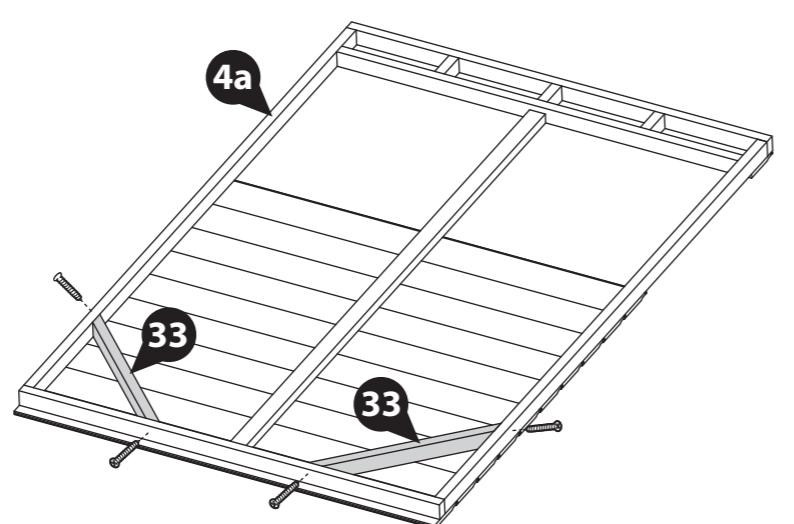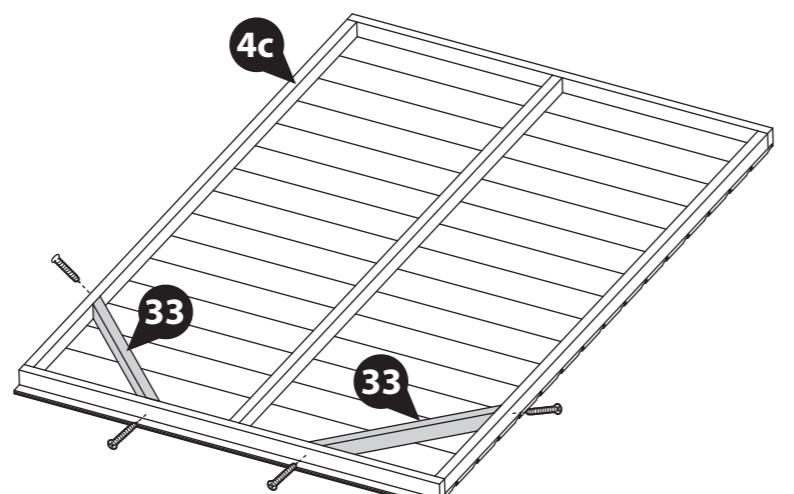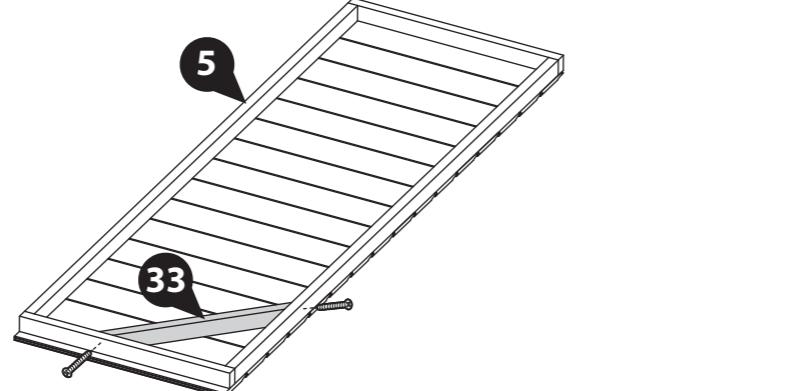

IMPORTANT: Pre-drill before fixing screws.

Step 1

**Parts needed - No. 3 QTY 1
No. 4b QTY 1
No. 24 QTY 3**

Place the 4ft Door Panel (No. 4b) face up onto a flat and level base.


Place the Door (No. 3) within the 4ft Door Panel (No. 4b), ensuring there is equal spacing on each side.

Locate the T Hinges (No. 24) onto the Door and Door Panel, ensuring the hinge lines up with the framing on the inside of the Door.


Secure in place using 7x30mm screws per hinge, ensuring that the screws go through the cladding and into the framing behind.

****PLEASE NOTE**** Before fitting the hinges, ensure the Door is in the correct position depending on which side you want the Door to open. See the illustrations below which show the Doors internal framing.


21x30mm Screws

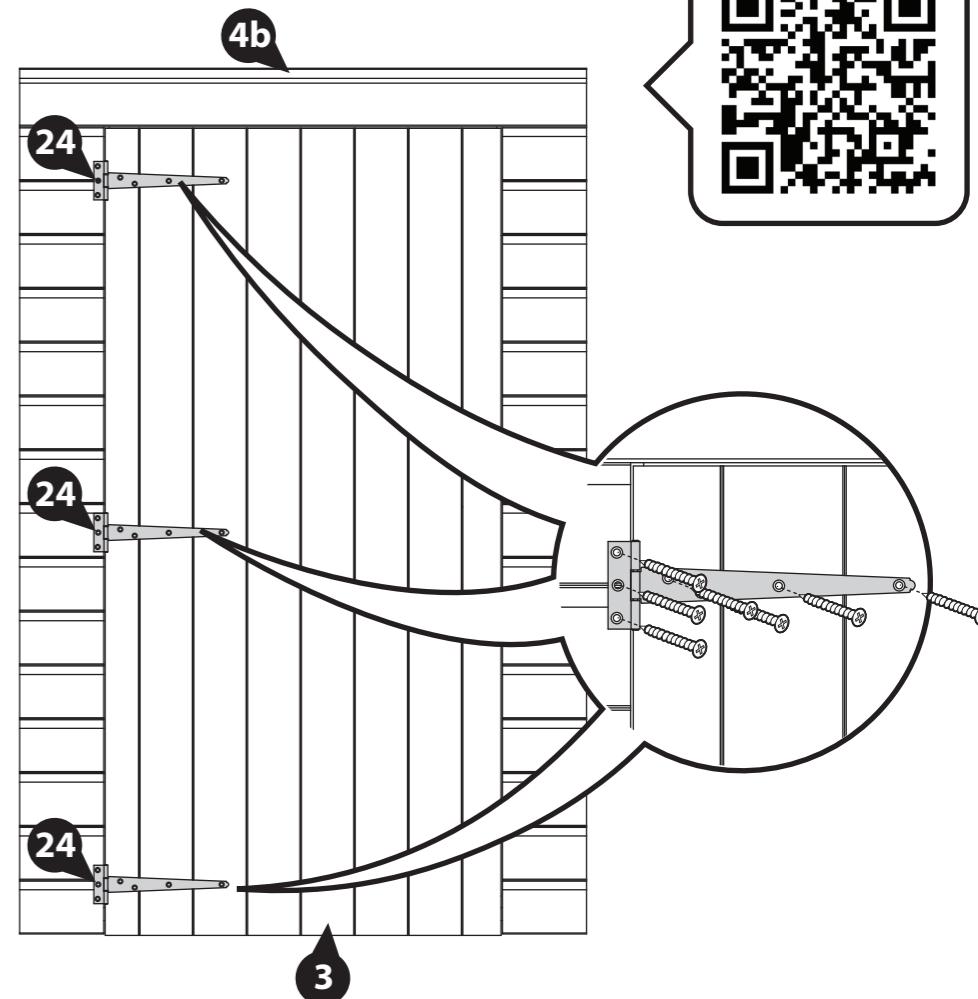

Opens from the Left

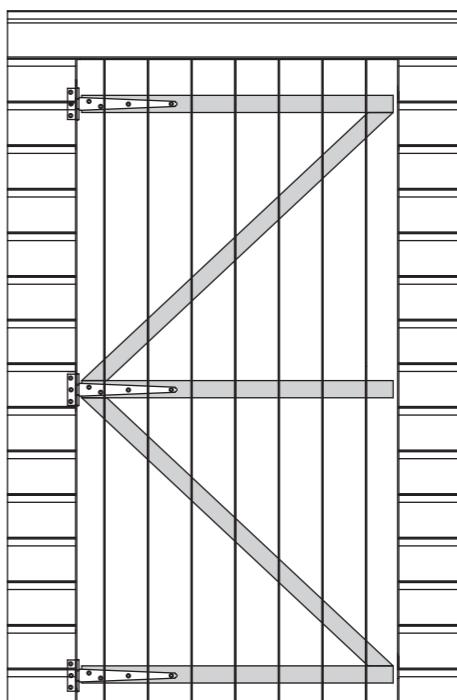

Opens from the Right

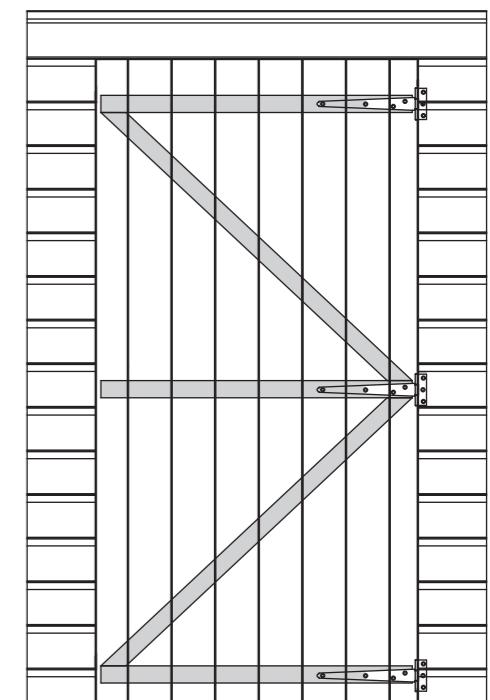

IMPORTANT: Pre-drill before fixing screws.

Step 2

**Parts needed - No. 3 QTY 1
No. 32 QTY 2**

Please note: Your Handle can be positioned horizontally or vertically. Please decide which works best before fitting your door blocks. Follow the relevant step below depending on your choice.

Position one Door Block (**No. 32**) horizontally underneath the central piece of framing on the Door (**No. 3**), ensuring the ends and sides are flush.

Ensuring to support the Block, secure in place using 2x30mm screws, screwing through the outside of the Door cladding into the block behind.


Horizontal handle:

Locate the second Door Block (**No. 32**) on the top of the central piece of framing, on the opposite side to the already fitted block. Ensuring the ends and sides are flush, secure in place using 2x30mm screws, screwing through the outside of the Door cladding into the block behind.

Vertical handle:

Locate the second Door Block (**No. 32**) vertically on the top of the central piece of framing, on the opposite side to the already fitted block. Ensuring the ends and sides are flush, secure in place using 2x30mm screws, screwing through the outside of the Door cladding into the block behind.

4x30mm Screws

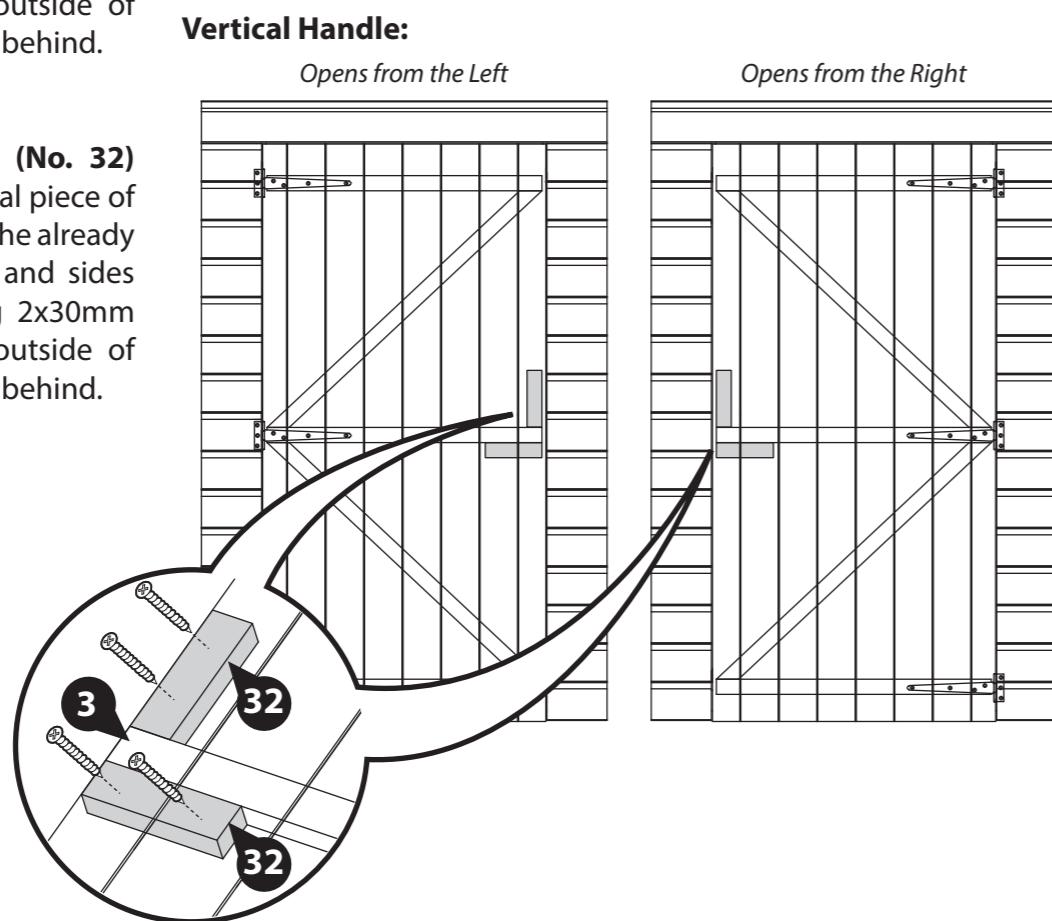


IMPORTANT: Pre-drill before fixing screws.

Horizontal Handle:

Opens from the Left

Opens from the Right

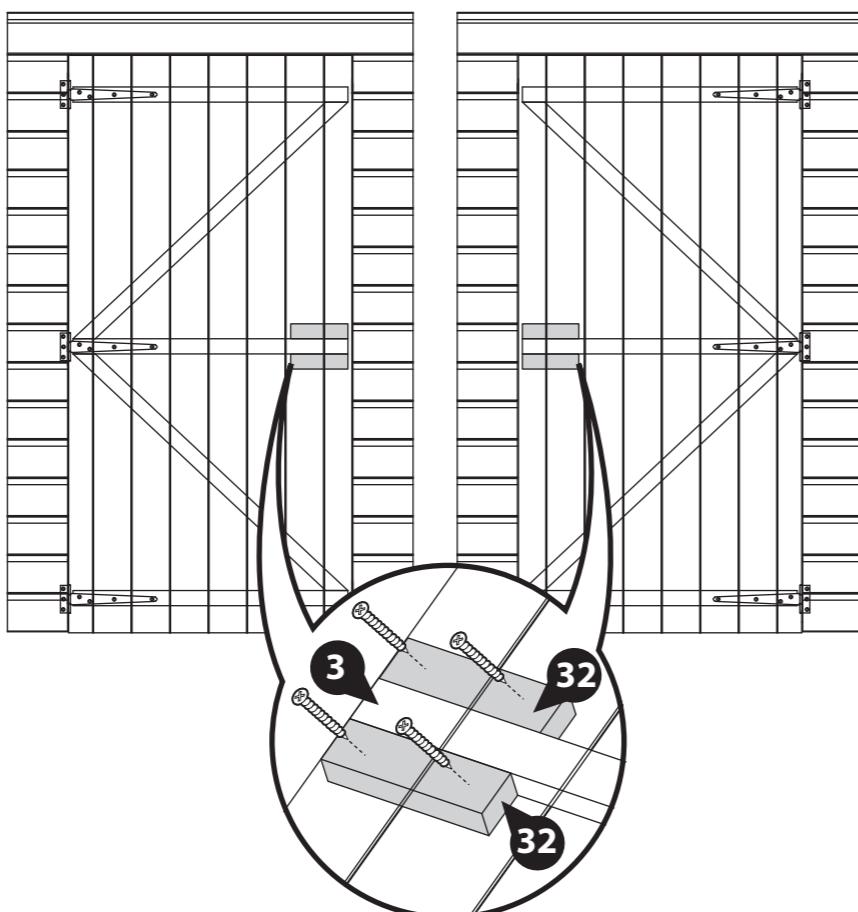


Step 3

Parts needed - No. 27 QTY 1

Locate the Pad Bolt (**No. 27**) onto the Door (**No. 3**) ensuring to line it up with the bottom internal door block, and the retainer to the 4ft Door Panel (**No. 4b**).

Fix in place using 10x30mm screws. Ensure to screw through the cladding into the framing block behind.

10x30mm Screws

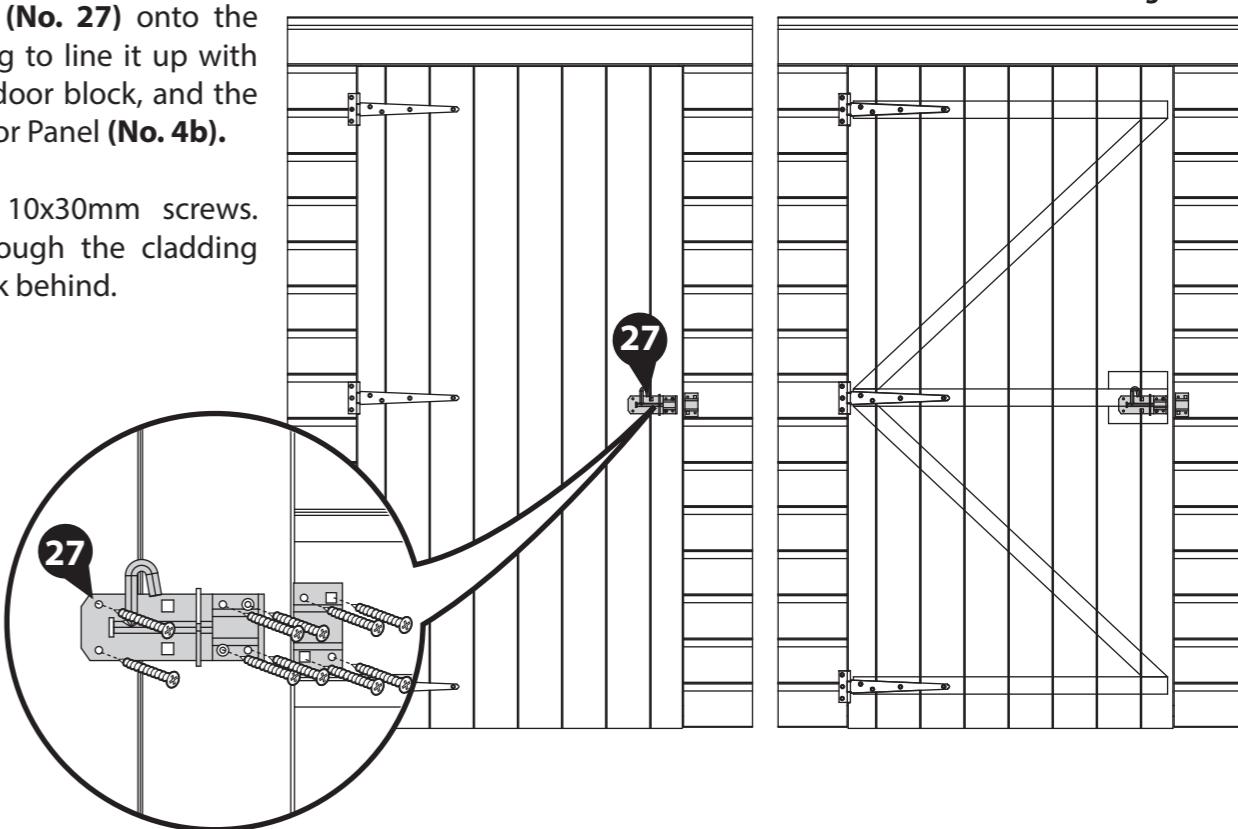

IMPORTANT: Pre-drill before fixing screws.

Internal door framing

Step 4



Parts needed - No. 26 QTY 2

Position a Turn Button (**No. 26**) to the top and bottom of the 4ft Door Panel (**No. 4b**) and fix in place using 1x30mm screw per Turn Button.

Ensure the Turn Buttons rotate to sit across the Door and the Door Panel, as these will help to hold the Door shut.

These Turn Buttons help to keep your Doors straight during high and low levels of moisture content in the air.

2x30mm Screws

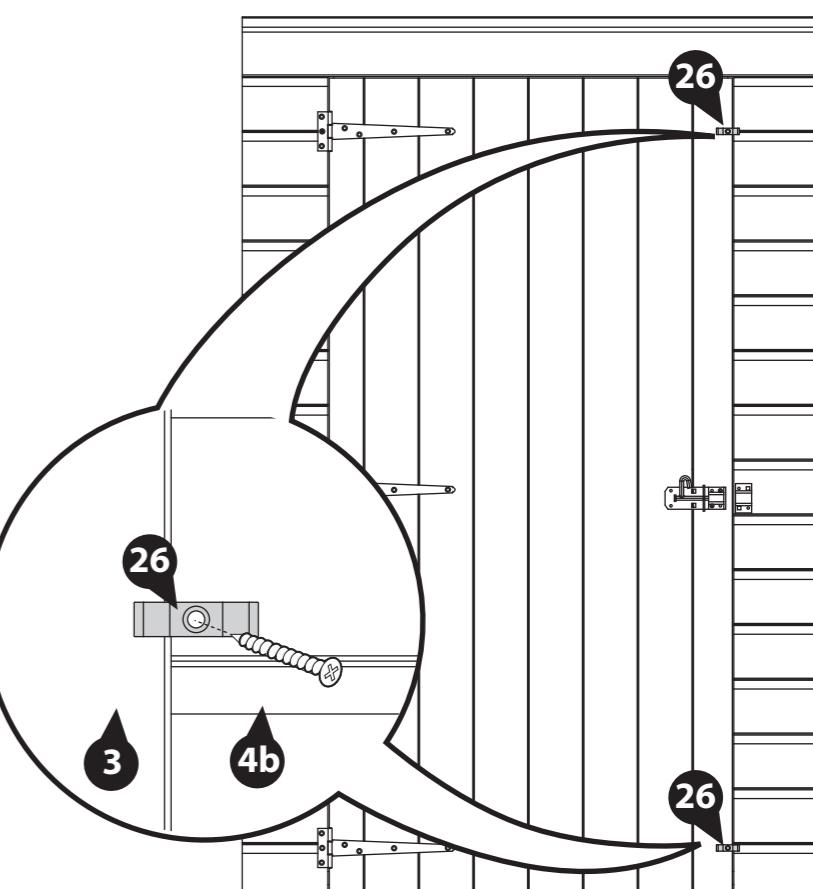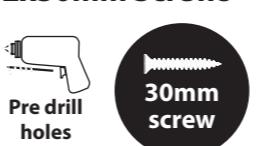

IMPORTANT: Pre-drill before fixing screws.

Step 5

Parts needed - No. 28 QTY 1

Please note: Your Handle can be positioned horizontally or vertically. Please decide which works best before fitting.

Locate the Handle (No. 28) onto the Door (No. 3) so it sits just above the previously fitted Pad Bolt, ensuring to line it up with the internal door blocks.


Secure in place using 4x30mm screws. Ensure to screw through the handle and cladding into the framing block behind.

4x30mm Screws




30mm screw

Horizontal Handle:

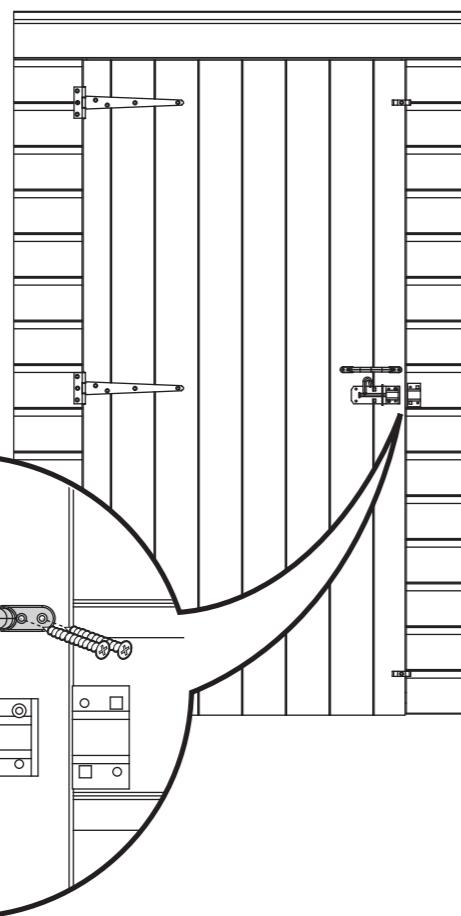


IMPORTANT: Pre-drill before fixing screws.

Internal door framing

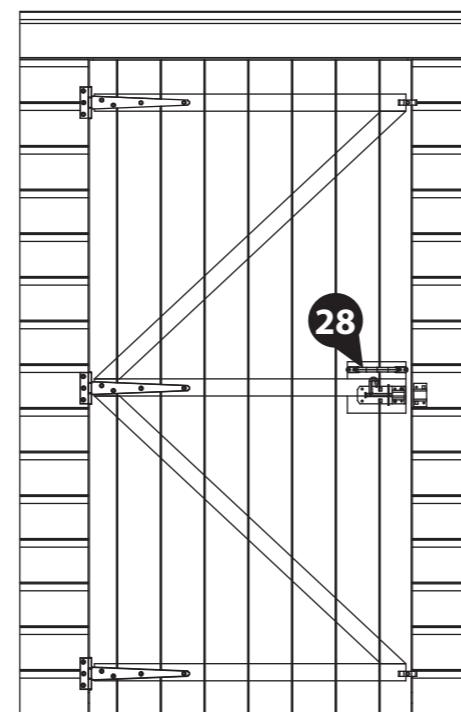

Vertical Handle:

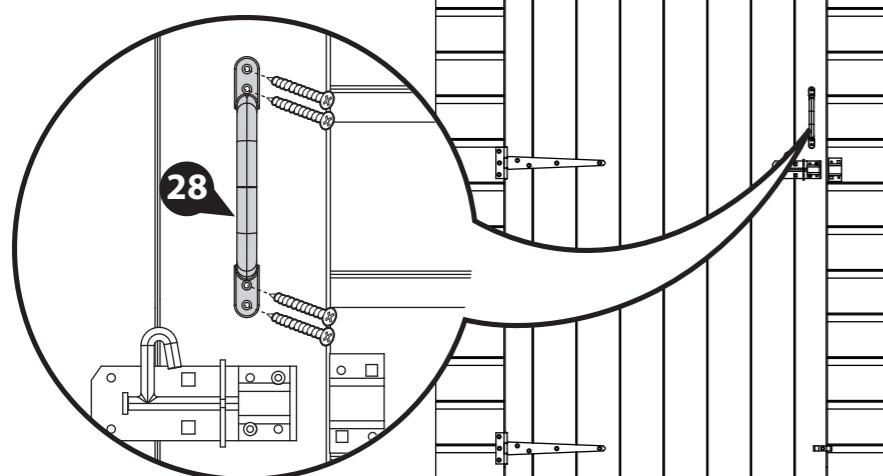

Step 6

Parts needed - No. 1 QTY 2

No. 2 QTY 1

Place the Floor Panels (No. 1 & 2) face down onto a firm and level base.


Push the Floor Panels together so the bearers are flush and level, as shown.

Secure the Floors together using 6x50mm screws, screwing through the bearers in an alternating pattern.

12x50mm Screws



50mm screw

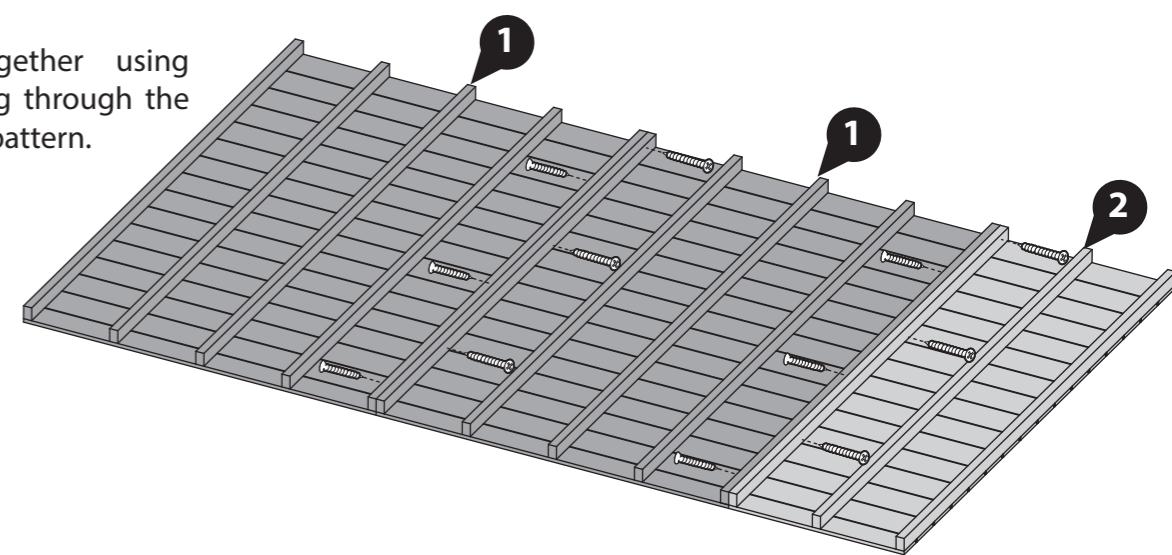

IMPORTANT: Pre-drill before fixing screws.

Step 7

Parts needed - No. 1 QTY 2

No. 2 QTY 1

No. 10 QTY 2

No. 11 QTY 2

Locate one of each Floor Extension Joist (No. 10 & 11) onto either end of the assembled Floor Panel. Ensure the joists are flush to each other and to the Floor Panel framing, as shown.


Position the Floor joists centrally to the Floor Panel framing.

Secure the joists to the Floor Panels using 3x60mm screws per joist, screwing through the joist into the bearers behind.

12x60mm Screws




60mm screw

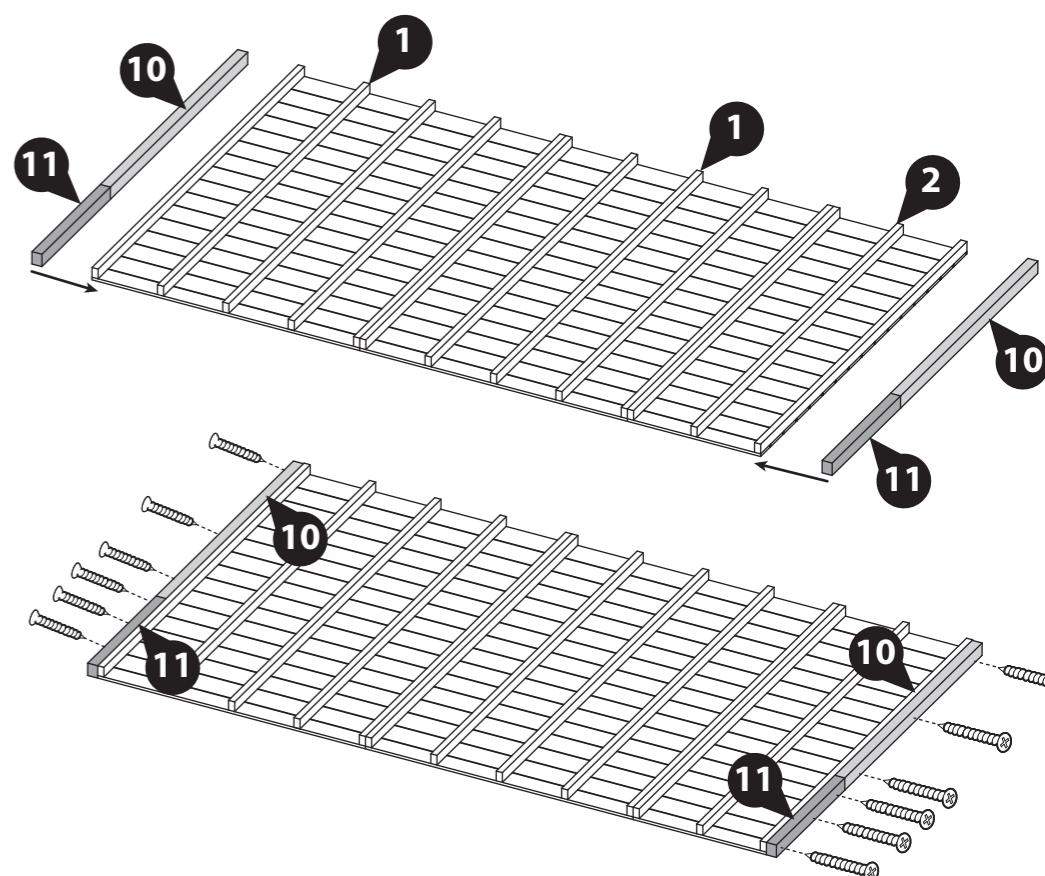

Step 8

Once assembled, flip the Floor Panel (**No. 1 & 2**) over so the bearers are flat on your firm and level base.


Ensure the base has suitable drainage, free from areas where standing water can collect.

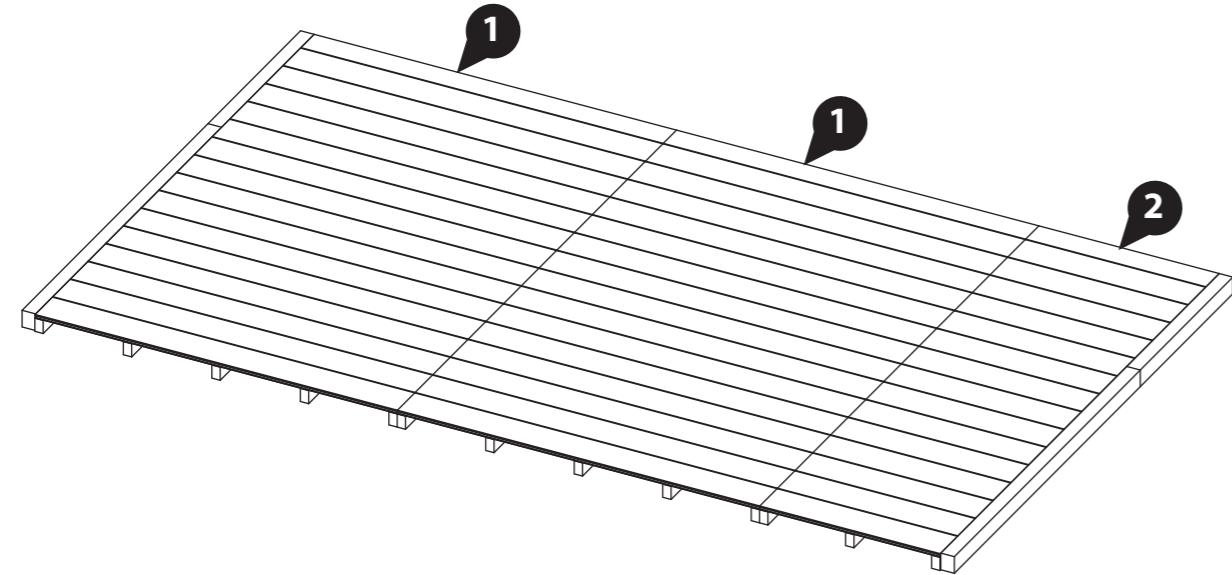

Step 9

Before assembling the shed walls, decide how you want your interchangeable Panels to sit. See Page 4 for some ideas.

It is advised to lay your Panels around the shed floor in the desired positions, an example is shown below.

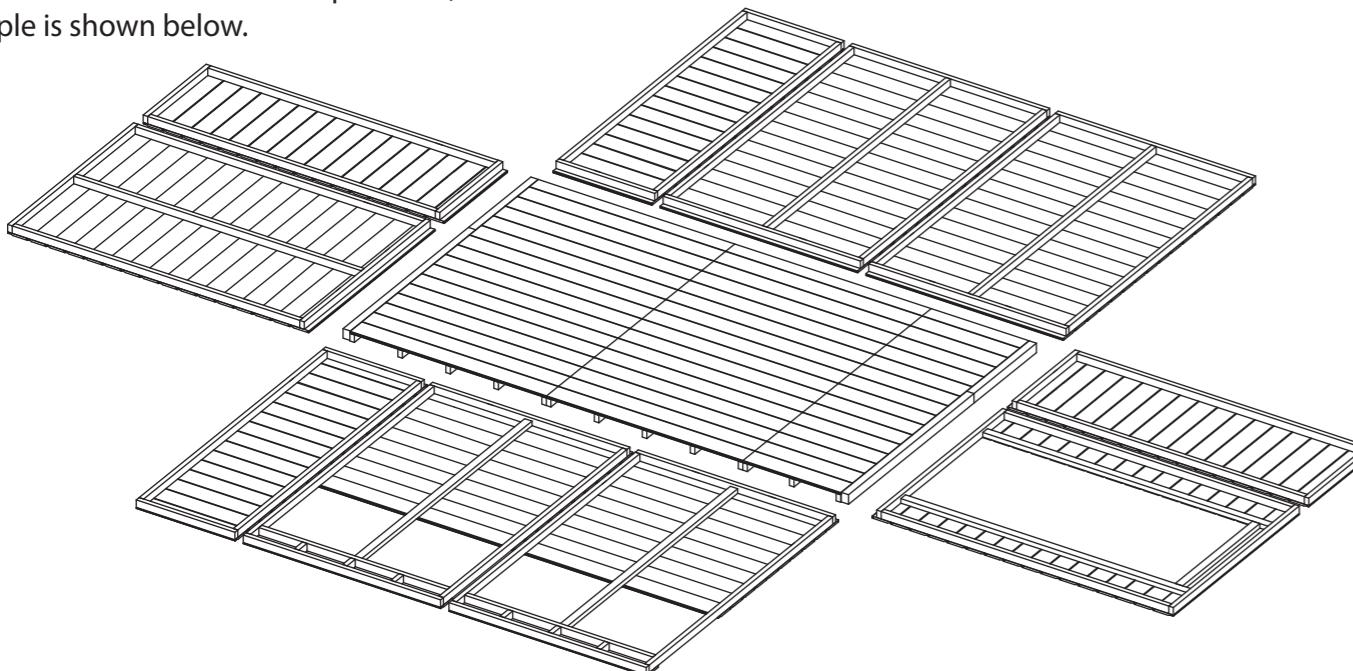

Step 10

Parts needed - No. 5 QTY 2


****Please note:** The 4ft Panels (**No. 4a, 4b and 4c**) are all interchangeable and can be positioned in a variety of different configurations. Decide which works best before assembly. See Page 4 for some suggested options.**

Locate a 2ft Panel (**No. 5**) on top of the Floor panel at one end.

Locate a 2ft Panel (**No. 5**) next to the previously placed panel to create a corner. Externally, the Panels framing should sit flush and the cladding should sit proud, as shown in the diagram.

Secure the Panels together at the corner using 3x50mm screws, screwing through the 2ft side Panel framing into the 2ft end Panel framing behind.


Ensure to position the Panels so there is a small gap between the edge of the Floor and the Panel cladding on all sides.

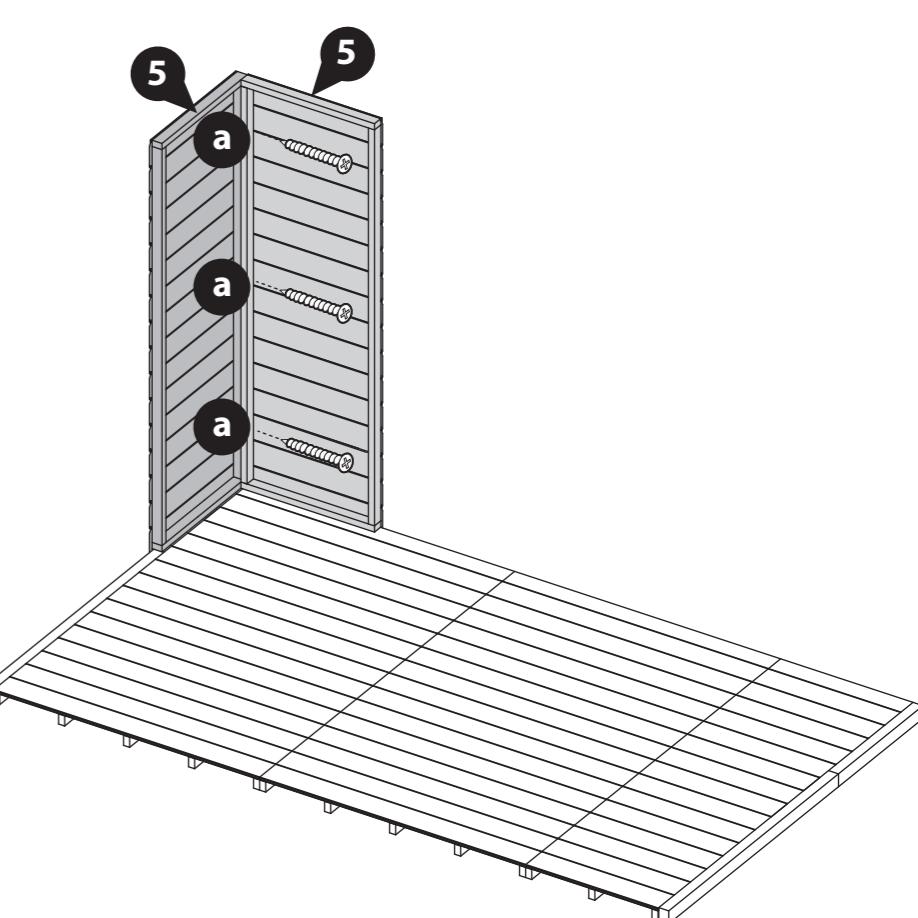


****Please note:** if you have purchased a Panel Brace add-on kit, then you may need to secure the panels together higher up to avoid colliding with the brace and screws.

****Do not secure the building to the Floor until the Roof has been fitted.**


3x50mm Screws

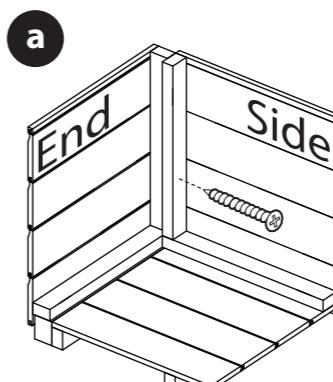

Standard Panels

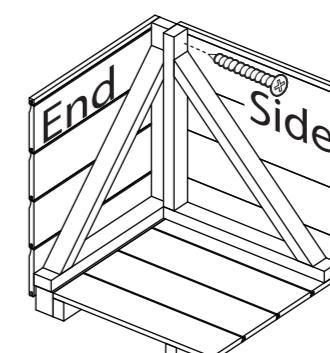

Panel brace kit ONLY

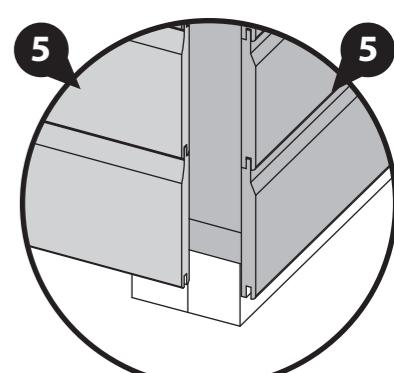

External Corners

Step 11

Parts needed - No. 4 QTY 2 (4a, 4b OR 4c)

Locate a 4ft Panel (**No. 4a, 4b, 4c**) next to the previously placed 2ft Panel (**No. 5**) on the end. Secure the Panels together using 3x50mm screws, screwing through the Panel framing.

Locate a 4ft Panel (**No. 4a, 4b, 4c**) next to the previously placed 2ft Panel (**No. 5**) on the opposite side. Secure the Panels together using 3x50mm screws, screwing through the Panel framing.

Ensure to position the Panels so there is a small gap between the edge of the Floor and the Panel cladding on all sides.



****Please note: if you have purchased a Panel Brace add-on kit, then you may need to secure the panels together higher up to avoid colliding with the brace and screws.**

****Do not secure the building to the Floor until the Roof has been fitted.**


6x50mm Screws



IMPORTANT: Pre-drill before fixing screws.

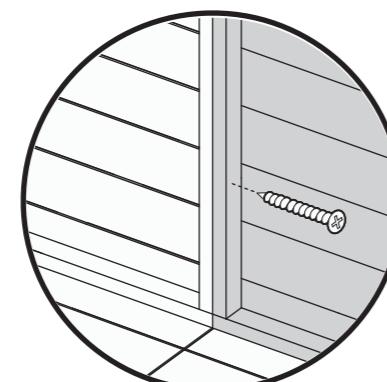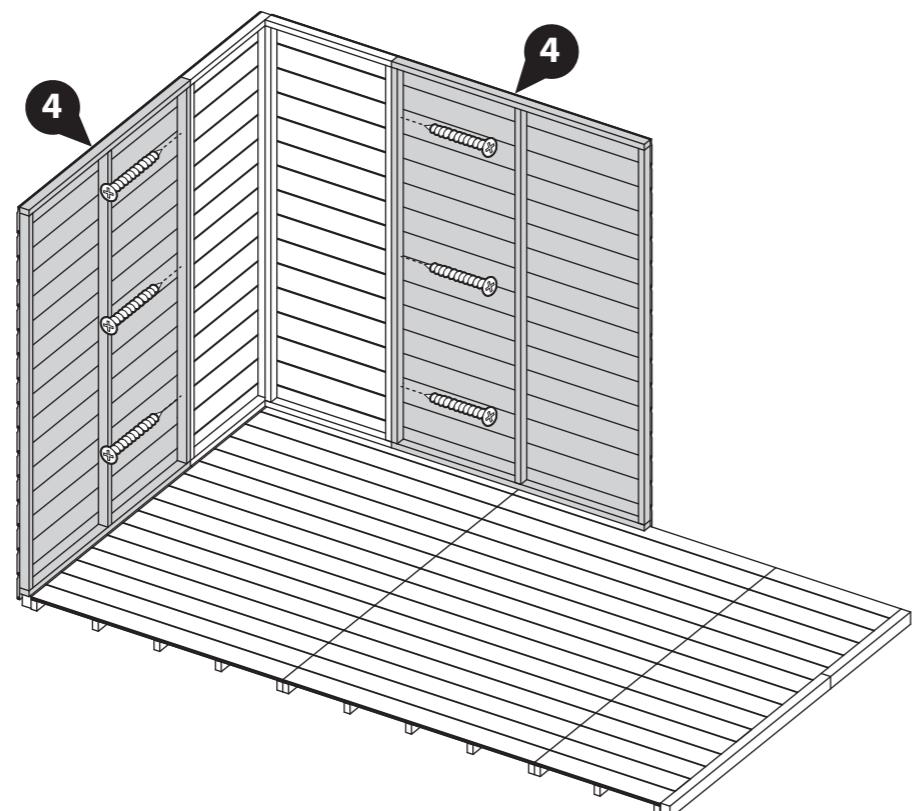

Standard Panels

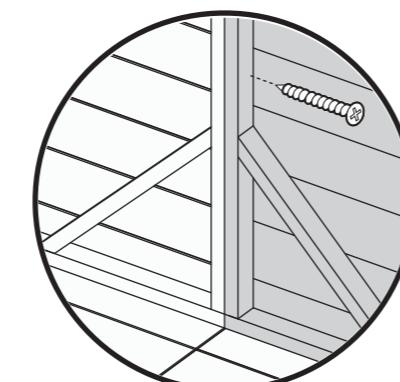

Panel brace kit ONLY

Step 12

Parts needed - No. 5 QTY 1 (4a, 4b OR 4c)

Locate a 2ft Panel (**No. 5**) next to the 4ft Panel to create a corner. Ensure the 2ft Panel sits on the inside of the 4ft Panel, as shown. Externally, the Panels framing should sit flush and the cladding should sit proud, as shown in the diagram.


Secure the Panels together at the corner using 3x50mm screws, screwing through the Panel framing.

Ensure to position the Panels so there is a small gap between the edge of the floor and the Panel cladding on all sides.


****Please note: if you have purchased a Panel Brace add-on kit, then you may need to secure the panels together higher up to avoid colliding with the brace and screws.**

****Do not secure the building to the Floor until the Roof has been fitted.**

3x50mm Screws


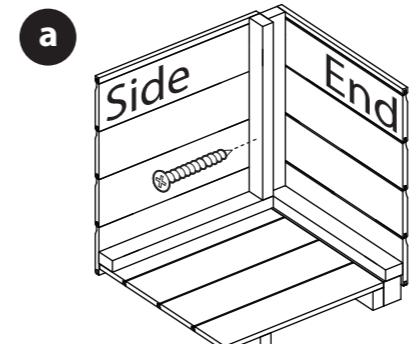


Standard Panels

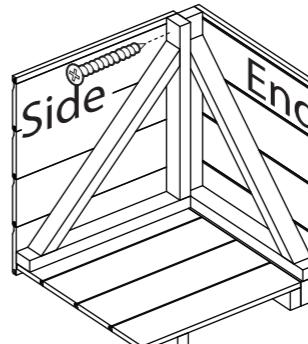

Panel brace kit ONLY

IMPORTANT: Pre-drill before fixing screws.

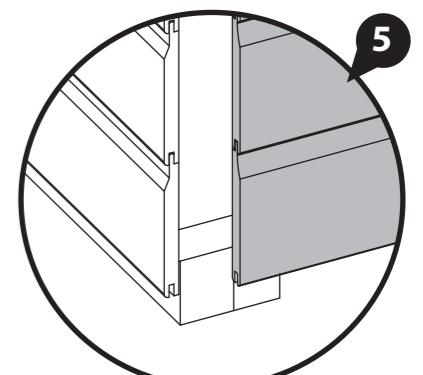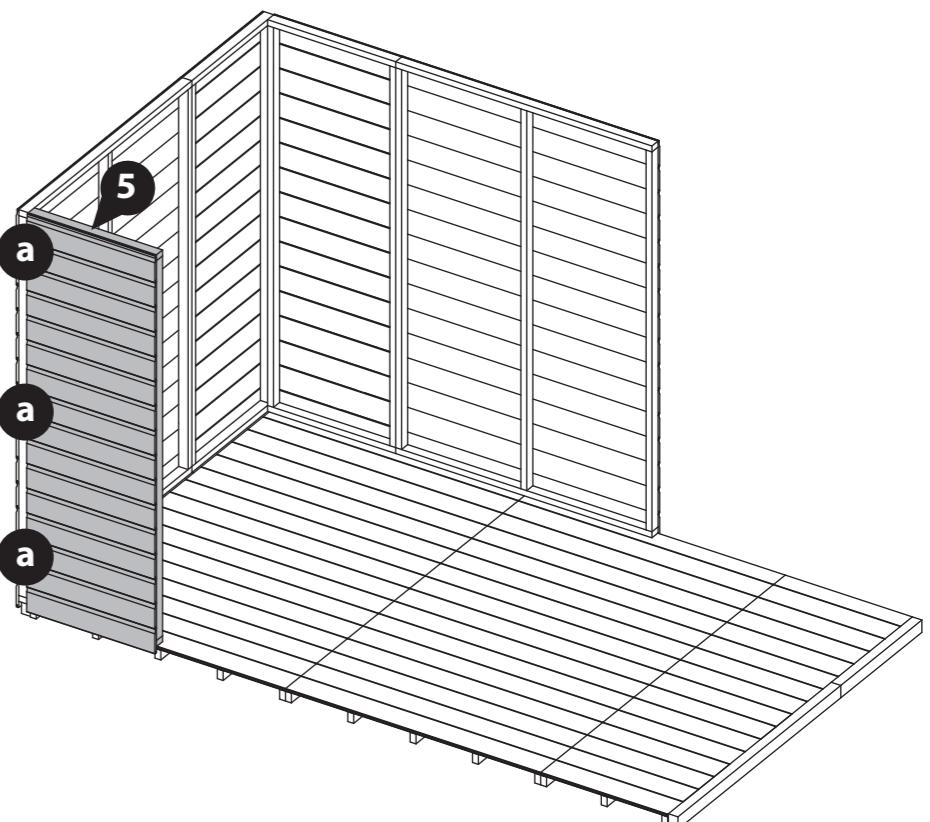

External Corners

Step 13

Parts needed - No. 4 QTY 2 (4a, 4b OR 4c)

Locate a 4ft Panel (**No. 4a, 4b, 4c**) next to the 2ft Panel (**No. 5**) previously fitted along the front, as shown.

Position another 4ft Panel (**No. 4a, 4b, 4c**) next to the 4ft Panel (**No. 4a, 4b, 4c**) along the back, as shown.


Secure the Panels together using 3x50mm screws, screwing through the Panel framing.

Ensure to position the Panels so there is a small gap between the edge of the Floor and the Panel cladding on all sides.

****Please note: if you have purchased a Panel Brace add-on kit, then you may need to secure the panels together higher up to avoid colliding with the brace and screws.**

****Do not secure the building to the Floor until the Roof has been fitted.**

6x50mm Screws

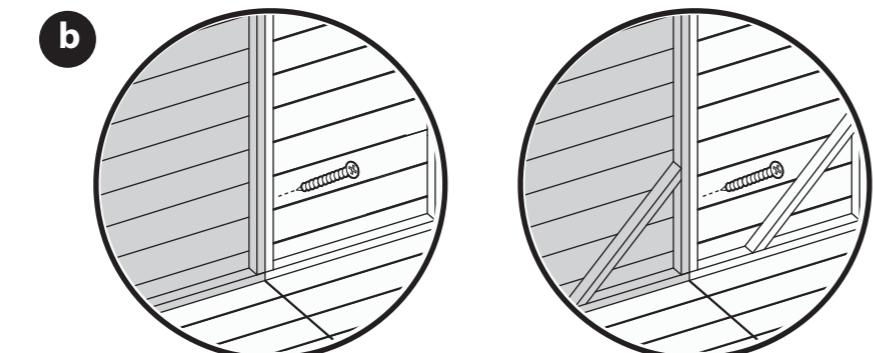

Standard Panels

Panel brace kit ONLY

IMPORTANT: Pre-drill before fixing screws.

Step 14

Parts needed - No. 4 QTY 1 (4a, 4b OR 4c)

Locate a 4ft Panel (**No. 4a, 4b, 4c**) next to the previously fitted Panel along the front, as shown.

Fix the Panels together using 3x50mm screws, screwing through the Panel framing.

Ensure to position the Panels so there is a small gap between the edge of the Floor and the Panel cladding on all sides.

****Please note: if you have purchased a Panel Brace add-on kit, then you may need to secure the panels together higher up to avoid colliding with the brace and screws.**

****Do not secure the building to the Floor until the Roof has been fitted.**


3x50mm Screws



Pre drill holes



50mm screw

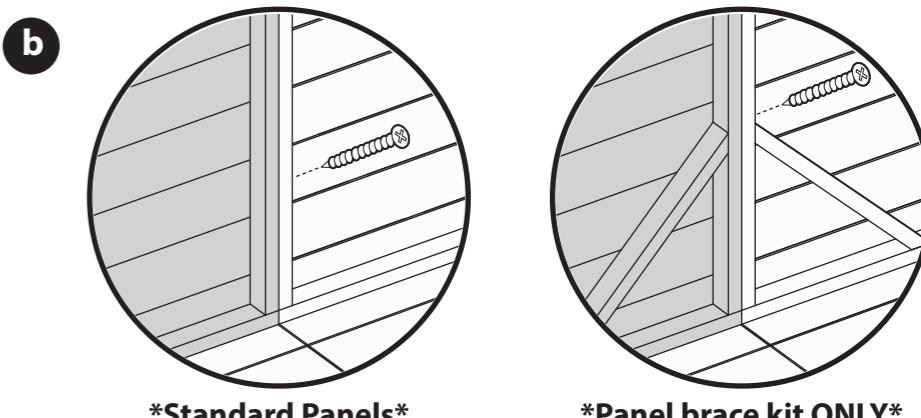

Standard Panels

Panel brace kit ONLY

IMPORTANT: Pre-drill before fixing screws.

Step 15

**Parts needed - No. 4 QTY 1 (4a, 4b OR 4c)
No. 5 QTY 1**

Locate the remaining 4ft Panel (**No. 4a, 4b, 4c**) and 2ft Panel (**No. 5**) on top of the Floor at the end, ensuring they sit on the outside of the previously Placed panels, as shown.

Externally, the Panels framing should sit flush and the cladding should sit proud, as shown in the diagram.

Fix the Panels together using 3x50mm screws, screwing through the Panel framing.


Secure the Panels to the previously placed Panels using 3x50mm screws per corner, screwing though the adjacent Panel framing into the Panel framing behind.

Position the Panels so there is a small gap of equal distance between the edge of the Floor and the Panel cladding on all sides. This allows for the buildings natural movement over time.


****Please note: if you have purchased a Panel Brace add-on kit, then you may need to secure the panels together higher up to avoid colliding with the brace and screws.**

****Do not secure the building to the Floor until the Roof has been fitted.**

9x50mm Screws

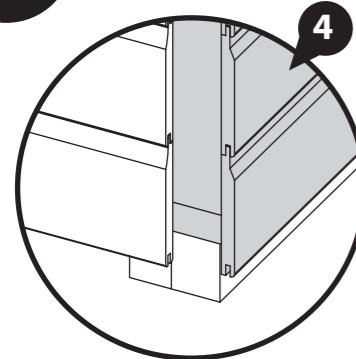

External Corners

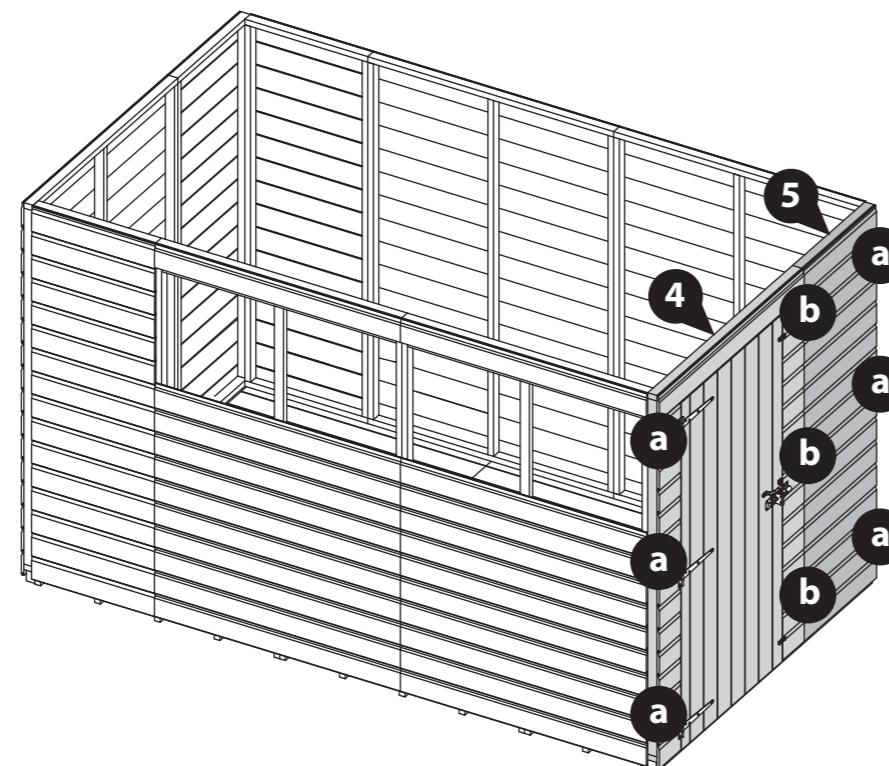

IMPORTANT: Pre-drill before fixing screws.



Step 16

Parts needed - No. 6 QTY 2


Locate the Gable Tops (**No. 6**) on top of the end panels, ensuring that the Gable cladding slots into the top cladding on the panel below.

Secure in place using 5x50mm screws per Gable, screwing up through the Panel framing into the gable.

10x50mm Screws

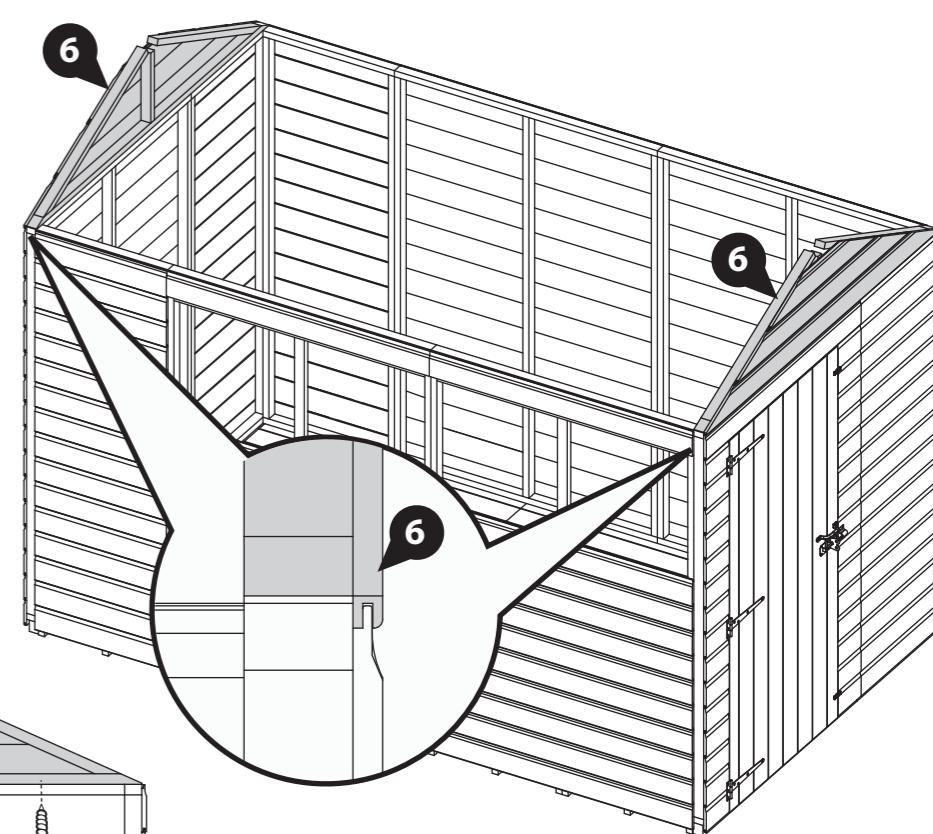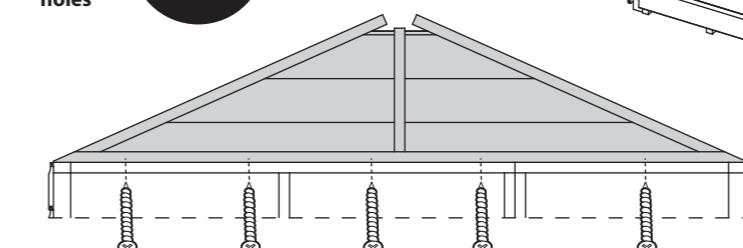


IMPORTANT: Pre-drill before fixing screws.

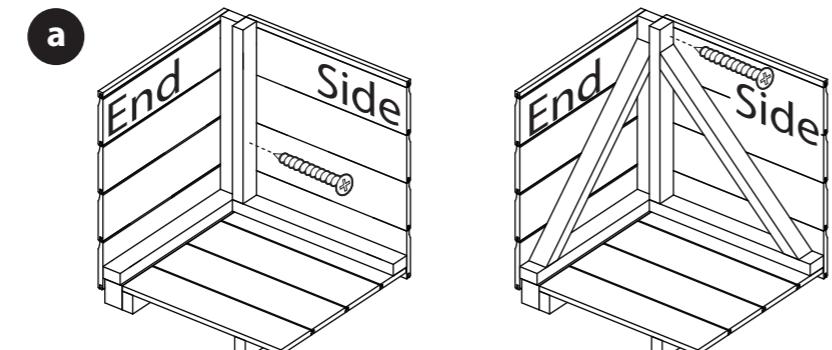

Standard Panels

Panel brace kit ONLY

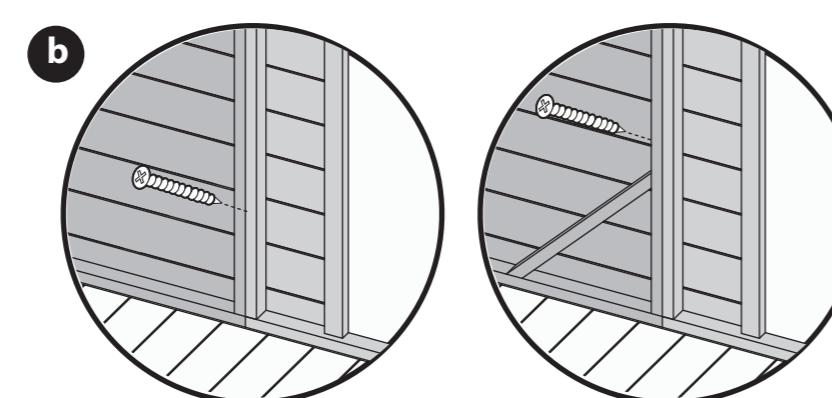

Standard Panels

Panel brace kit ONLY

Step 17

**Parts needed - No. 12 QTY 2
No. 25 QTY 1
No. 29 QTY 2**


Position the two Ridge Bars (**No. 12**) so the ends are flush together and locate the U-channel (**No. 25**) centrally across the join, as shown.

Secure the U-channel in place using 10x30mm screws.

Locate one Corner Brace (**No. 29**) to either end of the assembled Ridge bar, ensuring they are flush with the ends of the ridge bar, as shown.

Secure in place using 2x30mm screws per brace.

14x30mm Screws

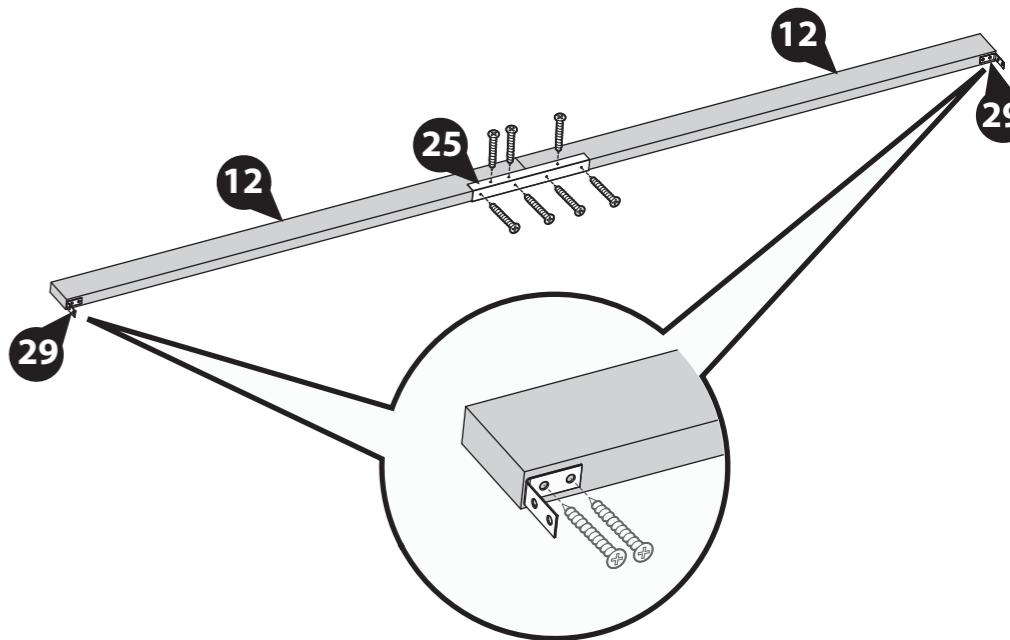

IMPORTANT: Pre-drill before fixing screws.


Step 18

Align the assembled Ridge Bar (**No. 12**) with the central framing on the Gables, ensuring the top and sides are flush.

(If you have not yet assembled your Ridge Bar, please refer to Step 17).

Secure the Corner Braces (**No. 29**) to the central uprights using 2x30mm screws per brace.

4x30mm Screws

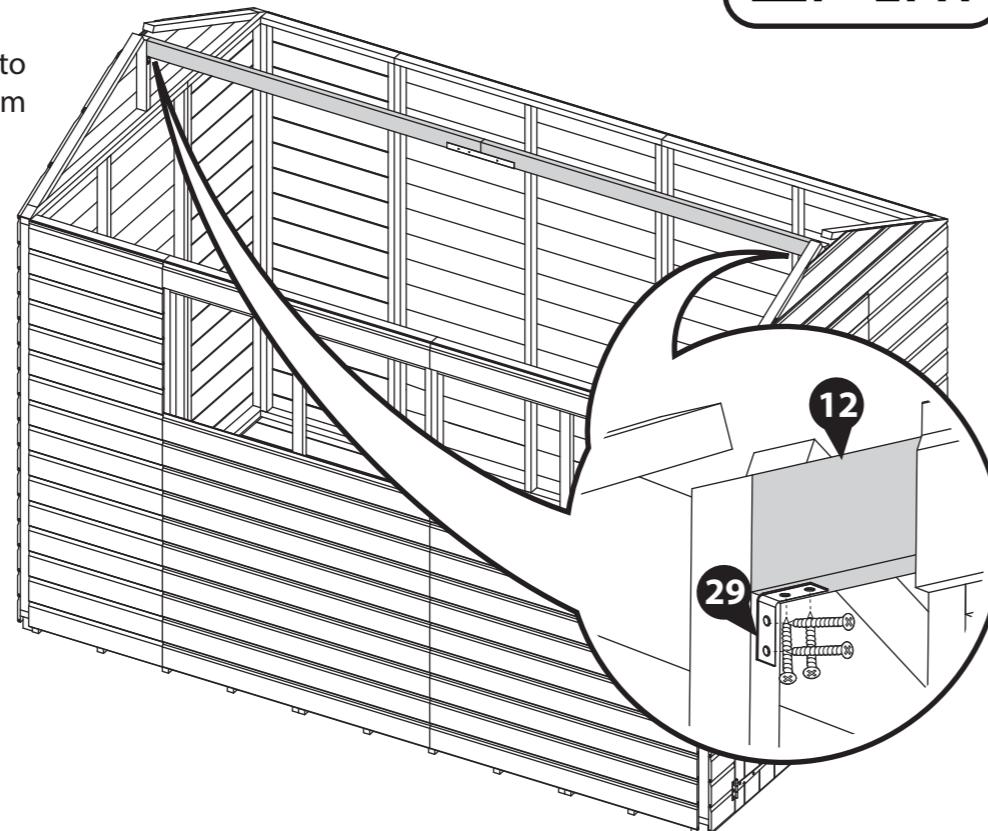

IMPORTANT: Pre-drill before fixing screws.



Step 19

Parts needed - No. 7 QTY 2
No. 8 QTY 2
No. 9 QTY 4

- a** At one end of the building, position a Large 2ft Roof Panel (**No. 9**) onto the Gable Top (**No. 6**), ensuring the Roof Panel framing sits firmly within the notches on the Gable Top and on top of the Ridge Bar (**No. 12**).

****Make sure that you have the Roof Panels the correct way round with the recess at the top of the apex, as shown in the diagram.****

- b** Place one 4ft Roof Panel (**No. 8**) next to the Large 2ft Roof Panel (**No. 9**), ensuring the framing is flush, level and that the Panels sit firmly on the Ridge Bar.

Secure the Panels together by screwing through the top framing at an angle using 1x50mm screw.

- c** Position a Small 2ft Roof Panel (**No. 7**) next to the 4ft Roof Panel (**No. 8**), ensuring the framing is flush, level and that the Panels sit firmly on the Ridge Bar.

Secure the Panels together by screwing through the top framing at an angle using 1x50mm screw.

- d** Position another Large 2ft Roof Panel (**No. 9**) next to the Small 2ft Roof Panel (**No. 7**), ensuring the Roof Panel framing sits firmly within the notches on the Gable Top and on top of the Ridge Bar.

Secure the Panels together by screwing through the top framing at an angle using 1x50mm screw.



Once four Roof Panels are in place on one side, ensure they are positioned centrally to the building. The Roofs should slightly overhang the Gables at either end of the building.

- e** Repeat this method to locate the remaining Roof Panels onto the other side of the building, ensuring they align with the previously fitted Panels. Secure the Panels together by screwing through the underside of the framing into the adjacent Panel.


6x50mm Screws




a

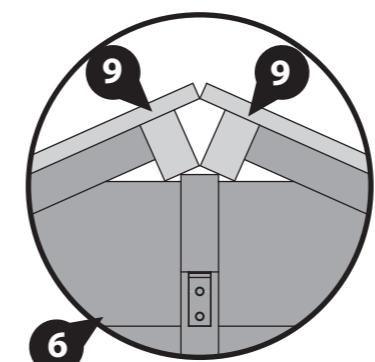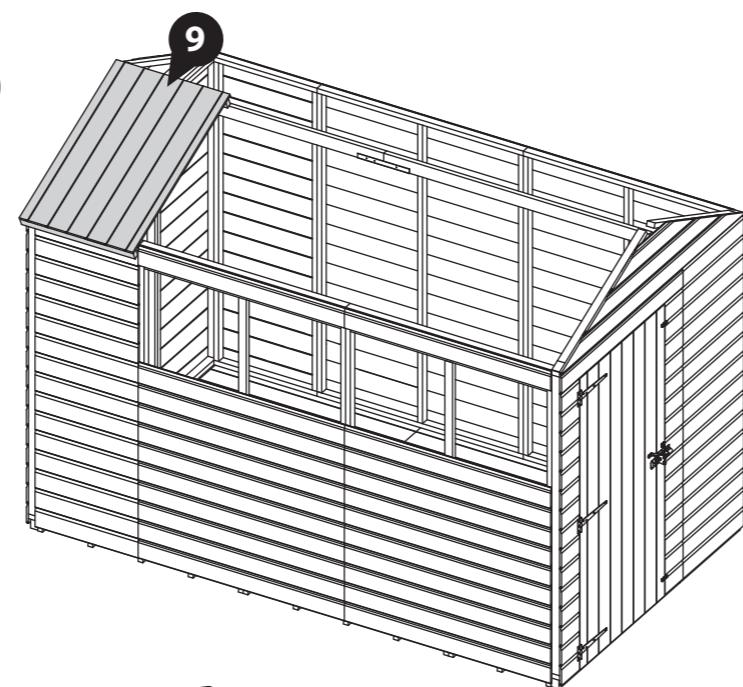


d

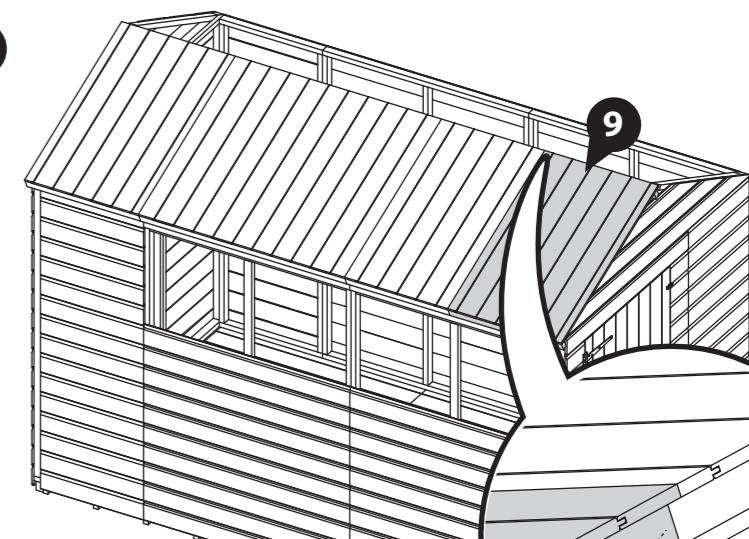


b

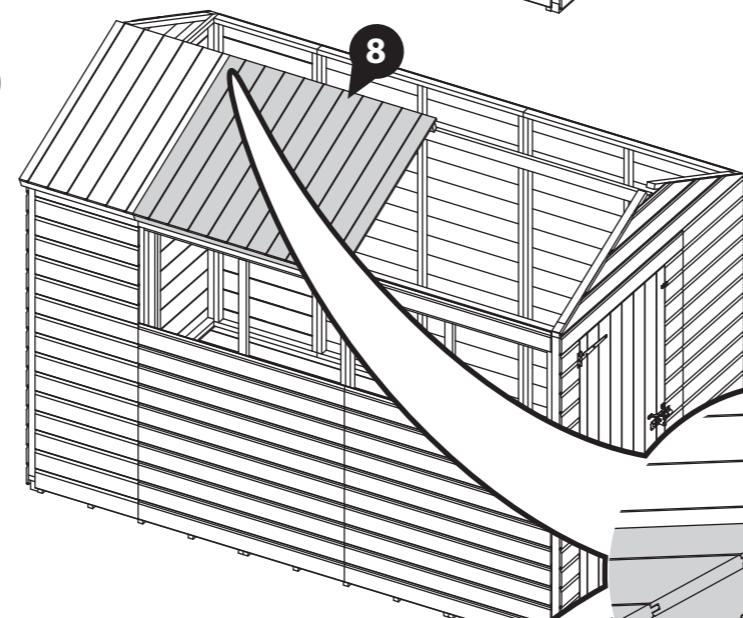

e

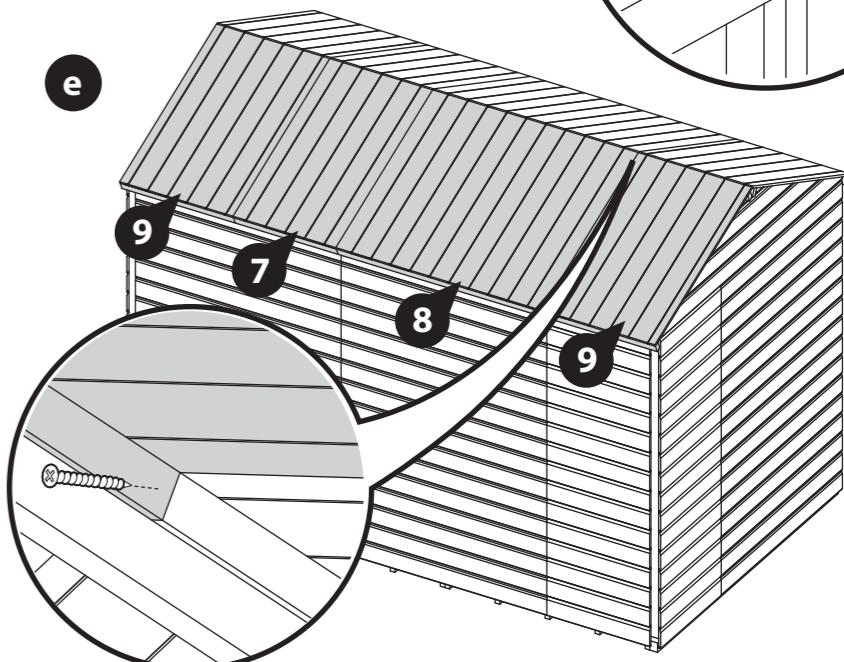

c

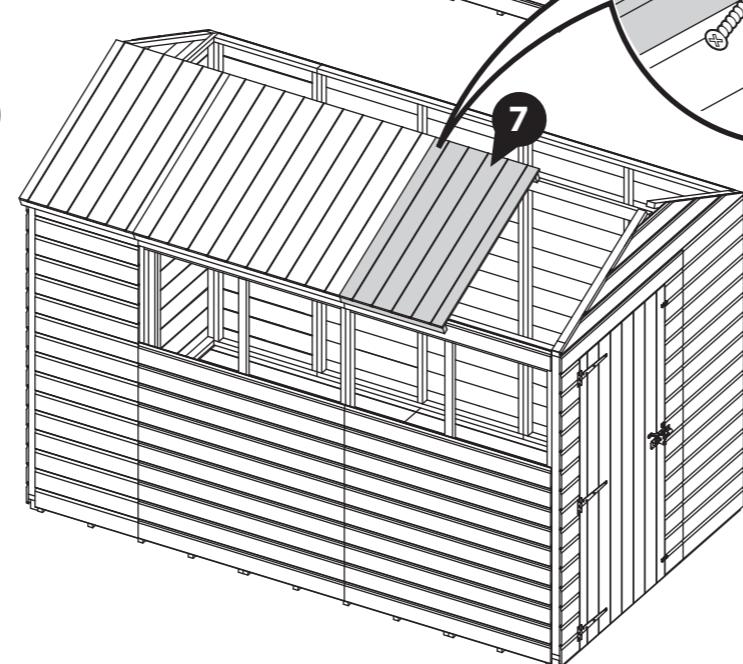

IMPORTANT: Pre-drill before fixing screws.

Step 20

Once the Roof Panels are in place and positioned centrally to the building, they can be fixed in place.


Ensure to check that your Roof Panels are aligned. The framing should be sat in the Gable Tops, align with the opposite roof and be flush at the ends.

Internally, screw up at an angle through the Ridge Bar (**No. 12**) into the roof panels (**No. 7, 8 & 9**) framing above using 1x70mm screws per 2ft Roof Panel and 2x70mm screws per 4ft Roof Panel.


Ensure to stagger the screws to avoid collision.

It is essential that the Ridge Bar (**No. 12**) and Roof Panels (**No. 7, 8 & 9**) framing pull together when secured. You may require another person pushing the Ridge Bar (**No. 12**) up from below to achieve this.

10x70mm Screws

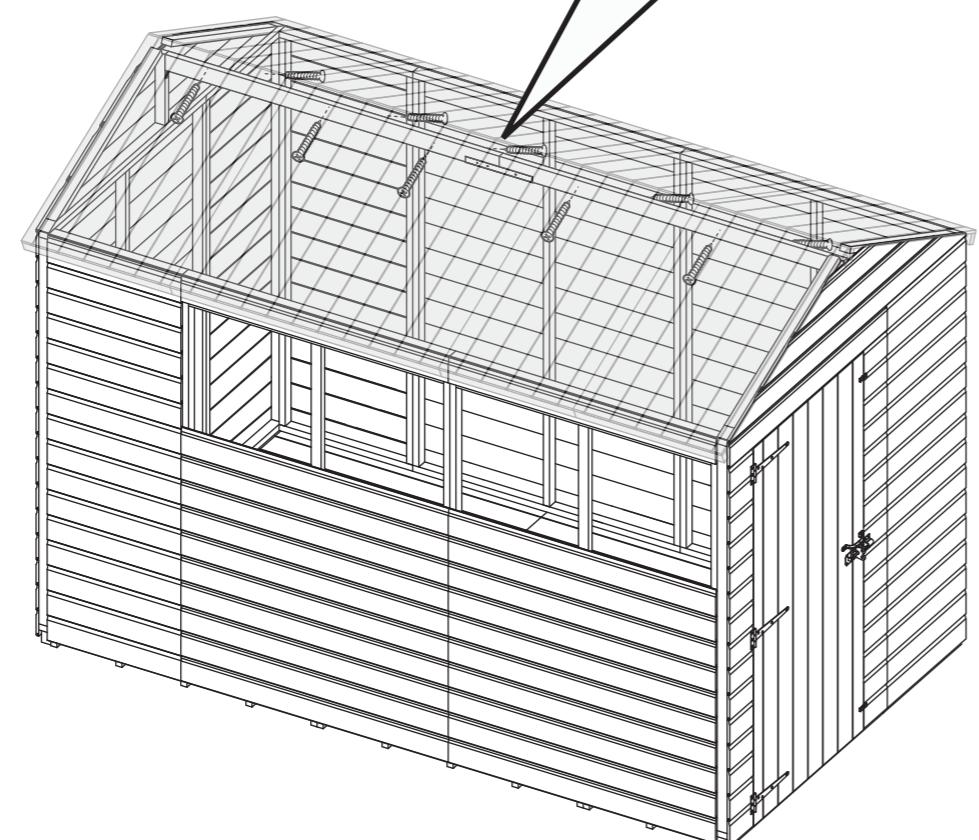

IMPORTANT: Pre-drill before fixing screws.

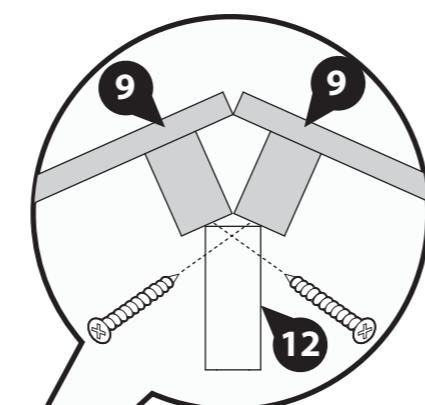

Step 21

Parts needed - No. 14 QTY 2

On either side of the Ridge bar, position a Truss Frame (**No. 14**), underneath the Roof Panels (**No. 8**) central to the building.



Tip: To get the Truss central, use a tape measure to find the middle of the walls, mark with a pencil or tape and align the truss to the mark.

Ensure the Truss Frame (**No. 14**) sits flush to the underside of the roof Panel cladding and flush to the top framing, as shown.


Fix the Truss Frame (**No. 14**) in place using 5x30mm screws per frame, screwing down through the Roof Panels (**No. 8**) into the Truss Frame (**No. 14**) from the outside of the building.

It is essential that the Truss Frame (**No. 14**) and Roof Panels (**No. 8**) pull together when secured. You may require another person pushing the Truss Frame (**No. 14**) up from below to achieve this.

10x30mm Screws

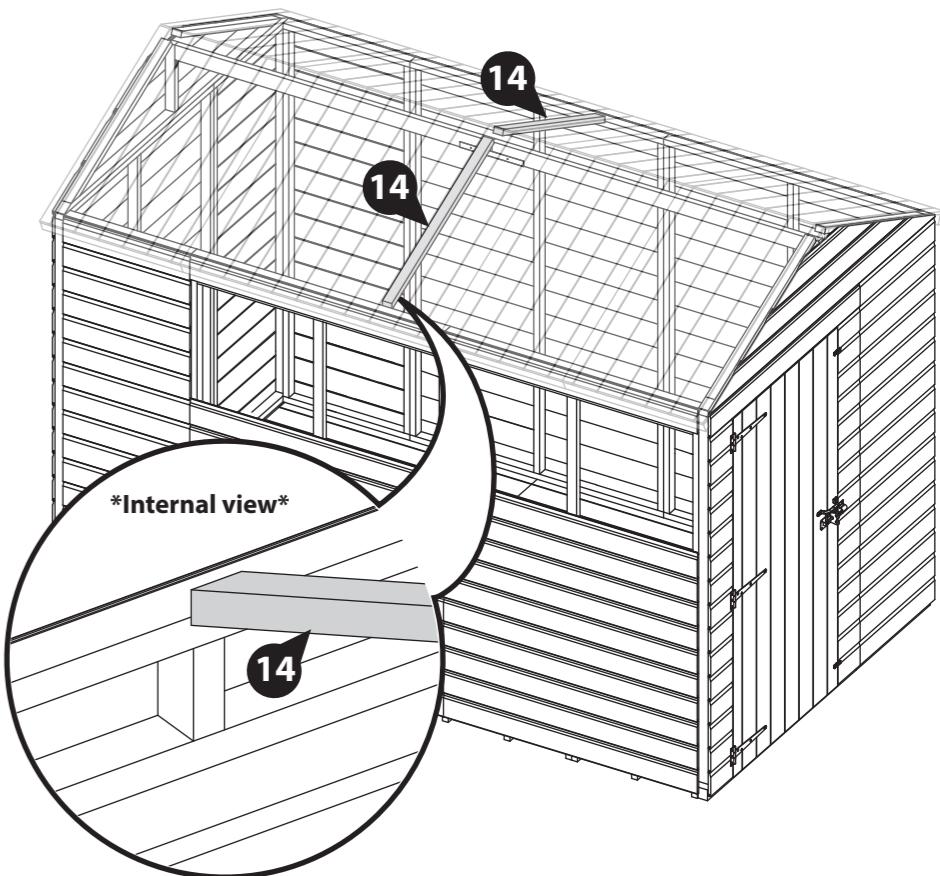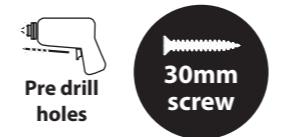

IMPORTANT: Pre-drill before fixing screws.

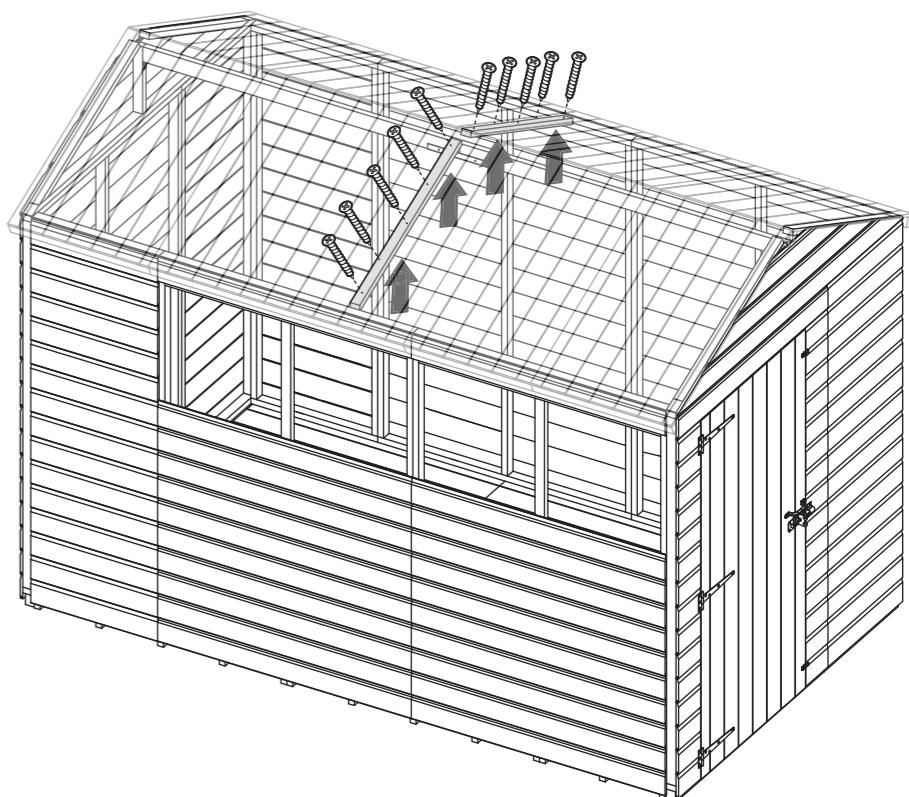

Step 22

Parts needed - No. 16 QTY 2

Please note: You have been supplied with two Truss Support Blocks (**No. 16**) however you may only need to use one.

Depending on how you have arranged your 4ft Panels, you may need to use the Truss Support Blocks (**No. 16**) to help secure your truss'.

Check if there is a piece of upright framing below the previously positioned Truss Frame (**No. 14**). If not, then you will need to use the Truss Support Blocks (**No. 16**).


To locate a Truss Support Block (**No. 16**), position the block flush to the internal Panel cladding and the underside of the top framing. Ensure it is in line with the Truss Frame (**No. 14**), as shown.

Depending on how you have positioned your Panels, your Support Blocks (**No. 16**) could be positioned on the Window or Door Panels. These may need to be cut to size. Use a tape measure to measure the distance between the top horizontal Panel framing, cut the block to this size and re-position.


Secure the block in place using 2x40mm screws, screwing through the outside cladding into the block inside.

Repeat on the opposite side of the building if necessary.

4x40mm Screws

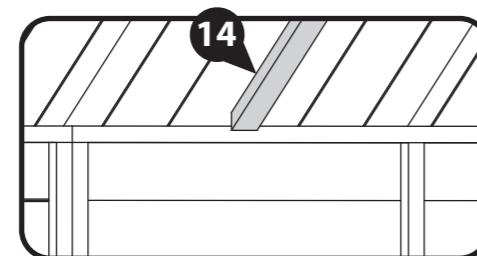


Truss Support Block is required.

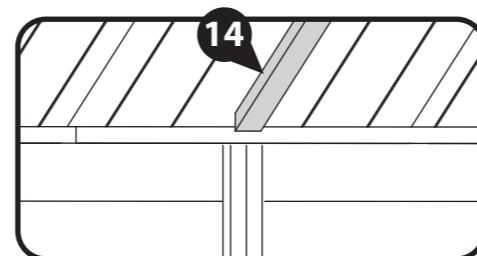

Truss Support Block is NOT required.


IMPORTANT: Pre-drill before fixing screws.

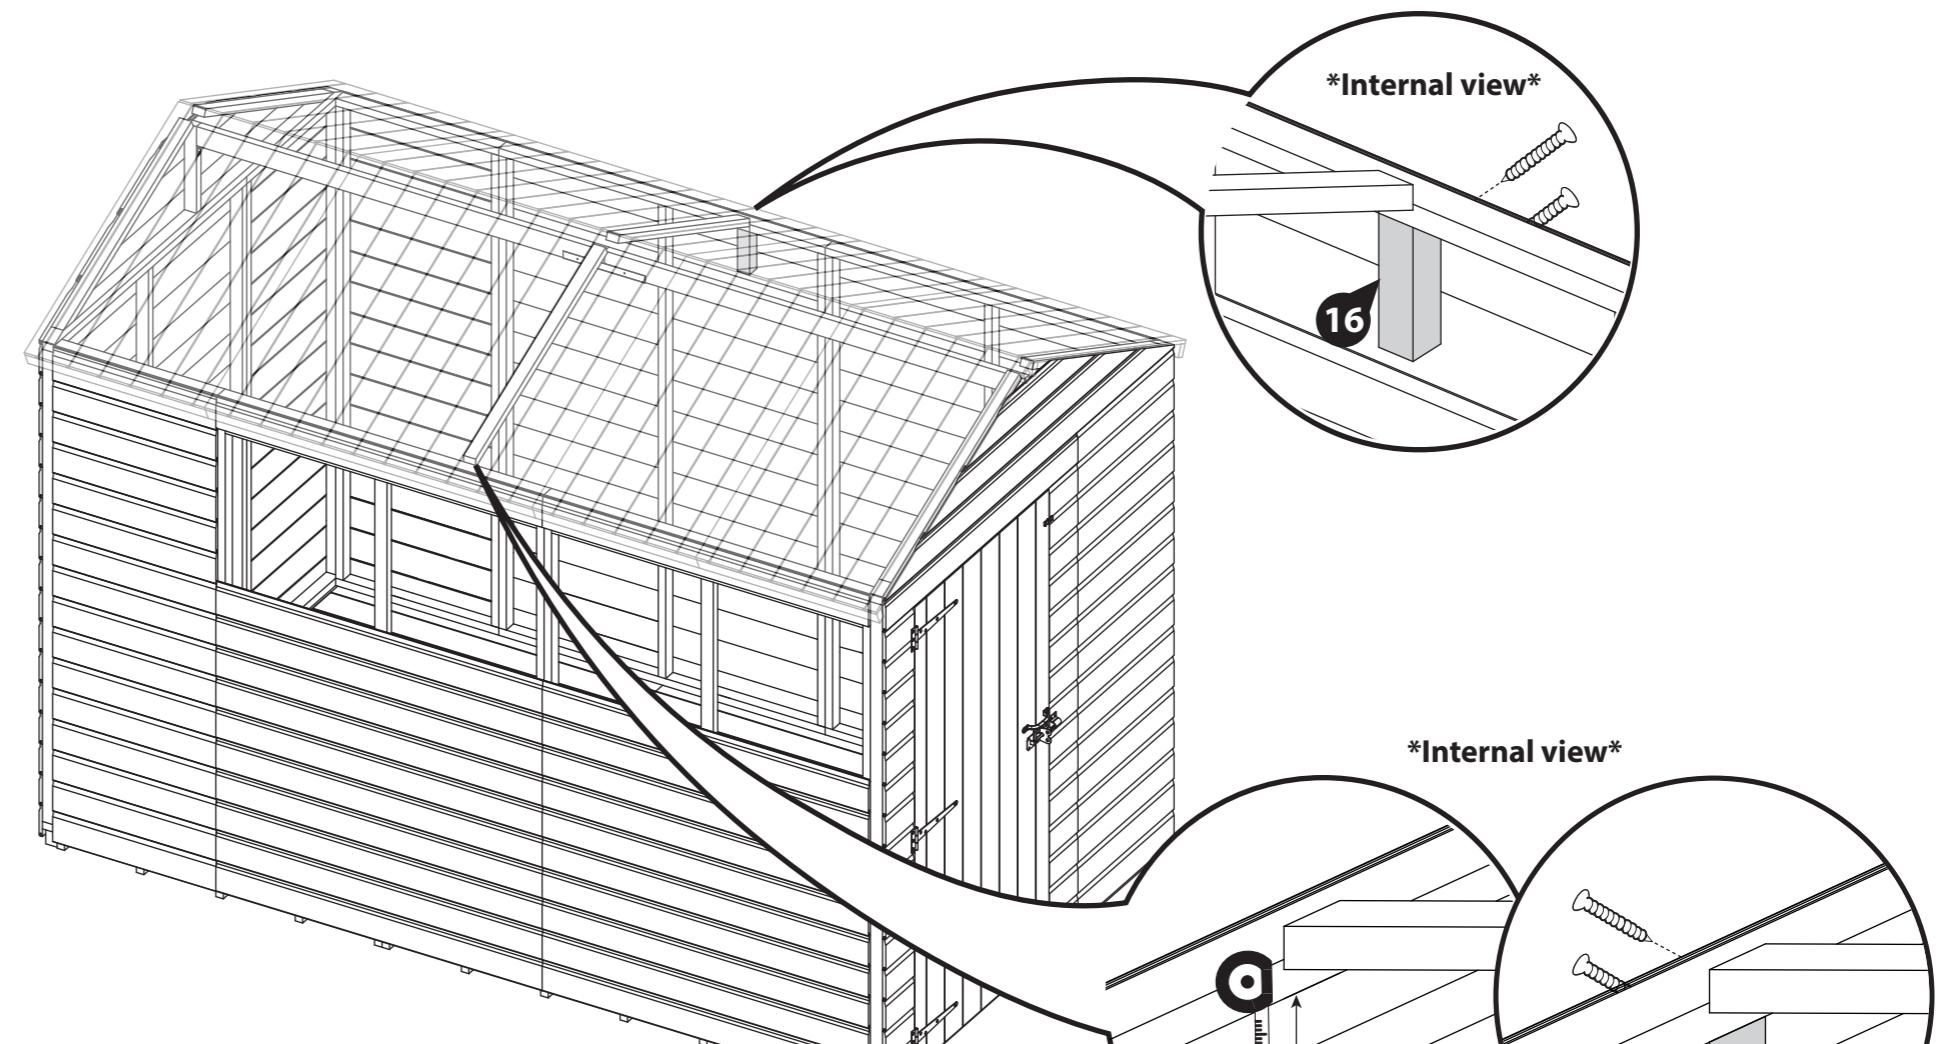

Internal view

Internal view

WINDOW OR DOOR PANEL

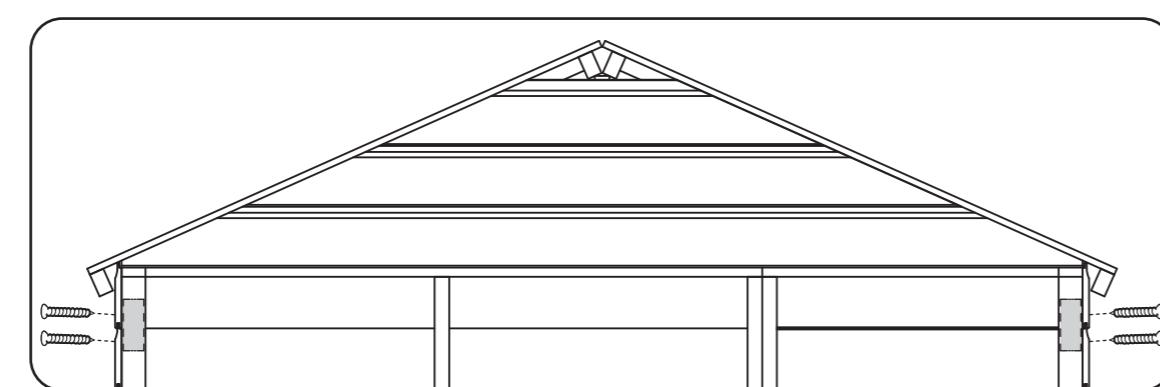

Step 23

Parts needed - No. 13 QTY 2


Place the Truss Block (**No. 13**) up to the Truss Frame (**No. 14**) so the angled cut edge is facing upwards, flush to the Truss Frame (**No. 14**).

Ensure the block is also flush to the framing (Support block or Panel upright) behind.


Fix in place using 2x50mm screws through the block into the framing behind. Ensure to stagger screws to avoid collision.

Repeat on the opposite side of the building.

4x50mm Screws

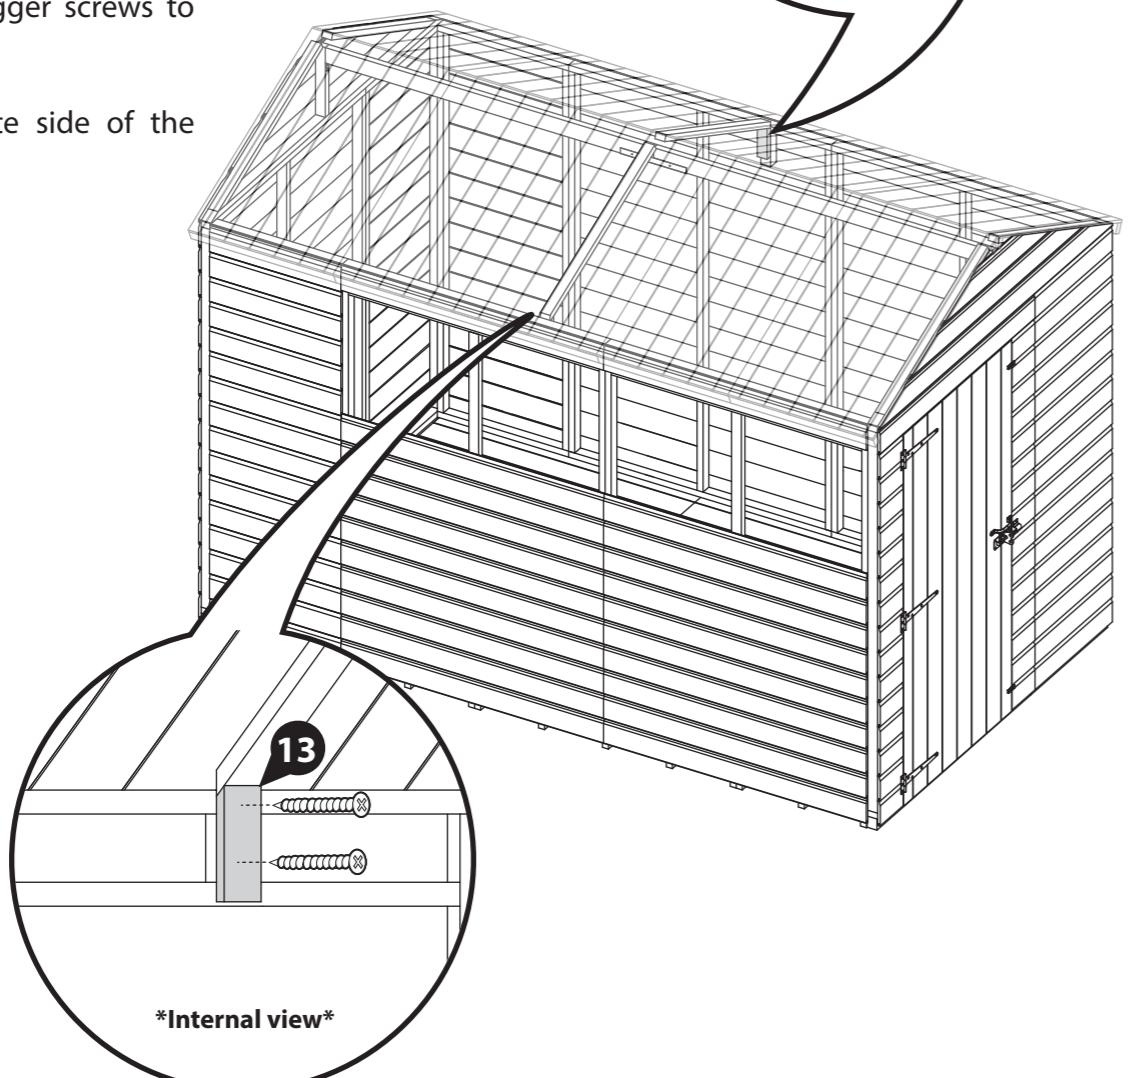

IMPORTANT: Pre-drill before fixing screws.

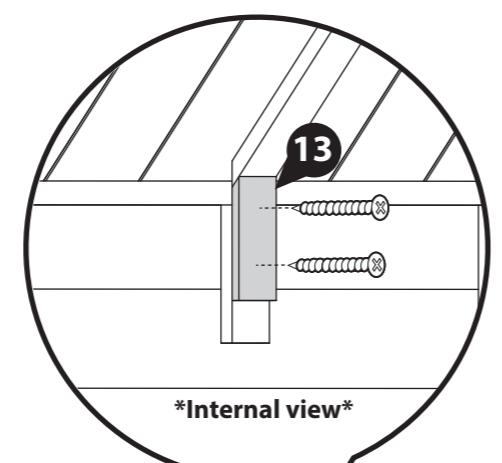

Step 24



Parts needed - No. 15 QTY 1

Place the Truss Support (**No. 15**) underneath the two Truss Frames (**No. 14**) ensuring it sits flush to both.

The Truss Support (**No. 15**) should sit horizontal - parallel to the floor.

Once in position fix the Truss Support (**No. 15**) in place with 2x40mm screws at each end of the truss.

4x40mm Screws

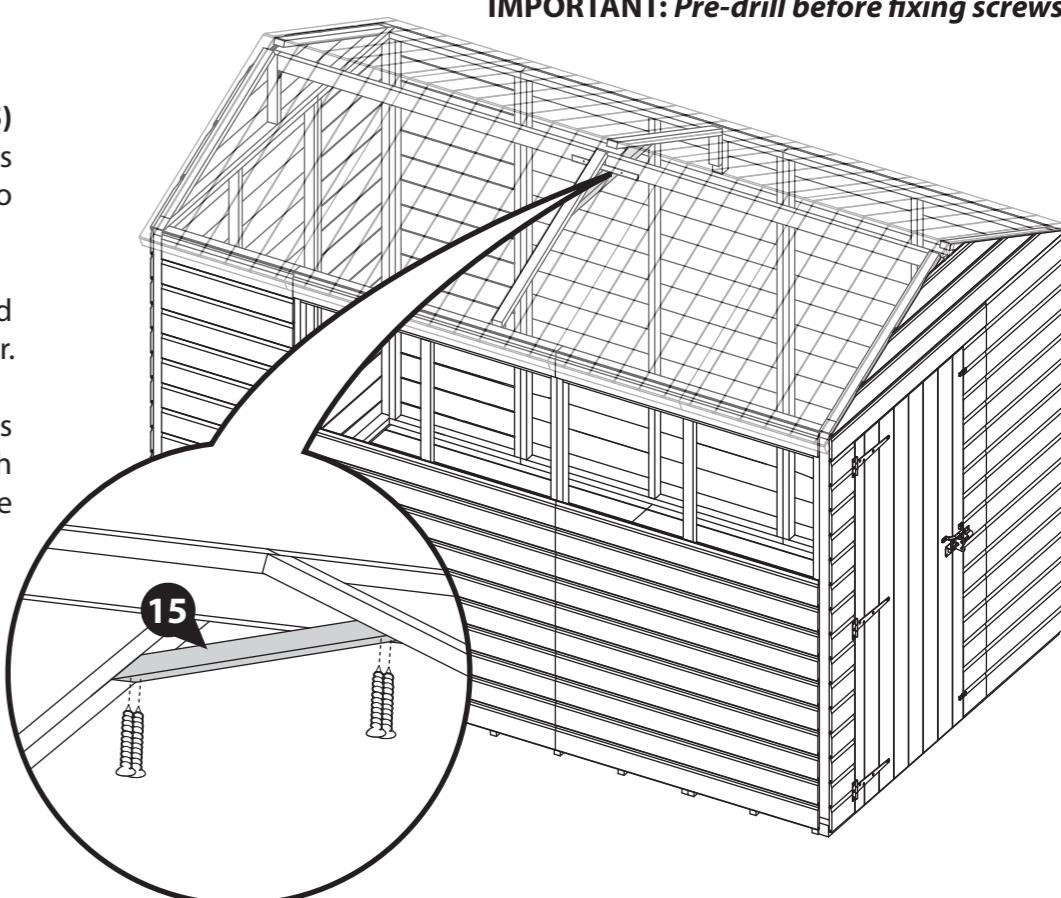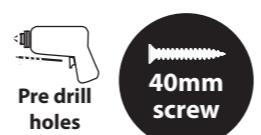


Step 25

Make sure the building is square by measuring from corner to corner and comparing the measurements. If the measurements are equal, the building is square, if not, adjustments may be required.

Once square, secure the Roofs (**No. 7, 8 & 9**) in place using 40mm screws by screwing down through the cladding into the panel framing below.

Ensure there is no more than 300mm between each screw and that each screw is countersunk to avoid interference when felting.

28x40mm Screws

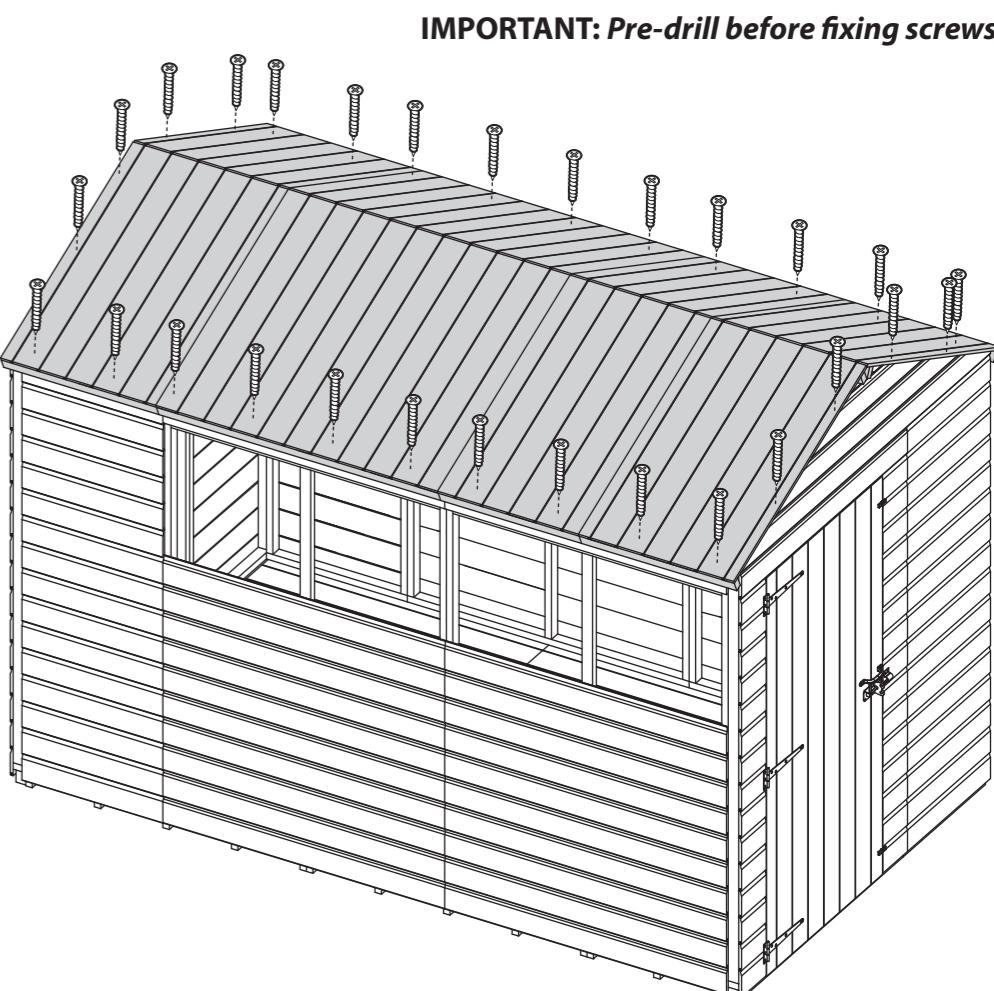


IMPORTANT: Pre-drill before fixing screws.

Step 26


Once the Roof is fixed, secure the Panels to the floor using 50mm screws, screwing down through the Panel framing into the Floor bearers below.

Please note: If you have purchased a Panel Brace kit, when fixing near an angled brace, you may need to screw through the panel framing at an angle to ensure they are in line with the Floor bearers.

22x50mm Screws

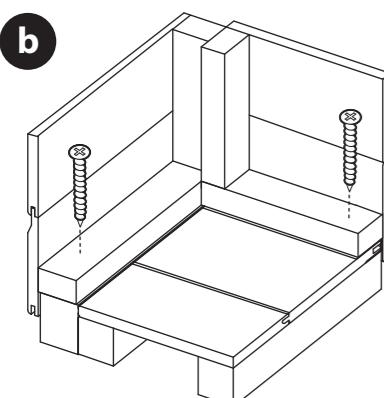


Standard Panels

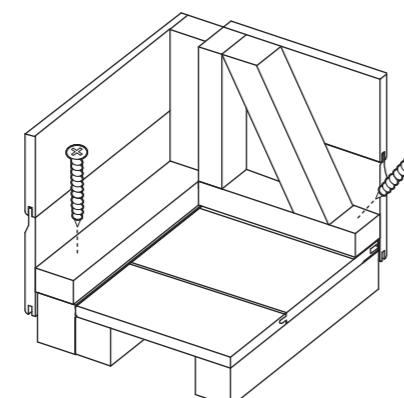

Panel brace kit ONLY

IMPORTANT: Pre-drill before fixing screws.

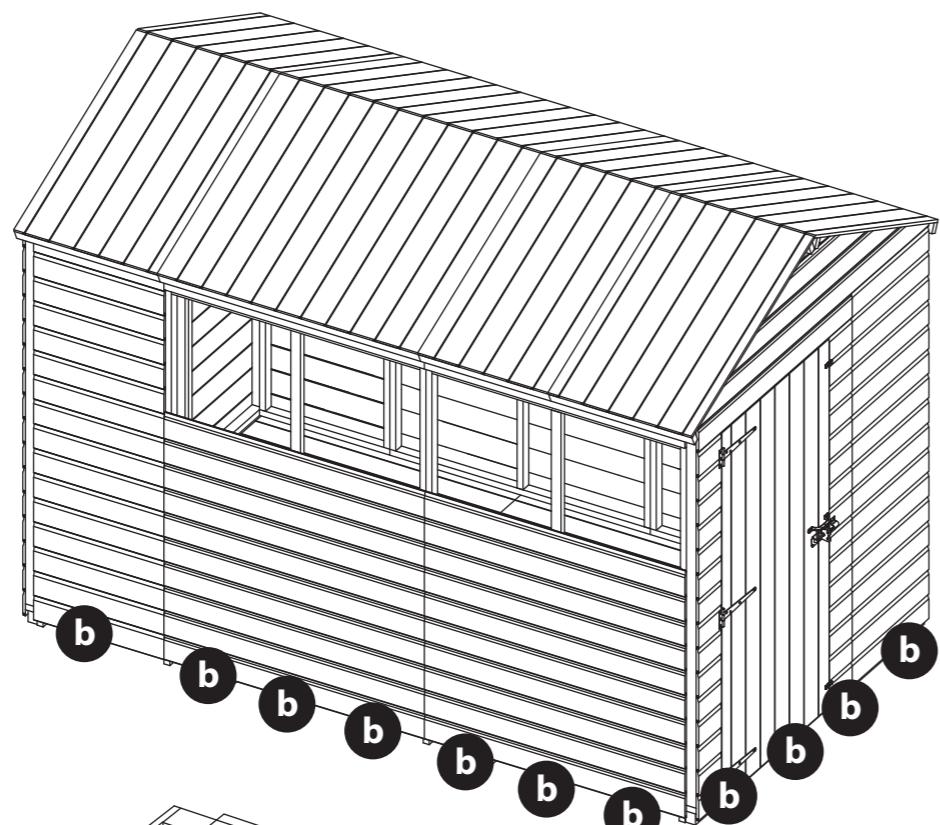

Step 27

Parts needed - No. 17 QTY 2

No. 18 QTY 10

No. 19 QTY 2

No. 20 QTY 4

- a Inside the 4ft Window Panel (**No. 4a**) opening, locate one Window Strip (**No. 18**) to either side of the outer window framing exposed in the window gap, as shown. Secure in place using 3x30mm screws per Strip.

- b Place the Plastic Window Cill (**No. 19**) onto the 4ft Window Panel (**No. 4a**) opening. Ensure the sill sits on top of the cladding and flush to the central upright. Secure in place using 3x30mm screws, screwing though the sill into the framing behind.

- c Position the Styrene sheets (**No. 20**) on top of the Plastic Window Cill (**No. 19**), ensuring they are equally spaced in the window openings.

For added weather protection, use a sealant application gun to apply a neat line of Clear Silicone around the outside edges of the styrene.



**Silicone sealant not provided.

- d Position the remaining three Window Strips (**No. 18**) on top of the sill on either side of the Styrene and the centre. Place the Top Window Strip (**No. 17**) above the previously placed strips, along the top of the window opening.





Secure in place using 3x30mm screws per strip. Ensure to screw through the strips into the framing behind, not the styrene.

Repeat this process (A-D) to fix the strips, sill, styrene sheets and sealant into both Window Panels.

42x30mm Screws

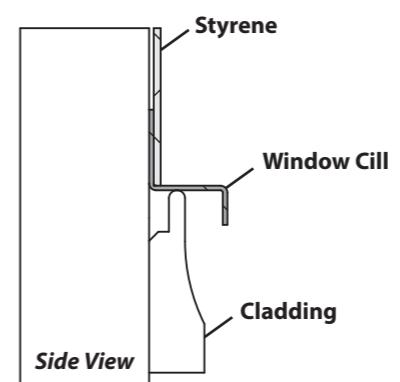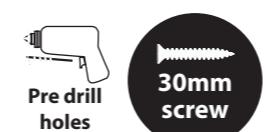

IMPORTANT: Pre-drill before fixing screws.

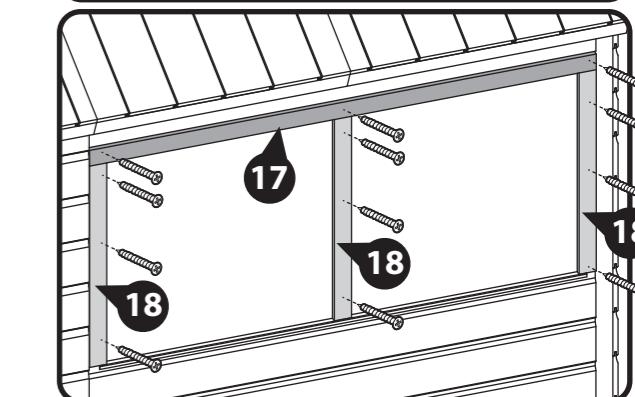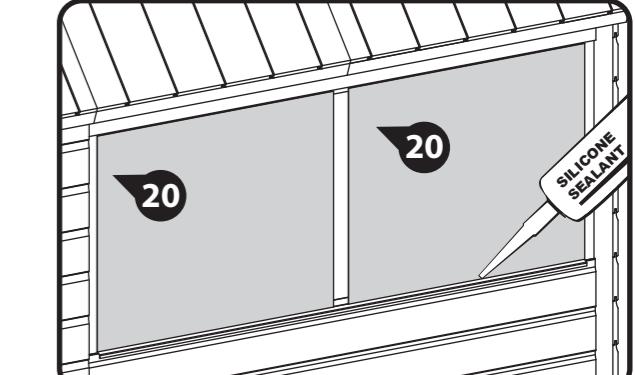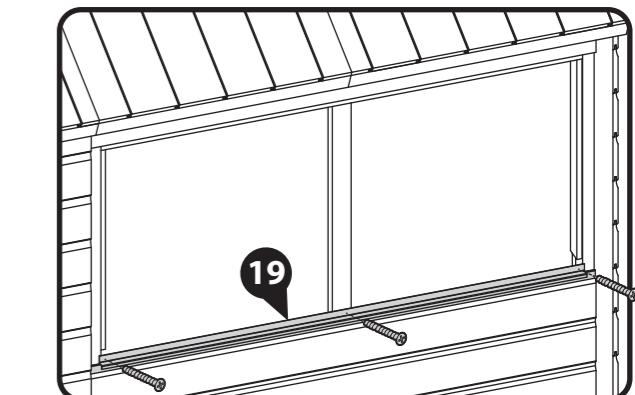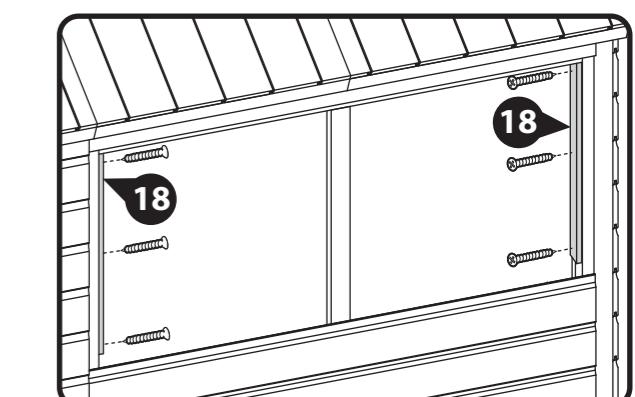

Step 28

**Parts needed - No. 30 QTY 1
No. 31 QTY 1**

- a Cut the Felt (No. 30) into two sheets measuring: **3170mm (L) x 1000mm (W)**.




Cut the Capping Felt (No. 31) into one sheet measuring: **3170mm (L) x 300mm (W)**.

Lay the sheets onto the roof in the order shown in the diagram, ensuring there is a 50mm overhang around the sides and that each sheet overlaps by 100mm.

- b Secure the felt in place by hammering felt tacks into the overlapping layers, the front, back and sides of the building at 100mm intervals, as shown.

Ensure to fold the corners of the felt over each other to create a neat finish, as shown.

150 x Felt Tacks

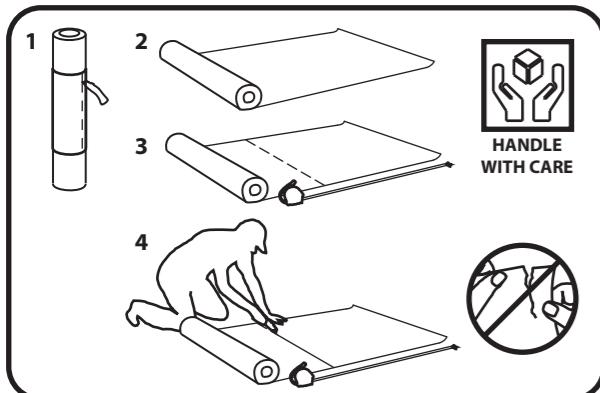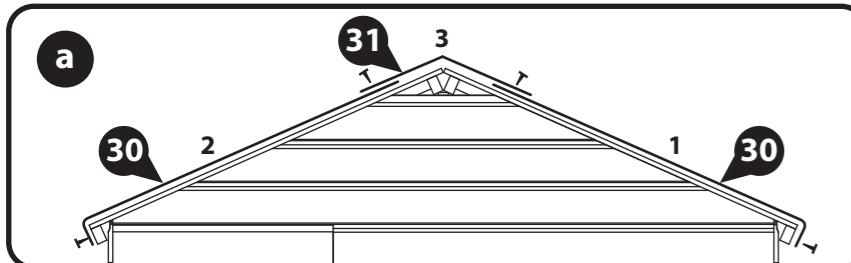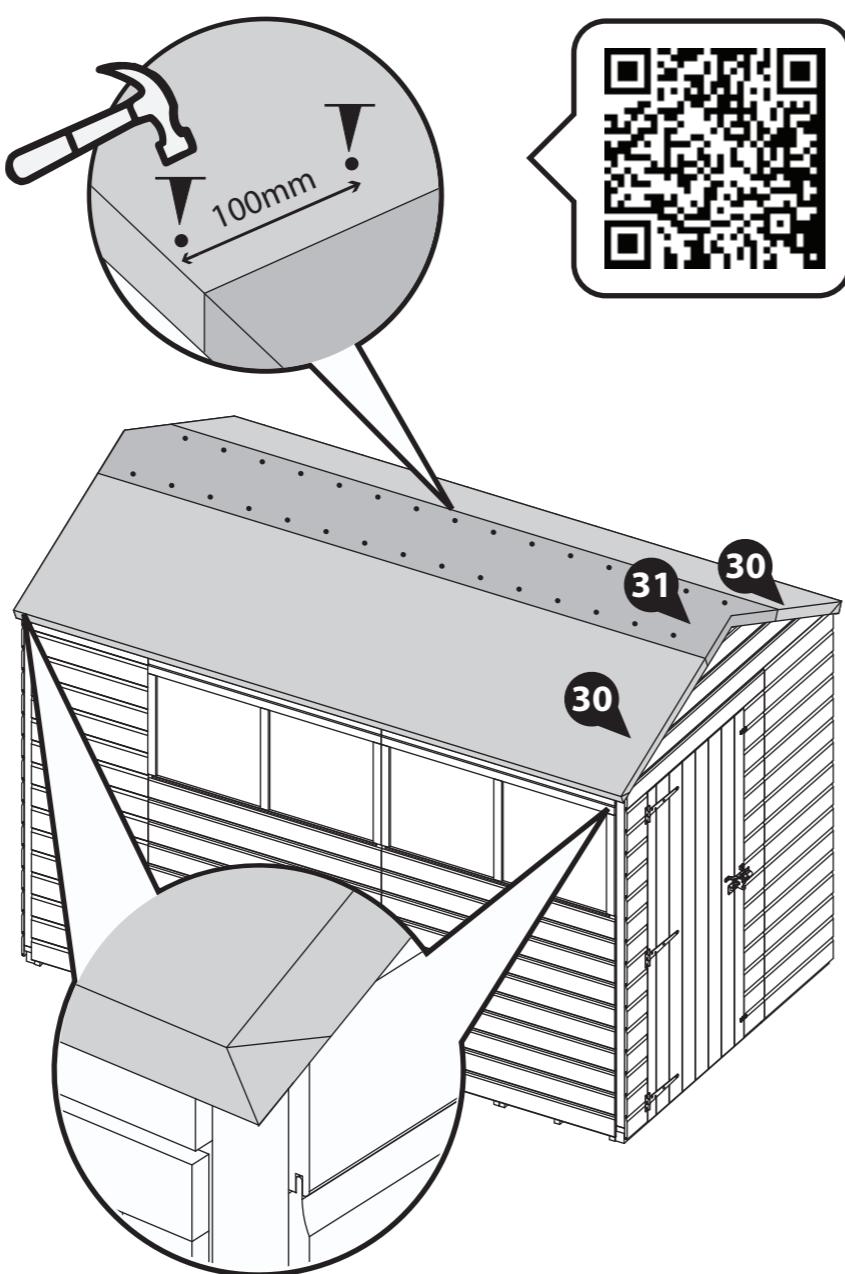

Step 29

Parts needed - No. 21 QTY 10

Please note: You have been supplied with 12 Cover Trims (No. 21) however you may not need to use them all.




- a At each corner and Panel join, use a tape measure to measure the distance from the bottom of the Panel to the underside of the Roof framing, as shown.

Mark the measurements onto the Cover Trims and cut to size if required.

- b Locate the cut down Cover Trims (No. 21), over each Panel join and corner, ensuring they sit centrally over the Panel joins and flush to the Panel cladding at the corners.

Secure the strips in place using 3x30mm screws per strip, alternating fixing into each Panel when over a join.

30x30mm Screws

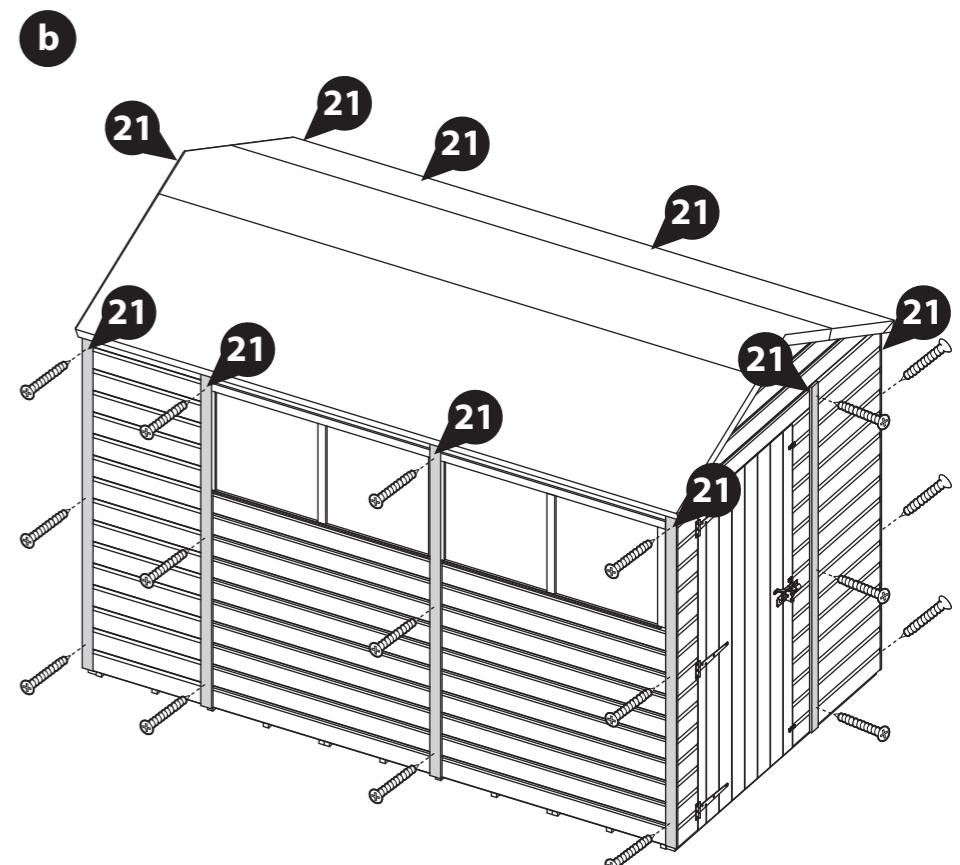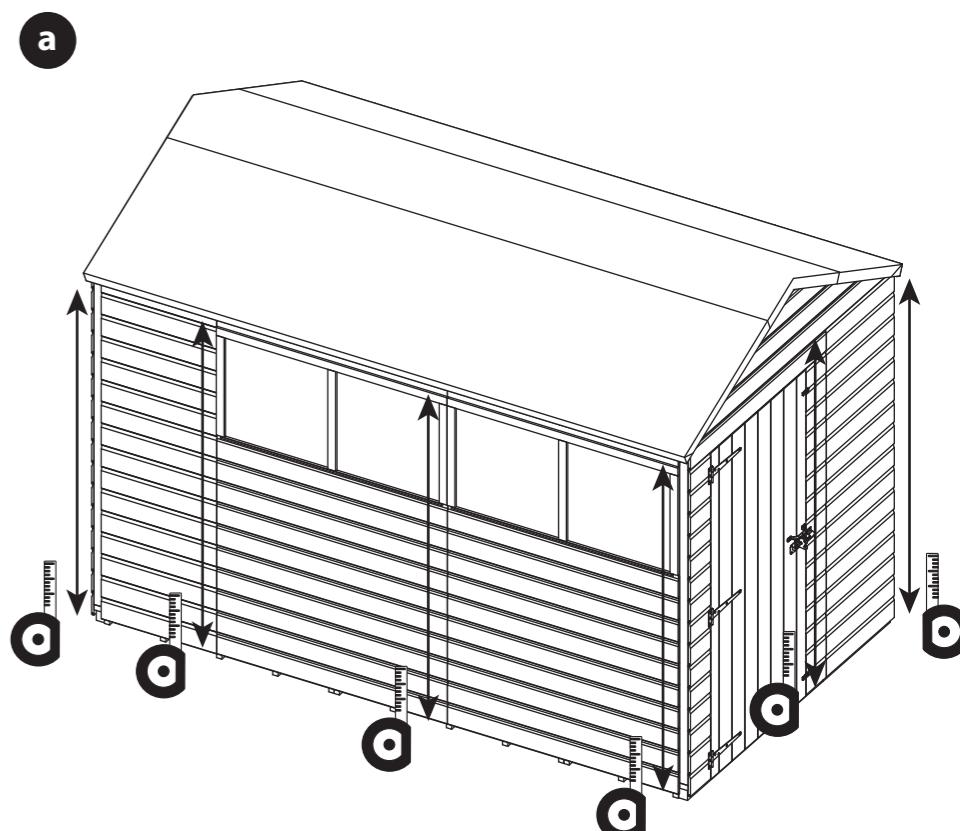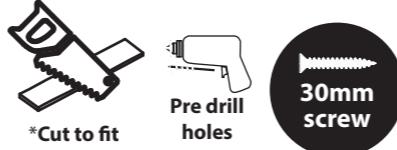

Step 30

**Parts needed - No. 22 QTY 4
No. 23 QTY 2**

- a** Locate two Fascias (**No. 22**), to each end of the building, making sure the angled ends meet at the top of the apex.

- b** The Fascias (**No. 22**) will overhang past the end of the Roofs - mark the overhang onto the Fascias using a pencil or tape.



To get a neat cut, align the pre-cut angled end of a Fascias with the mark and draw a line. Using a saw, remove the excess material.

- c** Re-position the Fascias, ensuring to trap the felt between the Roof and Fascia.



Secure the Fascias in place using 3x40mm screws.

Position the Finials (**No. 23**) on top of the Fascias at either end of the building and secure in place using 2x40mm screws per Finial.

16x40mm Screws

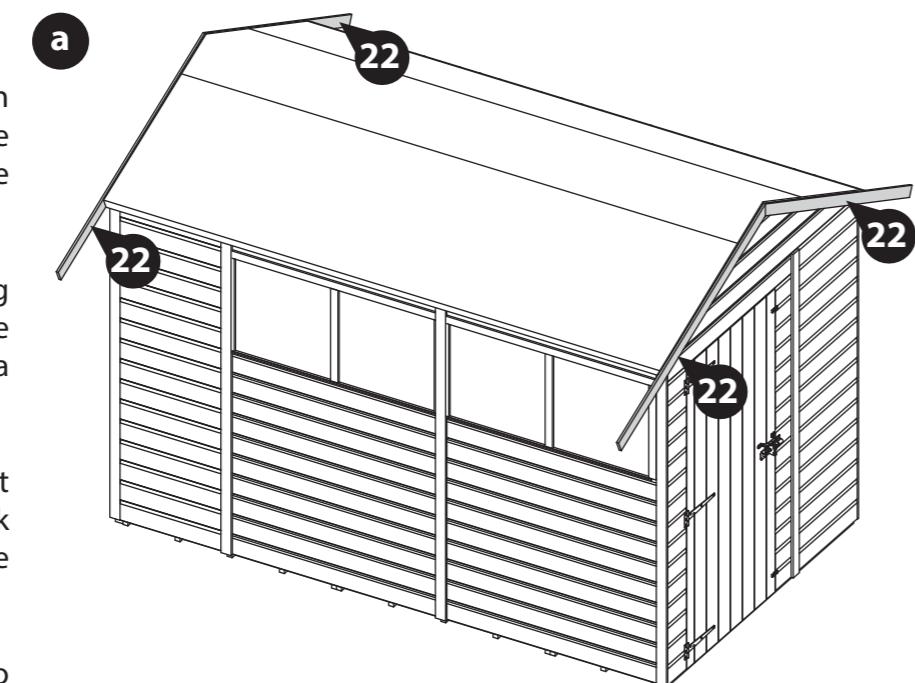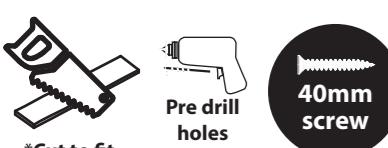

IMPORTANT: Pre-drill before fixing screws.

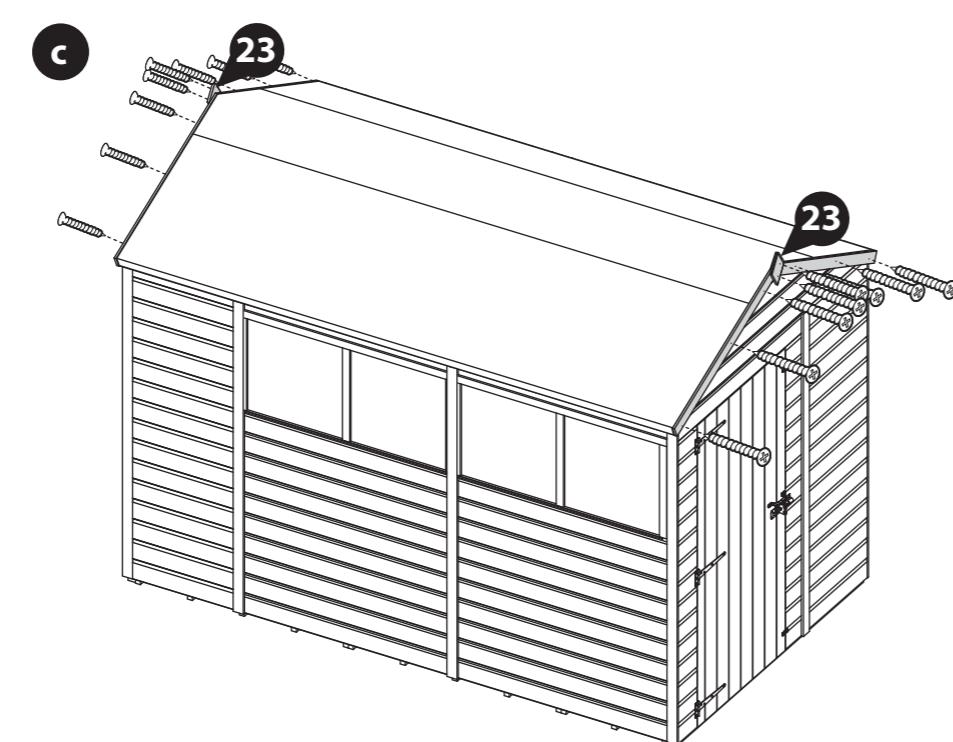
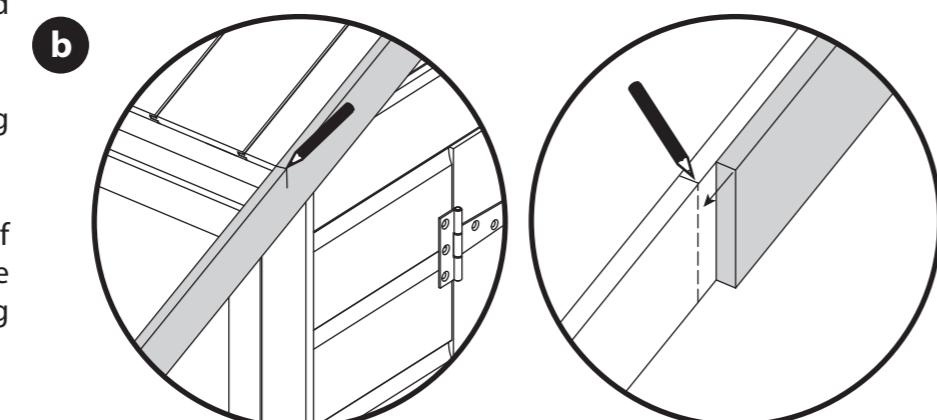


Step 31

Once constructed, apply a preserving treatment and a waterproofing treatment to your garden building as soon as possible. This will help to protect your building and prevent decay.

See page 22 for a full guide and instructions.

Once fully treated, score around the protective covers on the glazing and carefully peel the coverings back.

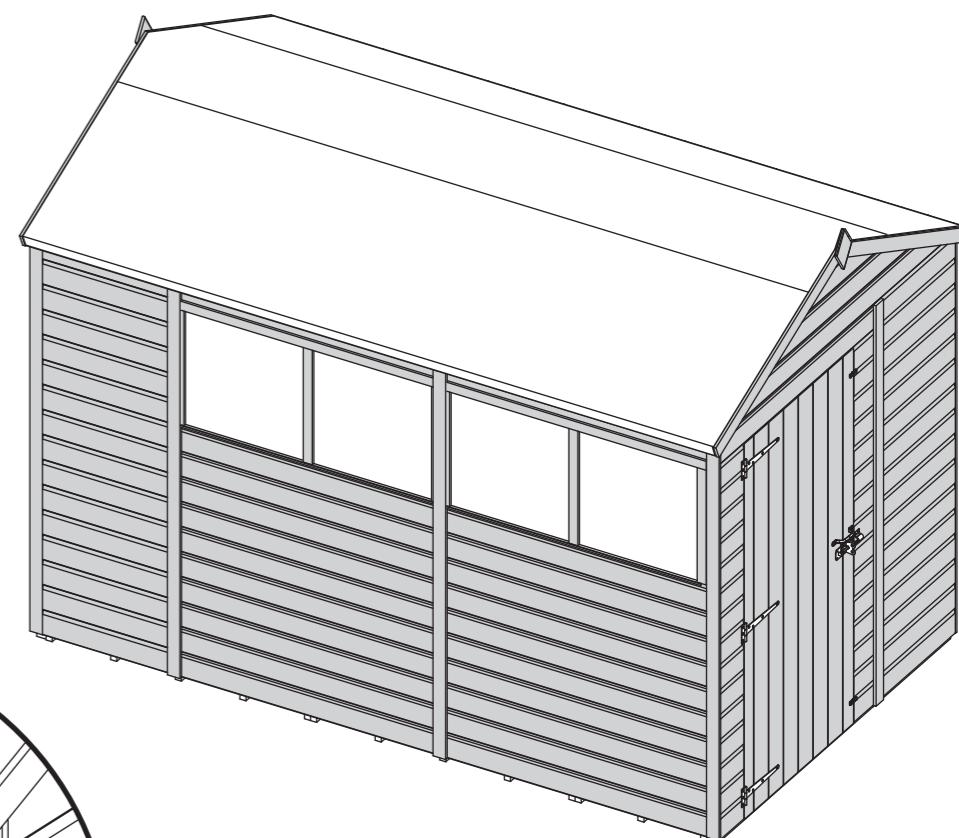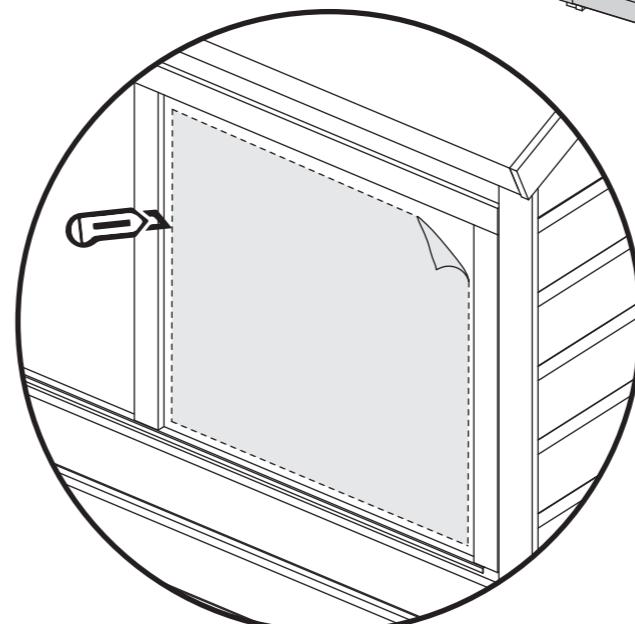

LEAVE US A REVIEW...

Want to share your experience with us?
Leave us a review on Feefo, TrustPilot or Google.



Your reviews help other people find and trust our business, as well as helping to play an important role in our growth and improvement!

RECOMMENDED MAINTENANCE

Please retain product label and instructions for future reference

1 Perimeter

Check around the perimeter of your product to ensure there are not trees or plants that are in contact with or overhanging the building. This can affect airflow and overhanging trees, or branches can damage the roof, it is advised to keep plants at a distance.

2 Repair

Inspect the interior and exterior of the product to look for splits, cracks, and holes. Although this is a natural occurrence it can be prevented. A wood filler can be used to close the splits, cracks, and holes.

3 Roof

Check your roof regularly for tears, splits, damaged wood and fallen debris. If you notice any of this immediate repair is critical.

4 Doors & Windows

Expansion and contraction can cause doors and windows to stick or become difficult to open. Small adjustments to the hinge position can be made to the doors and windows to allow free movement.

5 Oil

Hinges can seize up over time, apply lubricant to the hinges and locks annually.

6 Screws & Bolts

It is advised to check all screws and bolts and tighten any loose you might find. For log cabins specifically the storm braces will require loosening. During humidity and temperature changes (seasons) to allow expansion and contraction to prevent gaping, twisting, popping, and warping.

7 Wash

At least once a year, give the outside of your building a good wash, to remove cobwebs, leaves, or any other dirt that may accumulate on the exterior.

8 Airing

Airing your product regularly prevents the build up of condensation which can cause the timber to warp, bow, boards to pop, distortion, rot and mould. Condensation can build up over time or daily, it is caused by a rise and fall in temperature.

Excessive moisture levels within your building can cause water to collect on the roofs, walls and floors internally. Leaving doors and windows open regularly can help combat the natural moisture build up.

9 Clean & Tidy

It is good practice to clean the inside and outside of your product regularly. Clear out the contents, sweep the floor, remove dirt and cobwebs. Check for areas of damp and investigate the cause to remove and prevent future occurrences. Check the ground around your product for build up of debris such as leaves, remove and ensure there is clear ventilation underneath the floor.

Additional Playhouse Maintenance:

It is recommended that the following checks and maintenance are carried out at the beginning of each season as well as at regular intervals during the usage season.

- Check all nuts /bolts/ screws for tightness and tighten when required.
- Check for movement / opening of wood giving rise to protrusion of nail heads and tips.
- Check hinges.
- Replace defective parts in accordance with the manufacturers instructions.
- Check any crossbeams, suspensions and anchors.
- If a swing is included; check the swing seat, chains and ropes.

IF THESE CHECKS ARE NOT CARRIED OUT THE ACTIVITY TOY COULD BECOME A HAZARD

RECOMMENDED MAINTENANCE

Please retain product label and instructions for future reference

1 Perimeter

Check around the perimeter of your product to ensure there are not trees or plants that are in contact with or overhanging the building. This can affect airflow and overhanging trees, or branches can damage the roof, it is advised to keep plants at a distance.

2 Repair

Inspect the interior and exterior of the product to look for splits, cracks, and holes. Although this is a natural occurrence it can be prevented. A wood filler can be used to close the splits, cracks, and holes.

3 Roof

Check your roof regularly for tears, splits, damaged wood and fallen debris. If you notice any of this immediate repair is critical.

4 Doors & Windows

Expansion and contraction can cause doors and windows to stick or become difficult to open. Small adjustments to the hinge position can be made to the doors and windows to allow free movement.

5 Oil

Hinges can seize up over time, apply lubricant to the hinges and locks annually.

6 Screws & Bolts

It is advised to check all screws and bolts and tighten any loose you might find. For log cabins specifically the storm braces will require loosening. During humidity and temperature changes (seasons) to allow expansion and contraction to prevent gaping, twisting, popping, and warping.

7 Wash

At least once a year, give the outside of your building a good wash, to remove cobwebs, leaves, or any other dirt that may accumulate on the exterior.

8 Airing

Airing your product regularly prevents the build up of condensation which can cause the timber to warp, bow, boards to pop, distortion, rot and mould. Condensation can build up over time or daily, it is caused by a rise and fall in temperature.

Excessive moisture levels within your building can cause water to collect on the roofs, walls and floors internally. Leaving doors and windows open regularly can help combat the natural moisture build up.

9 Clean & Tidy

It is good practice to clean the inside and outside of your product regularly. Clear out the contents, sweep the floor, remove dirt and cobwebs. Check for areas of damp and investigate the cause to remove and prevent future occurrences. Check the ground around your product for build up of debris such as leaves, remove and ensure there is clear ventilation underneath the floor.

Additional Playhouse Maintenance:

It is recommended that the following checks and maintenance are carried out at the beginning of each season as well as at regular intervals during the usage season.

- Check all nuts /bolts/ screws for tightness and tighten when required.
- Check for movement / opening of wood giving rise to protrusion of nail heads and tips.
- Check hinges.
- Replace defective parts in accordance with the manufacturers instructions.
- Check any crossbeams, suspensions and anchors.
- If a swing is included; check the swing seat, chains and ropes.

IF THESE CHECKS ARE NOT CARRIED OUT THE ACTIVITY TOY COULD BECOME A HAZARD

MANUFACTURER'S RECOMMENDATIONS

Please retain product label and instructions for future reference

All our garden buildings have been designed and manufactured with care and attention to be the perfect addition to your outdoor space. To ensure you do get the best out of your new garden building and to increase the longevity we advise that you follow the product instructions and our manufacturer's recommendations as detailed below. Thank you for choosing a Mercia Garden product!

1 Choosing the most suitable location for your garden building...

A minimum of 60cm should be left around the perimeter of your garden building to allow access for maintenance, annual treatment and to allow air flow around the building.

Where possible you should avoid placing your garden building underneath large trees to prevent the tree causing damage to the building.

2 Preparing the base for your garden building...

All our buildings must be built on a firm, level base to ensure the longevity of the building and prevent the wood from distorting. We recommend either concrete, concrete slabs or a wooden base, such as our 'Portabase'.

The base should be slightly smaller than the external measurement of the building, i.e. the cladding should overlap the base, creating a run off for water and preventing water from pooling underneath the building.

We also recommend that the floor of the garden building is a minimum of 25mm above the surrounding ground level to avoid flooding.

3 After installation...

Once your garden building has been installed, it will need to be treated within 14 days (Weather permitting) and then annually to prevent the timber from deteriorating and to waterproof it. This is required to maintain the anti-rot guarantee.

Dip Treated buildings - Require a preservative treatment to protect against rot and decay and a waterproof treatment to prevent water ingress.

Pressure Treated buildings - Require a waterproof treatment to prevent water ingress.

Log Cabins/Insulated Garden Rooms - Are supplied untreated and require a preservative and waterproofing treatment.

We also recommend using a silicon sealant on the inside and outside of the windows as soon as possible after assembly and treatment to fully seal the windows.

Roofing felt/covering should be checked annually and replaced or fixed accordingly.

4

General maintenance and wood characteristics

As wood is a natural material it may be affected by the following:

Shrinkage and warping - The timber used in the construction of your garden building will have retained some of its natural moisture content. The moisture content of the timber will vary, depending upon prevailing environmental conditions, which will result in the components either naturally expanding or contracting. As the components dry out, shrinkage may occur. A good waterproofing treatment from the start is the best protection to minimise the effect of moisture loss/intake.

In extended periods of very warm weather getting some moisture to the building will help the overall balance. You can do this by spraying it down lightly with a garden hose. In contrast, after snow fall try to remove the snow as best as possible from the roof to prevent moisture intake and to remove the extra weight.

Top tip - using a garden brush will help you to reach the highest part of the building to remove snow and any debris left from bad weather.

Damp and mould - During the winter months, cold and damp conditions can result in an increased amount of moisture within your garden building, especially when used infrequently. Condensation can form on the timber and other items stored within your garden building. If left this moisture is likely to cause mould and mildew.

To prevent the build-up of moisture, we recommend leaving the door or windows of your building open from time to time, to allow the fresh air to circulate. We also advise against storing wet or damp items in your garden building as this will also increase the level of moisture in the building. If mould or mildew does start to form within your building we recommend using an anti-mould cleaner to remove it and to prevent it spreading, which if left untreated could permanently damage your garden building.

Splits, cracks and knots - You may notice small splits and cracks in some components or holes may appear where knots shrink and fall out. This will not affect the structure of your Garden building however, if you wish to fill them this can be easily done using any good quality wood filler.

Sap - is naturally occurring in wood and may appear in some boards of your garden building. If you wish to remove the sap, we advise waiting until it is dry and then using a sharp knife to carefully remove it. If the removal of the sap causes a hole in the timber, we recommend using a good quality wood filler to fill it.

Any further questions?

Contact our Customer Service Team via the MGP Customer Portal at: www.mgplogistics.co.uk



For more handy hints and tips on how to care and maintain your garden building please refer to the MGP Customer Portal at: www.mgplogistics.co.uk

WARRANTY AND GUARANTEE

Please retain product label and instructions for future reference

1 Manufacturer's Warranty

All Mercia Garden Products are supplied with a 1 year warranty on all parts against manufacturing defects. This warranty does not cover movement, warping or splitting of timber products over time.

This warranty will be voided if any of the following occur:

1. The building has been customised or modified/adapted in any way.
2. The person claiming is not the original purchaser of the building.
3. Any damage has been caused by or as a result of misuse.
4. The building has not been maintained and cared for in accordance to our advisories and manufacturer's recommendations.
5. The building has not been treated annually or as per the manufacturer's recommendations, please ensure receipts are kept to validate this claim.
6. The building has not been erected, fitted or installed as per the supplier instructions.
7. The building has not been erected on a suitable sized firm flat, solid level concrete/slab base or placed on pressure treated bearers.
8. The building is or has been placed with 2 feet (600mm) of any obstructions (walls, trees, plants, fences etc.) which can allow moisture to penetrate the timber.
9. The roofing felt has been incorrectly fitted or damaged, allowing water ingress, or has not been properly maintained.
10. Any windows and joints have not been sealed, inside and out, with silicone or other watertight sealant.
11. Any timber has been cut, pierced or drilled without subsequent application of approved cut-end treatment.

2 Anti-rot Guarantee

Mercia Garden Products offer a 15 year anti-rot guarantee on dip treated (a preparatory treatment) and 20 years on pressure treated products within this range. This guarantee covers solid timber against rot, decay, blue stain and insect attacks.

To validate the guarantee, the building must be treated (as detailed within manufacturer's recommendations) within 14 days (weather permitting) of assembly and annually thereafter. This guarantee does not cover movement, warping or splitting of timber products over time.

This guarantee will be voided if any of the following occur:

1. The building has been customised or modified/adapted in any way.
2. The person claiming is not the original purchaser of the building.
3. Any damage is caused by or as a result of misuse.
4. The building has not been maintained and cared for in accordance to our advisories and manufacturer's recommendations.
5. The building has not been treated annually or as per the manufacturer's recommendations, please ensure receipts are kept to validate this claim.
6. The building has not been erected, fitted or installed as per the supplier instructions.
7. The building has not been erected on a suitable sized firm flat, solid level concrete/slab base or placed on pressure treated bearers.
8. The building is or has been placed with 600mm of any obstructions (walls, trees, plants, fences etc.) which can allow moisture to penetrate the timber.
9. The roofing felt has been incorrectly fitted or damaged allowing water ingress, or has not been properly maintained.
10. Any windows and joints have not been sealed, inside and out, with silicone or other watertight sealant.
11. Any timber has been cut, pierced or drilled without subsequent application of approved cut-end treatment.

**REGISTER FOR YOUR
15 YEAR
ANTI-ROT
GUARANTEE TODAY**



www.mgplogistics.co.uk